


HÄFELE

คู่มือการใช้งาน เครื่องดูดควัน

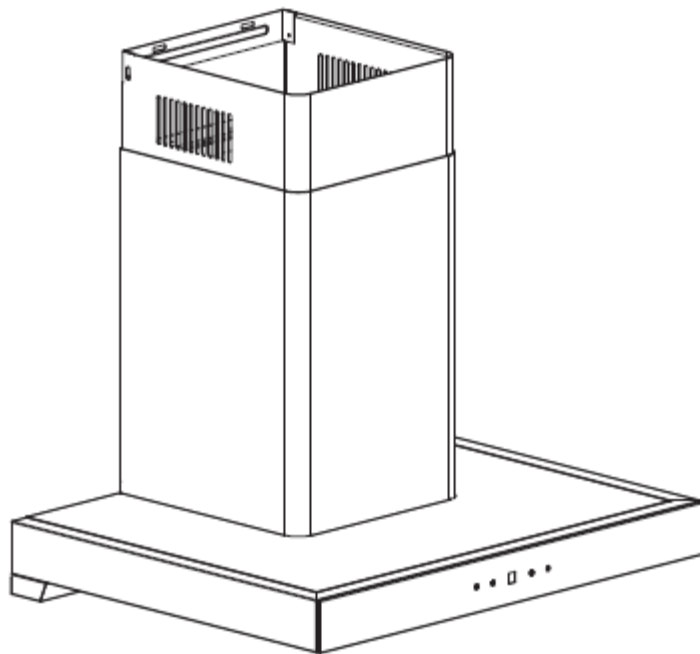

495.38.352 & 533.87.362

495.38.353 & 533.87.363

เนื้อหา

- 1.....คำแนะนำด้านความปลอดภัย
- 2.....การติดตั้ง
- 3.....เริ่มใช้เครื่องดูดควันของคุณ
- 4.....การแก้ไขปัญหา
- 5.....การบำรุงรักษาและการทำความสะอาด
- 6.....การคุ้มครองสิ่งแวดล้อม

คำแนะนำด้านความปลอดภัย

คู่มือนี้อธิบายการติดตั้งและการใช้งานเครื่องดูดควันไว้อย่างถูกต้อง โปรดอ่านให้ละเอียดก่อนใช้งาน แม้ว่า คุณจะคุ้นเคยกับผลิตภัณฑ์ก็ตาม คู่มือนี้ควรเก็บไว้ในที่ปลอดภัยเพื่อใช้อ้างอิงในอนาคต

สิ่งที่ห้ามทำ:

- อย่าพยายามใช้เครื่องดูดควันโดยไม่ใช้ตัวกรองไขมันหรือถ้าตัวกรองมีไขมันมากเกินไป!
- ห้ามติดตั้งเหนือเตาทำอาหารที่มีตะแกรงสูง
- อย่าทิ้งเตาทำอาหารไว้โดยไม่มีใครดูแลระหว่างการใช้งาน เพราะไขมันหรือน้ำมันที่ร้อนจัดอาจติดไฟได้
- ห้ามทิ้งเปลวไฟไว้ใต้เครื่องดูดควัน



- ห้ามใช้เครื่องดูดควันที่ชำรุด
- ห้ามจุดไฟใต้เครื่องดูดควัน
- ข้อควรระวัง: ส่วนที่เข้าถึงได้อาจร้อนเมื่อใช้กับอุปกรณ์ทำอาหาร
- ระยะห่างขั้นต่ำระหว่างพื้นผิวรองรับสำหรับภาชนะประกอบอาหารบนเตาและส่วนล่างสุดของเครื่องดูดควัน (เมื่อเครื่องดูดควันอยู่เหนือเตาแก๊ส ต้องมีระยะห่างอย่างน้อย 65 ซม.)
- ต้องไม่ปล่อยอากาศที่มาจากเตาแก๊สหรือเชื้อเพลิงอื่นๆออกไปสู่ปล่องควันที่ใช้สำหรับดูดควันในการประกอบอาหาร เพราะอาจไม่ปลอดภัยปลอดภัย เนื่องจากการไหลย้อนกลับของก๊าซเผาไหม้ซึ่ง ก๊าซเหล่านี้อาจส่งผลให้เกิดพิษคาร์บอนมอนอกไซด์

หลังการติดตั้งเครื่องดูดควันสำหรับประกอบอาหาร ควรทดสอบการทำงานของแก๊สโดยผู้ที่เชี่ยวชาญเพื่อให้แน่ใจว่าจะไม่เกิดการไหลย้อนกลับของการเผาไหม้ของแก๊ส



สิ่งที่ต้องทำเสมอ:

- สำคัญ! ปิดแหล่งจ่ายไฟหลักเสมอระหว่างการติดตั้งและบำรุงรักษา เช่น การเปลี่ยนหลอดไฟ
- ต้องติดตั้งเครื่องดูดควันตามคำแนะนำในการติดตั้งและปฏิบัติตามมาตรฐานทั้งหมด
- งานติดตั้งทั้งหมดต้องดำเนินการโดยผู้มีความชำนาญหรือช่างไฟฟ้าที่มีคุณสมบัติเหมาะสม
- กรุณาทิ้งวัสดุบรรจุภัณฑ์อย่างระมัดระวัง เด็กมีความเสี่ยงต่อเรื่องนี้
- ระวังขอบที่แหลมคมภายในเครื่องดูดควัน โดยเฉพาะระหว่างการติดตั้งและทำความสะอาด
- ตรวจสอบให้แน่ใจว่าท่อไม่มีส่วนโค้งมากกว่า 90 องศาเนื่องจากจะทำให้ประสิทธิภาพของเครื่องดูดควันลดลง
- คำเตือน: การไม่ใส่สกรูหรืออุปกรณ์ยึดตามคำแนะนำเหล่านี้อาจส่งผลให้เกิดอันตรายจากไฟฟ้าได้
- คำเตือน: จะต้องตัดการเชื่อมต่อวงจรไฟฟ้าทั้งหมดก่อนที่จะถึงตัวขับเคลื่อนสายไฟ

สิ่งที่ต้องทำเสมอ:

- ปิดฝามือและกระทะเสมอเมื่อปรุงอาหารด้วยเตาแก๊ส
- เมื่ออยู่ในโหมดดูดอากาศ เครื่องดูดควันจะดูดอากาศในห้องออก โปรดตรวจสอบให้แน่ใจว่าได้ปฏิบัติตามมาตรการการระบายอากาศที่ถูกต้อง เครื่องดูดควันช่วยขจัดกลิ่นไม่พึงประสงค์จากห้องแต่ไม่กำจัดไอน้ำ
- ต้องมีการระบายอากาศที่เพียงพอในห้องเมื่อใช้เครื่องดูดควันพร้อมกับอุปกรณ์ที่ใช้ก๊าซหรือเชื้อเพลิงอื่นๆ
- เครื่องดูดควันสำหรับใช้ในบ้านเท่านั้น



- หากสายไฟชำรุด ต้องเปลี่ยนโดยผู้ผลิต ตัวแทนบริการ หรือบุคคลที่มีคุณสมบัติใกล้เคียงกัน เพื่อหลีกเลี่ยงอันตราย
- อุปกรณ์นี้สามารถใช้ได้กับเด็กอายุตั้งแต่ 8 ปีขึ้นไปและผู้ที่มีความบกพร่องทางร่างกาย ประสาทสัมผัส หรือจิตใจ หรือขาดประสบการณ์และความรู้ หากได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้เครื่องอย่างปลอดภัยและเข้าใจ อันตรายที่เกี่ยวข้อง ห้ามเด็กเล่นเครื่อง ห้ามเด็กไม่ให้ทำความสะอาดและบำรุงรักษาผู้ใช้โดยไม่ได้รับการดูแล



สิ่งที่ต้องทำเสมอ:

- ข้อควรระวัง: เครื่องและชิ้นส่วนที่เข้าถึงได้อาจเกิดความร้อนระหว่างการใช้งาน ระวังอย่าสัมผัสตัวทำความร้อน เด็กที่อายุน้อยกว่า 8 ปี ควรอยู่ห่าง ๆ เว้นแต่จะอยู่ภายใต้การดูแลอย่างใกล้ชิด
- มีความเสี่ยงจากไฟไหม้หากไม่ปฏิบัติตามคำแนะนำ
- ต้องปฏิบัติตามข้อกำหนดเกี่ยวกับการปล่อยอากาศ
- ทำความสะอาดเครื่องใช้ไฟฟ้าของคุณเป็นประจำโดยปฏิบัติตามวิธีที่ระบุไว้ในข้อการบำรุงรักษา
- เพื่อความปลอดภัย โปรดใช้เฉพาะสกรูยึดที่มีขนาดเท่ากันกับที่แนะนำในคู่มือการใช้งานนี้
- สำหรับรายละเอียดเกี่ยวกับวิธีและความถี่ในการทำความสะอาด โปรดดูในหัวข้อการบำรุงรักษาและการทำความสะอาดในคู่มือการใช้งาน
- ไม่อนุญาตให้เด็กทำความสะอาดและบำรุงรักษาโดยไม่ได้รับการดูแล
- เมื่อเครื่องดูดควันและเครื่องใช้ที่ให้พลังงานอื่นนอกเหนือจากเครื่องใช้ไฟฟ้าเมื่อทำงานพร้อมกัน แรงดันลบในห้องต้องไม่เกิน 4 Pa (4×10^{-5} บาร์)
- คำเตือน: อันตรายจากไฟไหม้: อย่าเก็บสิ่งของไว้บนพื้นผิวการทำอาหาร
- ห้ามใช้เครื่องพ่นไอน้ำ
- อย่าพยายามดับไฟด้วยน้ำ แต่ให้ปิดเครื่องแล้วปิดเปลวไฟ เช่น ใช้ผ้าปิดหรือผ้าห่มกันไฟ


การติดตั้ง (ช่องระบายอากาศภายนอก)

การติด V-FLAP

ถ้าเครื่องดูดควันไม่มี V-flap (1) ประกอบอยู่ในตัวเครื่อง ให้ติดครึ่งส่วนของแผ่น V-flap เข้ากับตัวเครื่อง รูปภาพแสดงเฉพาะตัวอย่างวิธีการติด V-flap เนื่องจากช่องระบายอาจแตกต่างกันไปตามรุ่นและการกำหนดค่าที่แตกต่างกัน


ในการติดตั้ง V-flap (1) คุณควร:

- ติดครึ่งส่วนทั้งสองข้าง (2) เข้ากับตัวเครื่อง (6);
- ให้สลัก (3) อยู่ด้านบน;
- ใส่แกน (4) เข้าไปในรู (5) บนตัวเครื่อง;
- ทำซ้ำทั้งหมดสำหรับครึ่งส่วนหลัง

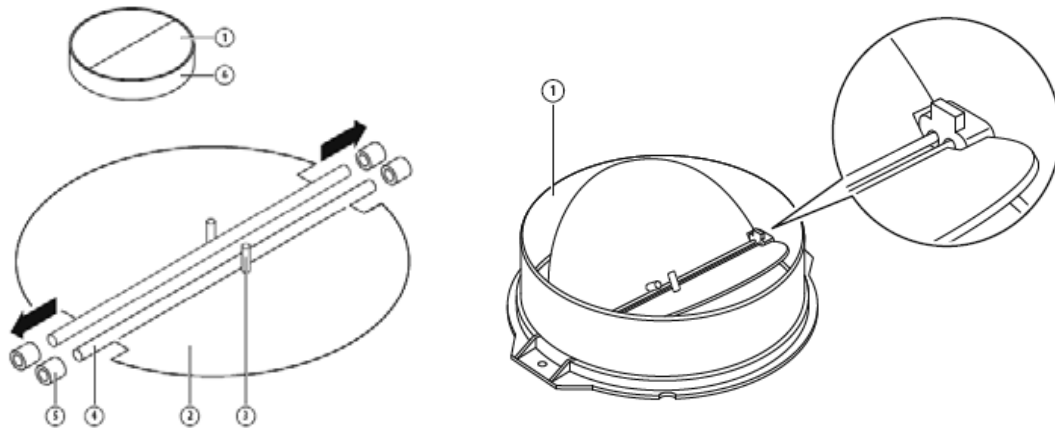


การติดตั้ง


หากคุณมีช่องระบายอากาศภายนอก สามารถต่อเครื่องดูดควันได้ดังภาพด้านล่างโดยใช้ท่อดูด (เป็นวัสดุเคลือบอะลูมิเนียม ท่อ หรือวัสดุไม่ติดไฟที่มีเส้นผ่านศูนย์กลางภายใน 150 มม และระยะระหว่างเครื่องดูดควันถึงผนังไม่ควรเกิน 2 เมตร

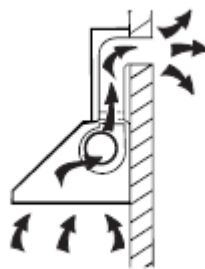


1. ก่อนการติดตั้ง ให้ปิดเครื่องและถอดปลั๊กออกจากเต้ารับ

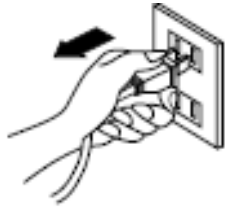

2. ควรวางเครื่องดูดควันที่ระยะ 65~75 ซม. เหนือพื้นผิวการทำอาหารเพื่อให้ได้ผลลัพธ์ที่ดีที่สุด ดูรูปที่ 1

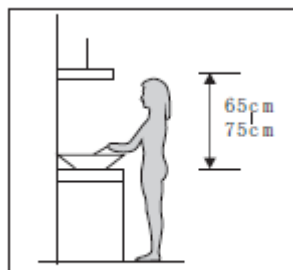


รูปที่ 1

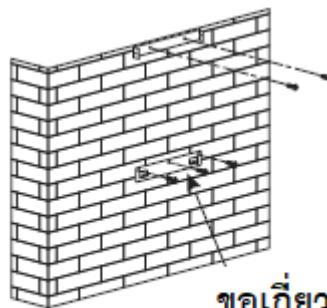

รูปที่ 2

3. ติดขอเกี่ยวในตำแหน่งที่เหมาะสมที่ความสูงกำหนดไว้และจัดให้อยู่ในแนวเดียวกันกับปล่องด้านหลังนอกซึ่งเป็นตำแหน่งสูงสุดของปล่องไฟ ดูรูปที่ 2


4. ติดแผ่นปิด V-flap และวางท่อต่อขยายเข้ากับช่องระบาย ยึดท่อต่อขยายด้วยสายรัดสายไฟที่ช่องระบาย และวางเครื่องดูดควันเข้ากับขอเกี่ยว ดูรูปที่ 3

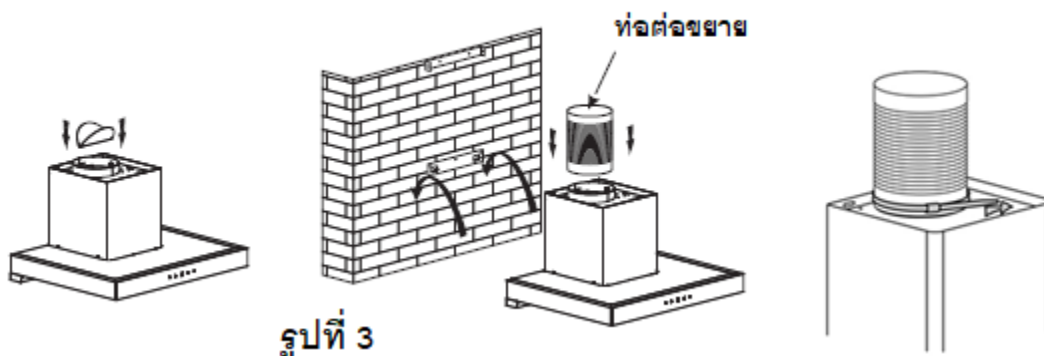

รูปที่ 3

5. ติดแท่นรองรับบนปล่องด้านนอกด้วยสกรู ST4*8 มม. 2 ชั้น ใส่ปล่องบนเครื่องดูดควันและเอาท่อขยายออกไปด้านนอก จากนั้นยึดตัวเครื่องด้วยสกรู ST4 * 30 มม. 2 ชั้น หมายเหตุ: ช่องระบายอากาศทั้งสองช่องให้อยู่ด้านหลัง โดยมีเส้นผ่านศูนย์กลาง 6 มม. ดูรูปที่ 4


6. ปรับความสูงของปล่องด้านในให้อยู่ในตำแหน่งเท่ากับแท่นรองรับด้านในแล้วยึดด้วยสกรูขนาด ST4*8 มม. 2 ชั้น หลังจากปรับตำแหน่งแล้ว ให้ยึดเครื่องด้วยสกรูนิรภัย ดูรูปที่ 4 & 5

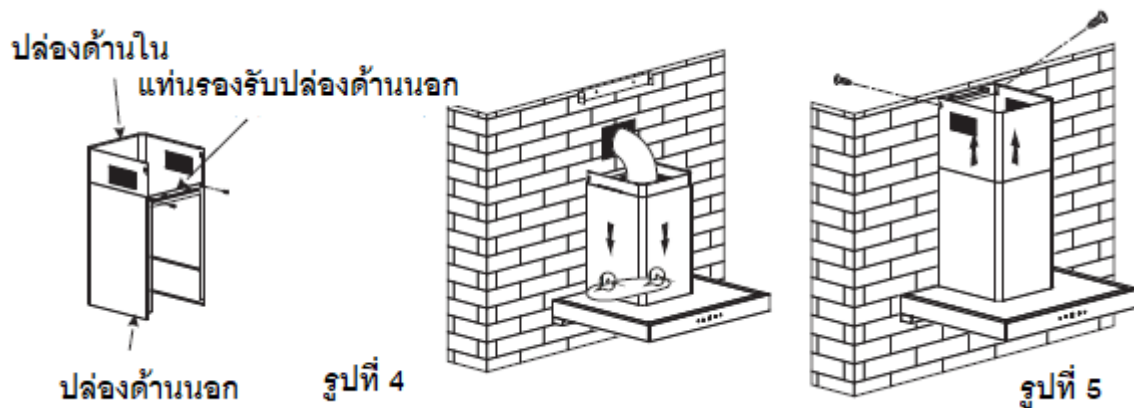

คำแนะนำสำหรับการติดตั้งท่อไอเสีย

ต้องปฏิบัติตามกฎต่อไปนี้อย่างเคร่งครัดเพื่อให้ได้การแยกอากาศได้อย่างเหมาะสม:


- ให้ท่อต่อขยายให้สั้นและตรง
- ห้ามลดขนาดหรือจำกัดท่อต่อขยาย
- เมื่อใช้ท่อต่อขยาย ให้ติดตั้งท่อตั้งให้ตั้งเสมอเพื่อลดการสูญเสียแรงดัน
- การไม่ปฏิบัติตามคำแนะนำพื้นฐานเหล่านี้จะลดประสิทธิภาพการทำงานและเพิ่มระดับเสียงของเครื่องดูดควัน
- งานติดตั้งใด ๆ จะต้องดำเนินการโดยช่างไฟฟ้าที่มีคุณสมบัติหรือผู้มีความชำนาญ
- ห้ามต่อระบบท่อของเครื่องดูดควันกับระบบระบายอากาศที่มีอยู่ซึ่งใช้สำหรับอุปกรณ์อื่นๆ เช่น ท่ออุ่น ท่อแก๊ส ท่อลมร้อน
- มุมโค้งของท่อขยายไม่ควรน้อยกว่า 120° คุณต้องกำหนดทิศทางท่อในแนวนอนหรืออีกทางหนึ่งซึ่งท่อควรสูงขึ้นจากจุดเริ่มต้นและควรถูกนำไปไว้ที่ผนังด้านนอก
- หลังการติดตั้ง ต้องตรวจสอบให้แน่ใจว่าเครื่องดูดควันอยู่ระดับที่สามารถหลีกเลี่ยงการสะสมไขมันที่ปลายท่อ
- ตรวจสอบให้แน่ใจว่าได้เลือกท่อขยายสำหรับการติดตั้งให้เป็นไปตามมาตรฐานที่เกี่ยวข้องและมีคุณสมบัติทนไฟ

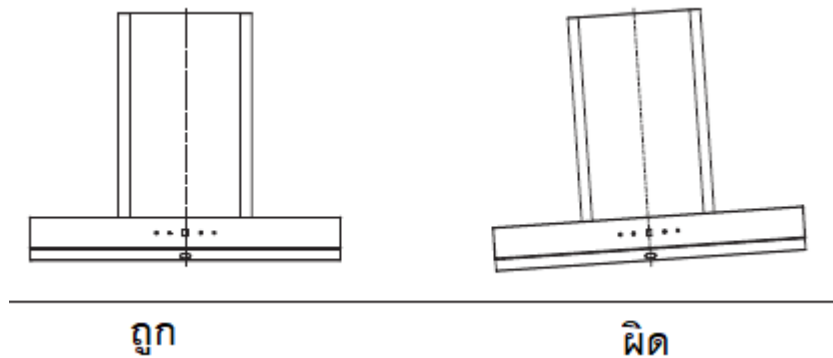

คำเตือน 	➤ เพื่อความปลอดภัย โปรดใช้เฉพาะสกรูยึดที่มีขนาดเท่ากับคำแนะนำในคู่มือการใช้งานนี้ ➤ การไม่ได้ใช้สกรูหรืออุปกรณ์ติดตั้งตามคำแนะนำอาจส่งผลให้เกิดอันตรายจากไฟฟ้าได้
--	--

เริ่มใช้เครื่องดูดควันของคุณ

ระบบควบคุมแบบสัมผัสพร้อมจอแสดงผล LED



ระบบควบคุมแบบสัมผัส LED มีปุ่ม 4 ปุ่มและเซ็นเซอร์ 2 ตัว ดูภาพ  (ตัวตั้งเวลา),  (หลอดไฟ),  (ความเร็ว),  (เปิด/ปิด)

1. เปิดเครื่อง: หลังจากเชื่อมต่อเครื่องดูดควันกับแหล่งจ่ายไฟหลักแล้ว ไฟแสดงสถานะของปุ่มทั้งหมดจะเปิดขึ้นและเสียงกริ่งจะดังขึ้นหนึ่งครั้ง จอแสดงผล LED ปิดอยู่ เครื่องดูดควันไม่ทำงานและเข้าสู่โหมดสแตนด์บาย

2.  ปุ่ม (เปิด/ปิด) :

2.1 กดปุ่ม  (เปิด/ปิด) ฝาหน้าเครื่องดูดควันจะเปิดขึ้น ไฟปุ่มนี้จะสว่างขึ้นเครื่องดูดควันจะทำงานที่ความเร็วต่ำ ไฟจะเปิดที่ ปุ่ม  (ความเร็ว) และ  (หลอดไฟ) และถ้ากดปุ่ม (เปิด/ปิด) อีกครั้งฝาครอบด้านหน้าของเครื่องดูดควันจะปิดลง ไฟแสดงสถานะจะดับลงและเครื่องดูดควันจะปิดฟังก์ชันทั้งหมดจะปิดลง การทำงานของฟังก์ชันความเร็วของเครื่องดูดควันสามารถทำได้เมื่อเปิดฝาครอบเท่านั้น

3. ปุ่ม(หลอดไฟ):

3.1 กด  ปุ่ม (หลอดไฟ) ไฟแสดงสถานะจะสว่างขึ้น กดอีกครั้งไฟแสดงสถานะของปุ่มหลอดไฟจะดับลง ขั้นตอนข้างต้นสามารถดำเนินการซ้ำได้

3.2 ปุ่ม  (หลอดไฟ) สามารถทำงานแยกกันได้โดยไม่ต้องเปิดฝาครอบด้านหน้าเครื่องดูควัน

4. ปุ่ม (ความเร็ว):

เครื่องดูควันมีความเร็วสามระดับ คือ ต่ำ กลาง สูง และจอแสดงผล LED ที่สอดคล้องกันจะเป็น “1”, “2”, “3”

4.1 หลังจากเปิดเครื่องโดยปุ่มเปิดปิด เครื่องดูควันจะเริ่มทำงานที่ความเร็วต่ำและจอแสดงผล LED จะแสดง “1”

4.2 กดปุ่ม  (ความเร็ว) อีกครั้งเมื่อทำงานที่ความเร็วต่ำ เครื่องดูควันจะทำงานที่ความเร็วปานกลาง และหน้าจอ LED จะแสดงเป็น “2”

4.3 กดปุ่ม  (ความเร็ว) อีกครั้งเมื่อทำงานที่ความเร็วปานกลาง เครื่องดูควันที่ความเร็วสูงและจอแสดงผล LED จะแสดง “3”

4.4 ระหว่างการทำงาน คุณสามารถแตะปุ่ม  (ความเร็ว) เพื่อเปลี่ยนความเร็วเป็นวงกลม: “ต่ำ→ปานกลาง→สูง→ต่ำ→ปานกลาง.....”

5. ปุ่ม (ตัวตั้งเวลา):

ปุ่มตั้งเวลาใช้สำหรับฟังก์ชันตั้งเวลาเมื่อเครื่องดูควันกำลังทำงานเท่านั้น การกดปุ่มจะใช้งานไม่ได้เมื่อเครื่องดูควันอยู่ในโหมดสแตนด์บายหรือ ปิดไฟแยกกัน

5.1 กดปุ่ม  ตั้งเวลาหนึ่งครั้งเพื่อเข้าสู่ฟังก์ชันตั้งเวลา การตั้งเวลาคือ 9 นาที หน้าจอจะแสดง “9” หน้าจอ LED จะแสดง 9.8.7.... ลดลงหนึ่งนาที เมื่อหมดเวลาเครื่องดูควันจะปิดโดยอัตโนมัติ และจอแสดงผลจะปิดด้วย ในขณะเดียวกันไฟก็จะดับลง

5.2 หลังจากการตั้งเวลาเสร็จสิ้น ไฟแสดงสถานะของปุ่มเปิด/ปิดจะสว่างและฝาครอบด้านหน้าของเครื่องดูควันยังคงเปิดอยู่

5.3 กดปุ่มตั้งเวลาหนึ่งครั้ง เครื่องดูควันจะเข้าสู่ฟังก์ชันตั้งเวลา กดอีกครั้ง เครื่องดูควันจะออกจากฟังก์ชันนี้ ขั้นตอนข้างต้นสามารถดำเนินการซ้ำได้ กดปุ่มความเร็วเมื่อเครื่องดูควันอยู่ในสถานะจับเวลา มันจะออกจากฟังก์ชันจับเวลาโดยอัตโนมัติ

6. โหมดเซ็นเซอร์ท่าทางสัมผัส:

6.1 โบกมือจากซ้ายไปขวาหนึ่งครั้งภายในระยะ 8 ซม. จากด้านหน้าของเซ็นเซอร์ จากนั้นฝาครอบด้านหน้าของเครื่องดูควันจะเปิดขึ้น เครื่องดูควันจะเริ่มทำงานที่ความเร็วต่ำและหน้าจอ LED จะแสดงเลข “1” ไฟจะสว่างขึ้น ไฟแสดงสถานะของปุ่ม  (ความเร็ว) ปุ่ม  (หลอดไฟ) และปุ่ม  (เปิด/ปิด) จะสว่างขึ้น โบกมือจากซ้ายไปขวาอีกครั้ง เครื่องดูควันทำงานที่ความเร็วปานกลางและจอแสดงผล LED จะแสดงเลข “2” โบกมือของคุณไปในทิศทางเดียวกับด้านบนอีกครั้งเครื่องดูควันจะทำงานด้วยความเร็วสูง และจอแสดงผล LED จะแสดงเลข “3” โบกมือในลักษณะ เดิมอีกครั้งเมื่อเครื่องดูควันทำงานที่ความเร็วสูงสุด เครื่องดูควันจะทำงานด้วยความเร็วเท่าเดิม

6.2 การโบกมือจากขวาไปซ้าย 1 ครั้ง เครื่องดูดควันจะเลื่อนไปที่ความเร็วที่ต่ำลง โบกมือจากขวาไปซ้ายเมื่อเครื่องดูดควันทำงานด้วยความเร็วสูงก็จะเปลี่ยนเป็นความเร็วปานกลาง ไฟแสดงสถานะของปุ่ม  (ความเร็ว) ปุ่ม  (หลอดไฟ) และปุ่ม  (เปิด/ปิด) จะสว่างขึ้น โบกมือจากขวาไปซ้ายเมื่อเครื่องดูดควันทำงานที่ความเร็วปานกลางก็จะเปลี่ยนเป็นความเร็วต่ำ จอแสดงผล LED จะแสดงระดับความเร็วปัจจุบัน หากลดความเร็วไปเรื่อย ๆ ไฟแสดงสถานะจะดับลง ฝาครอบด้านหน้าจะปิดลง และการทำงานของฟังก์ชันทั้งหมดของเครื่องดูดควันจะปิดลง และจะเข้าสู่โหมดสแตนด์บาย ขั้นตอนข้างต้นสามารถดำเนินการซ้ำได้

6.3 หากไม่มีการใช้งานปุ่มการทำงานใดๆ เซ็นเซอร์ท่าทางสัมผัสจะเข้าสู่โหมดสลีปหลังจาก 10 นาที ใช้ฟังก์ชันท่าทางสัมผัสอีกครั้งต้องใช้ปุ่มฟังก์ชันอื่น แบบแมนนวล ฟังก์ชันท่าทางจะใช้งานได้เฉพาะเมื่อเปิดใช้งานแล้วเท่านั้น

การแก้ไขปัญหา

ข้อผิดพลาด	สาเหตุ	การแก้ปัญหา
ไฟติดแต่มอเตอร์ไม่ทำงาน	สวิตช์พัลลัมปิด	เลือกตำแหน่งสวิตช์พัลลัม
	สวิตช์พัลลัมเสีย	ติดต่อฝ่ายบริการลูกค้า
	มอเตอร์เสีย	ติดต่อฝ่ายบริการลูกค้า
ไฟไม่ทำงาน มอเตอร์ไม่ทำงาน	ฟิวส์ขาด	ตั้งค่าใหม่/เปลี่ยนฟิวส์
	สายไฟหลักหลวมหรือถูกตัดการเชื่อมต่อ	ติดตั้งสายไฟหลักเข้ากับเต้ารับไฟฟ้าแล้วเปิดสวิตช์
น้ำมันรั่ว	ทางออกวาล์วทางเดียวปิดไม่สนิท	ถอดวาล์วทางเดียวแล้ว ซึ่ลรั่ว
	รั่วจากการต่อปล่องและฝาปิด	รีบปล่องไฟลงและซีลปิด
ไฟไม่ทำงาน	หลอดไฟแตกหรือชำรุด	เปลี่ยนหลอดไฟตามคำแนะนำ
แรงดูดควันไม่เพียงพอ	ระยะห่างระหว่างเครื่องดูดควันกับเตาแก๊สอยู่ไกลเกินไป	ปรับเครื่องดูดควันให้อยู่ในระยะห่างที่ถูกต้อง
เครื่องดูดควันเอียง	สกรูยึดไม่แน่นพอ	ขันสกรูแขวนให้แน่นและทำให้เป็นแนวนอน


บันทึก



การซ่อมอุปกรณ์ไฟฟ้าใดๆ กับอุปกรณ์นี้ต้องเป็นไปตามกฎหมายท้องถิ่นของคุณ โปรดติดต่อศูนย์บริการหากมีข้อสงสัยก่อนที่จะดำเนินการใด ๆ ข้างต้น ถอดอุปกรณ์ออกจากแหล่งพลังงานเสมอเมื่อเปิดเครื่อง

การบำรุงรักษาและการทำความสะอาด

- ก่อนดำเนินการบำรุงรักษาหรือทำความสะอาด ควรถอดปลั๊กเครื่องดูดควันออกจากแหล่งจ่ายไฟหลัก ตรวจสอบให้แน่ใจว่าได้ปิดสวิตช์เครื่องดูดควันที่ตัวรับบนผนังและได้ถอดปลั๊กออกแล้ว

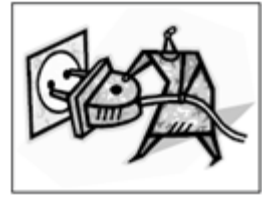

- พื้นผิวภายนอกไวต์ออยล์ซีดขุ่นและรอยถลอก ดังนั้นโปรดปฏิบัติตามคำแนะนำในการทำความสะอาดเพื่อให้แน่ใจว่าจะได้ผลลัพธ์ที่ดีที่สุดโดยไม่เกิดความเสียหาย

คำแนะนำทั่วไป

ควรทำความสะอาดและบำรุงรักษาเมื่อเครื่องเย็นลงแล้ว หลีกเลี่ยงการทิ้งสารที่เป็นด่างหรือกรด (น้ำมะนาว น้ำส้มสายชู ฯลฯ) ไว้บนพื้นผิว

สแตนเลส

ต้องทำความสะอาดสแตนเลสเป็นประจำ (เช่น รายสัปดาห์) เพื่อให้แน่ใจว่าจะมีอายุการใช้งานยาวนาน เช็ดให้แห้งด้วยผ้านุ่มที่สะอาด อาจใช้น้ำยาทำความสะอาดสแตนเลสชนิดพิเศษ

บันทึก:

ให้แน่ใจว่าเช็ดรอยขีดข่วนบนสแตนเลสเรียบร้อยแล้ว เพื่อป้องกันไม่ให้เกิดรอยขีดข่วนที่ไม่น่าดูปรากฏขึ้น

พื้นผิวแผงควบคุม

แผงควบคุมแบบฝังสามารถทำความสะอาดได้โดยใช้น้ำสบู่อุ่น ตรวจสอบให้แน่ใจว่าผ้าสะอาดและบิดให้หมาดก่อนทำความสะอาด ใช้ผ้านุ่มแห้งเช็ดความชื้นส่วนเกินที่เหลือหลังจากทำความสะอาด

สิ่งสำคัญ


ใช้น้ำทำความสะอาดที่เป็นกลางและหลีกเลี่ยงการใช้สารเคมีที่ฤทธิ์รุนแรงในการทำความสะอาด น้ำยาทำความสะอาดที่มีความเข้มข้นหรือผลิตภัณฑ์ที่มีสารกัดกร่อนจะส่งผลต่อรูปลักษณ์ของอุปกรณ์และอาจลบการตัวหนังสือหรือสัญลักษณ์บนแผงควบคุมออก และจะทำให้การรับประกันของสินค้าเป็นโมฆะ

ถ้วยน้ำมัน

- เครื่องดูดควันของคุณมีถ้วยน้ำมันที่ไม่เหมือนใครซึ่งจะรวบรวมน้ำมันที่สะสมอยู่บนตัวกรองไขมัน
- เมื่อถ้วยน้ำมันเต็มประมาณ 2/3 จะต้องทำความสะอาดถ้วยน้ำมัน
- ถอดถ้วยน้ำมันออกแล้วดึงถ้วยน้ำมันไปข้างหน้าเล็กน้อยเพื่อปลดออกจากเครื่องดูดควัน
- ทิ้งน้ำมันก่อนทำความสะอาดหรือล้างถ้วย
- ตรวจสอบให้แน่ใจว่าได้ทำความสะอาดถ้วยและทำให้แห้งก่อนที่จะประกอบเข้ากับเครื่องดูดควัน

ตัวกรองตาข่ายดักไขมัน

ตัวกรองตาข่ายสามารถทำความสะอาดได้ด้วยมือ แช่ไว้ประมาณ 3 นาทีในน้ำกับน้ำยาทำความสะอาดอ่อนๆ แล้วแปรงเบาๆ ด้วยแปรงขนนุ่ม อย่าออกแรงกดมากเกินไปเพื่อหลีกเลี่ยงความเสียหาย (ปล่อยให้แห้งตามธรรมชาติจากแสงแดดโดยตรง) ควรล้างแผ่นกรองแยกจากถ้วยชาและเครื่องใช้ในครัว ไม่แนะนำให้ใช้น้ำยาเคลือบแข็งอุปกรณ์ (rinse aid) ดูภาพด้านล่างเพื่อถอดตัวกรองตาข่ายดักไขมัน

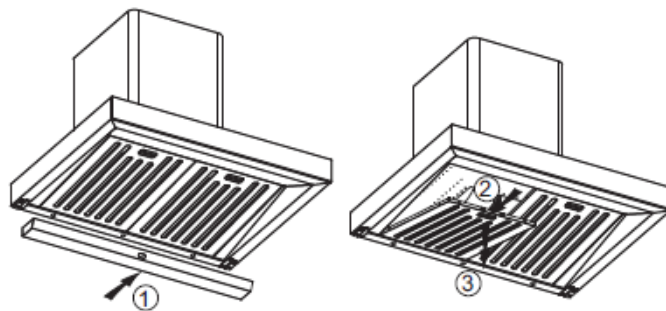


การติดตั้งตัวกรองตาข่ายดักไขมัน

- ในการติดตั้งตัวกรองมีสี่ขั้นตอนต่อไปนี้
- ปรับมุมตัวกรองให้เข้าไปในช่องด้านหลังของเครื่องดูดควัน
- กดปุ่มที่ด้ามจับของตัวกรอง
- ปลดปล่อยที่จับเมื่อตัวกรองพอดีกับตำแหน่งพัก
- ทำซ้ำเพื่อติดตั้งตัวกรองทั้งหมด

ไส้กรองคาร์บอน

สามารถใช้ไส้กรองเพื่อดักจับกลิ่น โดยปกติควรเปลี่ยนไส้กรองทุก 3 ถึง 6 เดือนตามพฤติกรรมการทำอาหารของคุณ ขั้นตอนการติดตั้งไส้กรองมีดังต่อไปนี้:

1. ในการติดตั้งไส้กรองควรถอดตัวกรองดักไขมันออกก่อน กดล็อกแล้วดึงลง
2. ใส่แผ่นไส้กรองคาร์บอนลงในรูสี่เหลี่ยมให้พอดีกับมอเตอร์
3. หลังจากใส่ขอบด้านหน้าของไส้กรองคาร์บอนลงในช่องบนเครื่องดูดควันให้ลดขอบด้านหลังของไส้กรองคาร์บอนลง จนกระทั่งคลิกเข้าที่ที่ด้านหลังของรูสี่เหลี่ยม ยกแท่งยึดทั้งสองอันขึ้นให้อยู่ในแนวขนานเหนือแผ่นไส้กรองคาร์บอน
4. วางไส้กรองกลับไปให้เข้าที่
5. ใช้ขั้นตอนย้อนกลับเพื่อถอนการติดตั้งไส้กรองคาร์บอน

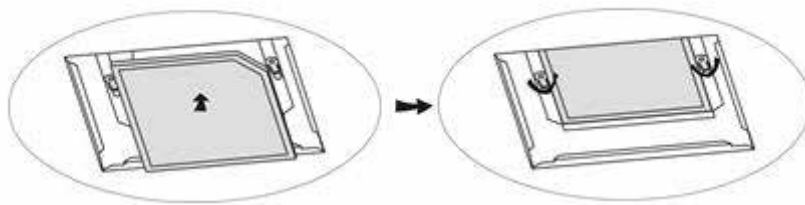

บันทึก:

- ตรวจสอบให้แน่ใจว่าตัวกรองถูกล็อคอย่างแน่นหนา มิฉะนั้นจะคลายตัวและก่อให้เกิดอันตรายได้
- เมื่อติดแผ่นใส่กรอง กำลังดูดจะลดลง

การเปลี่ยนหลอดไฟ

ข้อสำคัญ 	❖ ต้องเปลี่ยนหลอดไฟโดยผู้ผลิต ตัวแทนบริการ หรือบุคคลที่มีคุณสมบัติใกล้เคียงกัน ❖ ปิดการจ่ายไฟทุกครั้งก่อนดำเนินการใดๆ กับเครื่อง เมื่อจัดการกับหลอดไฟ ตรวจสอบให้แน่ใจว่าหลอดไฟเย็นลงจนสุดก่อนที่จะสัมผัสโดยตรงกับมือ ❖ เมื่อจับหลอดไฟ ให้ใช้ผ้าหรือสวมถุงมือเพื่อไม่ให้เหงื่อสัมผัสกับหลอดไฟ เนื่องจากจะทำให้อายุของหลอดไฟสั้นลง
---	--

บันทึก:

- ก่อนเปลี่ยนไฟ ตรวจสอบให้แน่ใจว่าเครื่องปิดและถอดปลั๊กแล้ว
- ป้องกันอันตรายเมื่อเปลี่ยนไฟ เช่น สวมถุงมือ

เปลี่ยนไฟ:

- ถอดตัวกรองไขมันออก
- วิธีที่ 1. ใช้เครื่องมือหรือมือกดสปริงของไฟ LED ทั้งสองด้านเข้าด้านใน จนไฟถูกกดออกมา ดูรูปที่ 1 จากนั้นดึงสายไฟที่เชื่อมต่อไฟออกเล็กน้อย แล้วถอดขั้วของไฟที่ต่อกับสายไฟออก ดูรูปที่ 2
- วิธีที่ 2. ใช้ไขควงตรงไขตรงขอบด้านล่างของไฟ LED ดูรูปที่ 3 จากนั้นดึงไฟ LED และสายไฟที่เชื่อมต่อออกเล็กน้อย ดูรูปที่ 2
- ใช้ชั้นตอนย้อนกลับเพื่อติดตั้งไฟด้านหลัง


• รหัส ILCOS D สำหรับโคมไฟนี้คือ: DSS-1.5/65-S-120/33

– โมดูล LED– โคมไฟสี่เหลี่ยม

– กำลังไฟฟ้าสูงสุด 2×1.5W

– ช่วงแรงดันไฟฟ้า: DC 12V

– ขนาด:

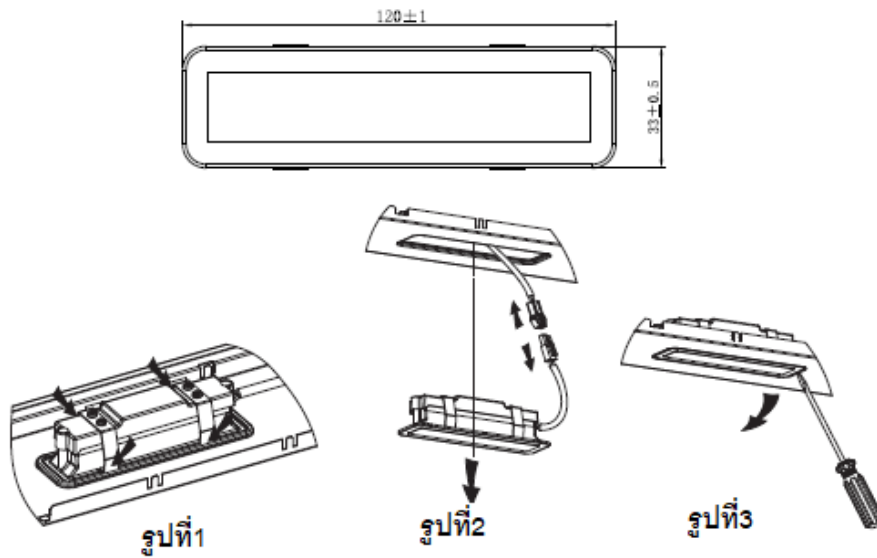

การคุ้มครองสิ่งแวดล้อม

	ผลิตภัณฑ์นี้มีเครื่องหมายระบุว่าเป็นอุปกรณ์อิเล็กทรอนิกส์ที่ใช้แล้วทิ้ง ซึ่งหมายความว่าห้ามทิ้งผลิตภัณฑ์นี้ร่วมกับขยะในครัวเรือน โดยต้องคัดแยกทิ้งที่จุดรวบรวมอุปกรณ์ตามคำสั่งที่ 2012/19/EU จากนั้นจะนำไปรีไซเคิลหรือรื้อออกเพื่อลดผลกระทบต่อสิ่งแวดล้อม ผลิตภัณฑ์ไฟฟ้าและอิเล็กทรอนิกส์อาจเป็นอันตรายต่อสิ่งแวดล้อมและสุขภาพของมนุษย์เนื่องจากมีสารอันตราย สำหรับข้อมูลเพิ่มเติมโปรดติดต่อหน่วยงานที่รับผิดชอบในท้องถิ่นหรือภูมิภาคของท่าน
--	--

บันทึก:

ข้อมูลต่อไปนี้แสดงวิธีการลดผลกระทบต่อสิ่งแวดล้อมโดยรวม (เช่น การใช้พลังงาน) ของกระบวนการทำอาหาร

- (1) ติดตั้งเครื่องดูดควันในที่ที่เหมาะสมซึ่งมีการระบายอากาศที่มีประสิทธิภาพ
- (2) ทำความสะอาดเครื่องดูดควันอย่างสม่ำเสมอเพื่อไม่ให้ปิดกั้นช่องระบายอากาศ
- (3) อย่าลืมปิดไฟเครื่องดูดควันหลังทำอาหาร
- (4) อย่าลืมปิดเครื่องดูดควันหลังทำอาหาร

ข้อมูลสำหรับการรื้อถอน

ห้ามรื้อเครื่องโดยไม่ทำตามคำแนะนำในคู่มือผู้ใช้ ผู้ใช้ไม่สามารถรื้ออุปกรณ์เองได้ เมื่อหมดอายุการใช้งาน ไม่ควรทิ้งเครื่องใช้ไฟฟ้าร่วมกับขยะในครัวเรือน ตรวจสอบกับหน่วยงานในพื้นที่ของคุณหรือผู้ดูแลเพื่อขอคำแนะนำในการรีไซเคิล

การลงทะเบียนรับประกันสินค้าออนไลน์

Online Warranty Registration
ลงทะเบียนรับประกันสินค้าออนไลน์



ง่ายกว่า รวดเร็วกว่า
สินค้ากลุ่ม Home Appliances
ระยะเวลาการรับประกัน เริ่มนับจากวันที่ออกใบกำกับสินค้า

ติดต่อบริการหลังการขาย



Contact after sales service
Please scan the QR code.

ติดต่อบริการหลังการขาย
กรุณาสแกนคิวอาร์โค้ด

บริษัท เฮฟเล่ (ประเทศไทย) จำกัด สำนักงานใหญ่

57 ซอยสุขุมวิท64 ถนนสุขุมวิท แขวงพระโขนงใต้ เขตพระโขนง กรุงเทพฯ ๑๐๒๖๐


โทรศัพท์: (02) 768-7171 โทรสาร: (02) 741-7272

เวลาเปิดบริการ จันทร์ — ศุกร์ 08.00 — 17.00 น. วันเสาร์ 9.00 - 16.00 น. วันอาทิตย์ : ปิดทำการ



COOKER HOOD

INSTRUCTION MANUAL

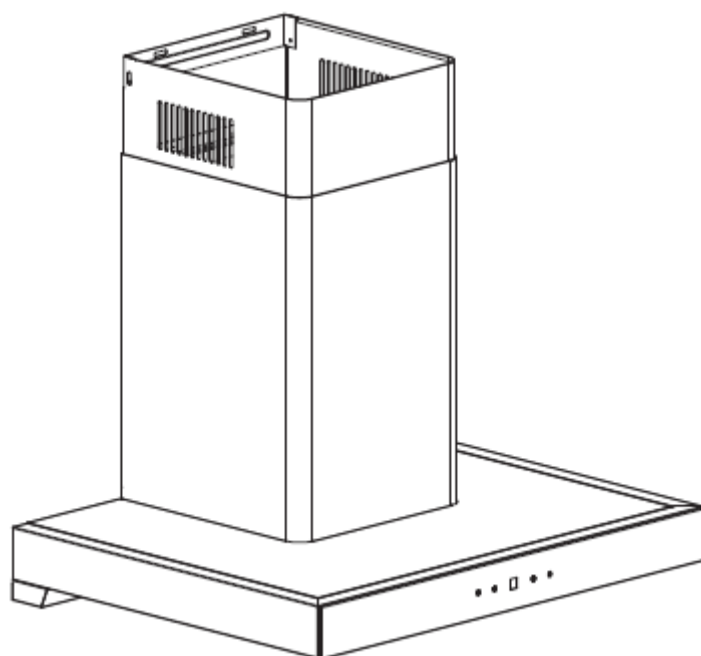

495.38.352 & 533.87.362

495.38.353 & 533.87.363

Content

1.....	Safety instructions
2.....	Installation
3.....	Start using your cooker hood
4.....	Troubleshooting
5.....	Maintenance and cleaning
6.....	Environment protection

SAFETY INSTRUCTIONS

This manual explains the proper installation and use of your cooker hood, please read it carefully before using even if you are familiar with the product. The manual should be kept in a safe place for future reference.

Never to do:

- Do not try to use the cooker hood without the grease filters or if the filters are excessively greasy!
- Do not install above a cooker with a high level grill.
- Do not leave frying pans unattended during use because overheated fats or oils might catch fire.
- Never leave naked flames under the cooker hood.



- If the cooker hood is damaged, do not attempt to use.
- Do not flambé under the cooker hood.
- CAUTION: Accessible parts may become hot when used with cooking appliances.
- The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the cooker hood. (When the cooker hood is located above a gas appliance, this distance shall be at least 65 cm)
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels. Range hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation

of a range hood or other cooking fume extractor, the operation of open flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.



Always to do:

- Important! Always switch off the electricity supply at the mains during installation and maintenance such as light bulb replacement.
- The cooker hood must be installed in accordance with the installation instructions and all measurements followed.
- All installation work must be carried out by a competent person or qualified electrician.
- Please dispose of the packing material carefully. Children are vulnerable to it.
- Pay attention to the sharp edges inside the cooker hood especially during installation and cleaning.
- Make sure the ducting has no bends sharper than 90 degrees as this will reduce the efficiency of the cooker hood.
- Warning: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.
- Warning: Before obtaining access to terminals, all supply circuits must be disconnected.

Always to do:

- Always put lids on pots and pans when cooking on a gas cooker.
- When in extraction mode, air in the room is being removed by the cooker hood. Please make sure that proper ventilation measures are being observed. The cooker hood removes odours from room but not steam.
- There shall be adequate ventilation of the room when the cooker hood is used at the same time as appliances burning gas or other fuels.
- Cooker hood is for domestic use only.



- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Always to do:

- **Caution:** The appliance and its accessible parts can become hot during operation. Be careful to avoid touching the heating elements. Children younger than 8 years old should stay away unless they are under permanent supervision.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Regulations concerning the discharge of air have to be fulfilled.
- Clean your appliance periodically by following the method given in the chapter MAINTENANCE.
- For safety reason, please use only the same size of fixing or mounting screw which are recommended in this instruction manual.
- Regarding the details about the method and frequency of cleaning, please refer to maintenance and cleaning section in the instruction manual.
- Cleaning and user maintenance shall not be made by children without supervision.
- When the cooker hood and appliances supplied with energy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa (4×10^{-5} bar).
- **WARNING:** Danger of fire: do not store items on the cooking surfaces.
- A steam cleaner is not to be used.
- **NEVER** try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.


INSTALLATION (VENT OUTSIDE)

MOUNTING OF THE V-FLAP

If the cooker hood does not have an assembled V-flap 1, you should mount the half-parts to its body. The images only show an example of how to mount the V-flap, because the outlet may vary according to different models and configurations.


To mount the V-flap 1 you should:

- Mount two half-parts 2 into the body 6;
- the pin 3 should be top oriented;
- the axis 4 should be inserted into the holes 5 on the body;
- repeat all the operations for the 2nd half-part.

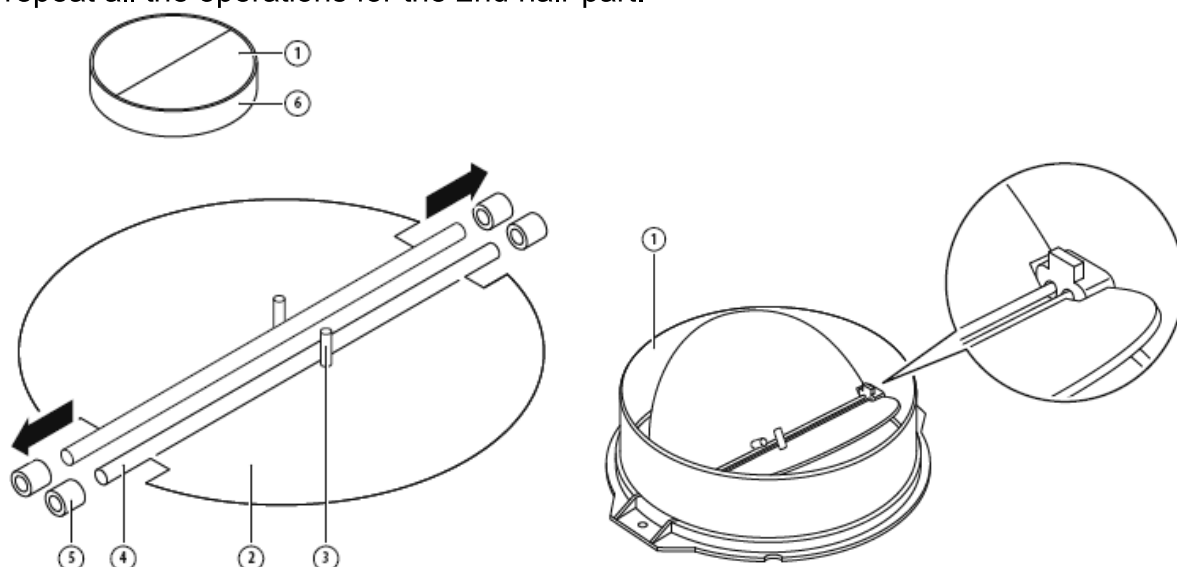


INSTALLATION


If you have an outlet to the outside, your cooker hood can be connected as below picture by means of an extraction duct (enamel, aluminum, flexible pipe or non-flammable material with an interior diameter of 150mm the maximum length from the hood to the wall outlet should be around 2m)

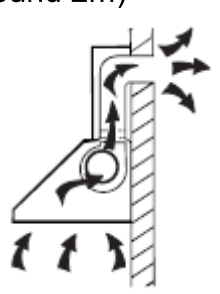


1. Before installation, turn the unit off and unplug it from the outlet.

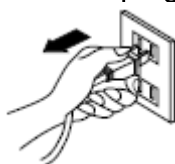

2. The cooker hood should be placed at a distance of 65~75cm above the cooking surface for best effect. See pic 1.

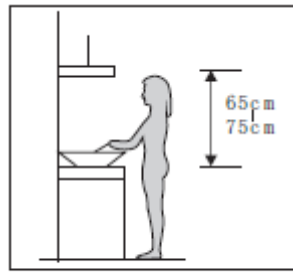


Pic 1

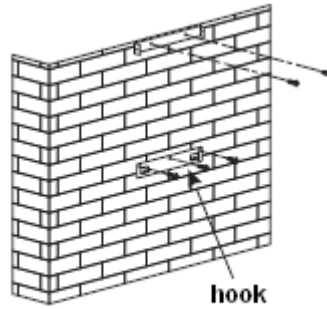


Pic 2

3. Install the hook on a suitable place once the installation height is fixed, and keep it in line. The fixed position of the outside chimney bracket is the highest place of chimney. See pic 2.
4. Install the v-flap and lay the expansion pipe to the outlet. Fix the expansion pipe with a cable tie on the outlet and put the hood onto the hook. See pic 3.


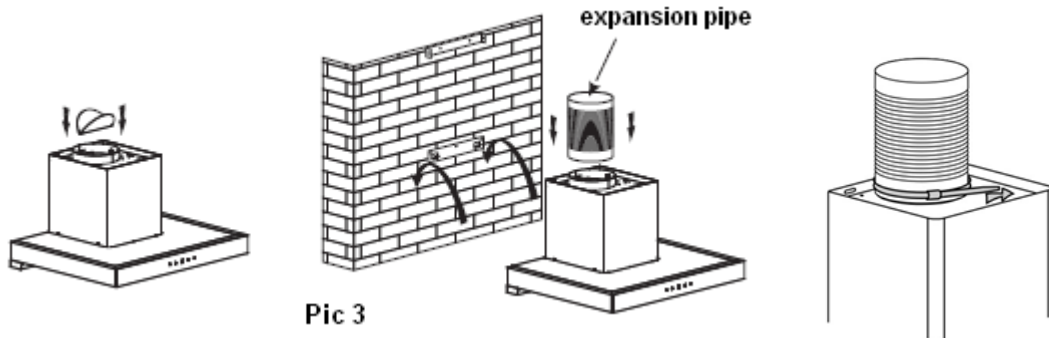


Pic 3

5. Fix the outside chimney bracket on the outside chimney with 2 pcs ST4*8mm screws. Put the chimney on the cooker hood and lead the expansion pipe to outside. Then fix the body with 2 pcs ST4*30mm safety screws. Note: The two safety vents are positioned on the back housing, with a diameter of 6mm. See pic 4.
6. Adjust the height of the inside chimney to the position of the inside chimney bracket and fix on it with 2pcs ST4*8mm screws, after adjusting the position, fix the body with safety screws. See pic4 & 5.

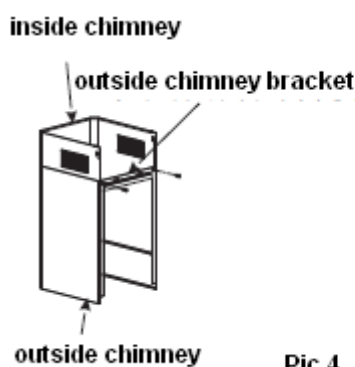

Pic 4

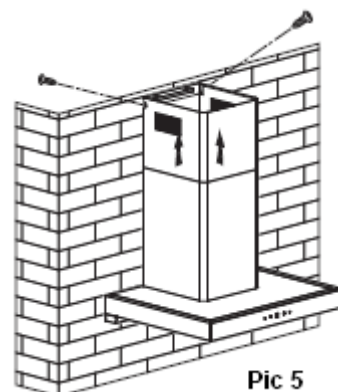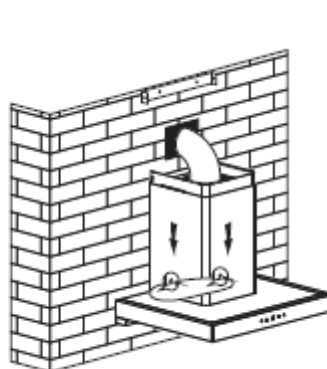


Pic 5

HINTS FOR EXHAUST DUCT INSTALLATION

The following rules must be strictly followed to obtain optimal air extraction:

- Keep expansion pipe short and straight.
- Do not reduce the size or restrict the expansion pipe.
- When using the expansion pipe always install the pipe pulled taut to minimize pressure loss.
- Failure to observe these basic instructions will reduce the performance and increase noise levels of the cooker hood.
- Any installation work must be carried out by a qualified electrician or competent person.
- Do not connect the ducting system of the hood to any existing ventilation system which is being used for any other appliance, such as warmer tube, gas tube, hot wind tube.
- The angle of the bend of the expansion pipe should not be less than 120°; you must direct the pipe horizontally, or, alternatively, the pipe should go up from the initial point and should be led to an outer wall.
- After the installation, make sure that the cooker hood is level to avoid grease collection at one end.
- Ensure the expansion pipe selected for installation complies with relevant standards and is fire retardant.

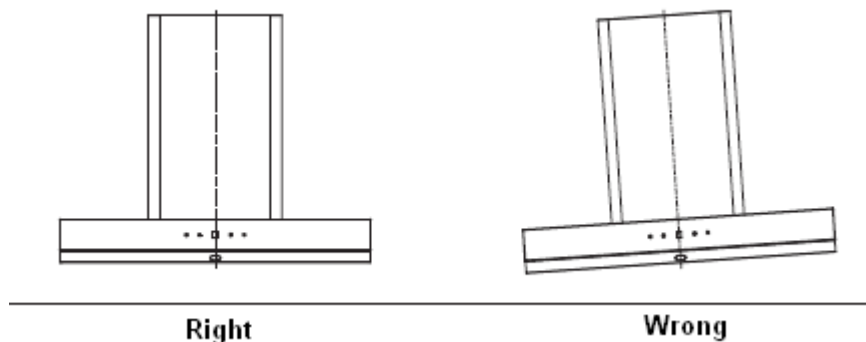

WARNING: 	➤ For safety reason, please use only the same size of fixing or mounting screws which are recommended in this instruction manual. ➤ Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.
---	--

Start Using Your Cooker Hood

Touch control with LED display



LED touch control has four buttons and two sensors, see picture. (Timer), (Lamp), (Speed), (Power)

1. Power-on: After connecting the cooker hood to the main supply, the indicator light of all buttons will turn on and the buzzer sounds for once. The LED display is closed. The cooker hood doesn't work and enters into stand-by mode.

2. (Power) button:

2.1 Press (Power) button, the front cover of the cooker hood will be opened. The indicator light of this button will be on and the hood will work at low speed, and the light will be on. The indicator light of the buttons (Speed) and (Lamp) will be on. Press (Power) button again, the front cover of the cooker hood will be closed. The indicators will be off and the cooker hood will be turn off, all the function will be close. The speed function operations of the hood can only be operated when opening the cover.

3. (Lamp) button:

3.1 Press (Lamp) button, the indicator light of this button and the lights will be on. Press again, the indicator light of lamp button and the lights will be off. The above steps can be operated repeatedly.

3.2 The button of (Lamp) button could be operated separately without opening the front cover of the cooker hood.

4. (Speed) button:

The cooker hood has three speed levels, they are low, medium, high, and the corresponding LED display will be "1", "2", "3".

4.1 After switching on by power button, the hood starts to work at low speed and the LED display will display "1".

4.2 Press (Speed) button again when it works at low speed, the cooker hood works at medium speed and the LED display will display "2".

4.3 Press  (Speed) button again when it works at medium speed, the cooker hood at high speed and the LED display will display “3”.

4.4 During the working, you can touch  (Speed) button to change the speed circularly: “low→medium→high→low→medium……”

5.  (Timer) button:

The timer button is only used for the timer function when the hood is working. Press the button will be invalid when the hood is under standby mode or open the lamp separately.

5.1 Press timer button  once to enter to timer function. The timer setting is 9mins, the display will show “9”, the LED display will be shown 9.8.7.... decreasing by a minute. When time is up, the hood will be off automatically and the display will off . Meanwhile the lamp will extinguish.

5.2 After the timer setting is completed, the indicator of power button keeps bright and the front cover of the hood keeps opening.

5.3 Press timer button once, the hood enter into the timer function. Press again ,the hood will exit this function. The above steps can be operated repeatedly. Press the speed button when the hood in the timer state, it will exit timer function automatically.

6. Gesture sensor mode:

6.1 Wave your hand from left to right once within 8 cm from the front of the sensor, the front cover of the cooker hood will be opened .The cooker hood will start to work at low speed and the LED display will show “1”.The light will lit on. The indicator lights of the  (Speed) button ,  (Lamp) button and  (Power) button will be on. Wave your hand from left to right again ,the cooker hood works at medium speed and the LED display will show “2”. Wave your hand in the same direction as above for another time, the cooker hood works at high speed and the LED display will show “3”. Wave your hand in the same way again when the hood works at the highest speed, the hood will work at the same speed.

6.2 When wave your hand from right to left once ,the cooker hood will shift to a lower speed. Wave your hand from right to left when the hood works at high speed, the cooker hood will switch to medium speed. The indicator light of the  (Speed) button ,  (Lamp) button and  (Power) button will be on. Wave your hand from right to left when the hood works at medium speed, the cooker hood will switch to low speed. The LED display will show current speed level. If continuously reducing to no speed, the indicator lights will be off. The front cover of the hood will close and all the function operation of the hood will be close. The hood will then enter standby mode. The above steps can be operated repeatedly.

6.3 If without any operation for functional buttons, the gesture sensor will enter sleeping mode after 10 minutes. Re-awake gesture function requires manual

operation of any function buttons. The gesture function can be operated only when it has been activated.

TROUBLESHOOTING

Fault	Possible Cause	Solution
Light on, but motor does not work	Fan switch turned off	Select a fan switch position.
	Fan switch failed	Contact service center.
	Motor failed	Contact service center.
Light does not work, motor does not work	House fuses blown	Reset/Replace fuses.
	Mains power cable is loose or disconnected	Refit mains power cable to power outlet. Switch power outlet on.
Oil leakage	One way valve and the outlet are not tightly sealed	Take down the one way valve and seal with sealant.
	Leakage from the connection of chimney and cover	Take chimney down and seal.
Lights not working	Broken or faulty bulbs	Replace bulbs as per this instruction.
Insufficient suction	The distance between the cooker hood and the gas top is too far	Refit the cooker hood to the correct distance.
The Cooker hood inclines	The fixing screw is not tight enough	Tighten the hanging screw and make it horizontal.




NOTE:

Any electrical repairs to this appliance must conform to your local, state and federal laws. Please contact the service centre if in any doubt before undertaking any of the above. Always disconnect the unit from the power source when opening the unit.

MAINTENANCE AND CLEANING

Caution:

- Before maintenance or cleaning is carried out, the cooker hood should be disconnected from the mains power supply. Ensure that the cooker hood is switched off at the wall socket and the plug removed.

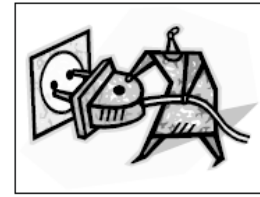

- External surfaces are susceptible to scratches and abrasions, so please follow the cleaning instructions to ensure the best possible result is achieved without damage.

GENERAL

Cleaning and maintenance should be carried out with the appliance cold especially when cleaning. Avoid leaving alkaline or acid substances (lemon juice, vinegar etc.) on the surfaces.

STAINLESS STEEL

The stainless steel must be cleaned regularly (e.g. weekly) to ensure a long life expectancy. Dry with a clean soft cloth. A specialized stainless steel cleaning fluid may be used.

NOTE:

Ensure that wiping is done along with the grain of the stainless steel to prevent any unsightly crisscross scratching patterns from appearing.

CONTROL PANEL SURFACE

The inlay control panel can be cleaned using warm soapy water. Ensure the cloth is clean and well wrung before cleaning. Use a dry soft cloth to remove any excess moisture left after cleaning.

Important

Using neutral detergents and avoid using harsh cleaning chemicals, strong household detergents or products containing abrasives, as this will affect the appearance of the appliance and potentially remove any printing of artwork on the control panel and will void manufacturer's warranty.


THE OIL CUP

- Your cooker hood includes a unique oil cup which collects the oil that is deposited on the grease filters.
- When the oil cup is about 2/3 full the oil cup needs to be cleaned.
- Take away the oil cup and slightly pull the oil cup forwards to release it from the Cooker hood.
- Discard the oil before cleaning or washing the cup.
- Ensure the cup has been cleaned and dried before reattaching to the Cooker hood.

GREASE MESH FILTERS

The mesh filters can be cleaned by hand. Soak them for about 3 minutes in water with a mild detergent and then brush it gently with a soft brush. Do not apply too much pressure so as to avoid any damage to it. (Leave to dry naturally out of direct sun light)

Filters should be washed separately to crockery and kitchen utensils. It is advisable not to use rinse aid. Refer to the below picture to remove the grease mesh filters.

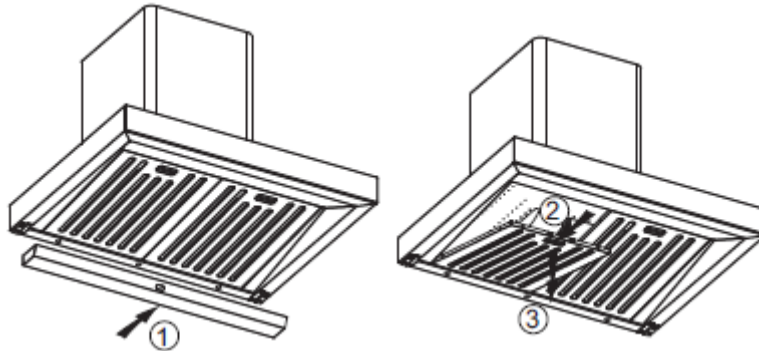


INSTALLING GREASE MESH FILTERS

- To install filters for the following four steps.
- Angle the filter into slots at the back of the hood.
- Push the button on handle of the filter.
- Release the handle once the filter fits into a resting position.
- Repeat to install all filters.

CARBON FILTER

Activated carbon filter can be used to trap odors. Normally the activated carbon filter should be changed every 3 to 6 months according to your cooking habits. The installation procedure of activated carbon filter is as below:

1. In order to install the activated carbon filter, the grease filter should be detached first. Press the lock and pull it downward.
2. Insert the carbon filter into the rectangular hole, fitting it over the motor.
3. After inserting the front edge of the carbon filter into the slot on the cooker hood. Lower the back edge of the carbon filter, until it clicks into place at the rear of the rectangular hole. Raise the two fixing bars, until they are horizontal over the carbon filter.
4. Place the Al. filter back to position.
5. Apply reverse procedure to uninstall the carbon filter.

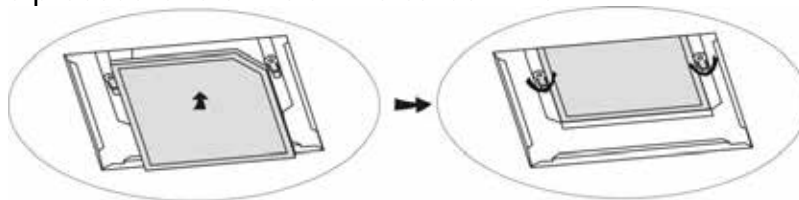

NOTE:

- Make sure the filter is securely locked. Otherwise, it would loosen and cause danger.
- When activated carbon filter attached, the suction power will be lowered.

BULB REPLACEMENT


Important : 	✧ The bulb must be replaced by the manufacturer, its service agent or similarly qualified persons. ✧ Always switch off the electricity supply before carrying out any operations on the appliance. When handling bulb, make sure it has completely cooled down before any direct contact with hands. ✧ When handling bulbs hold with a cloth or gloves to ensure perspiration does not come in contact with the bulb as this can reduce the life of the bulb.
--	---

Note:

- Before changing the lights, make sure that the appliance is turned off and unplugged.
- Protect against danger when changing lights, such as wearing gloves.

Changing the lights:

- Remove the grease filter.
- Way 1. Use a tool or the hand to press the spring splinter of both sides of LED light to the inside, until the light is pressed out, see pic 1. Then slightly pull the light connecting wire out, and dismantle the terminal of the light connecting wire. See pic 2.
- Way 2. Use straight screwdriver to prize up the LED light bottom edge, see pic 3, then slightly pull out the LED light and light connecting wire. See pic 2.
- Apply the reverse procedure to install the light back.
- ILCOS D code for this lamp is: DSS-1.5/65-S-120/33
- LED modules– rectangle lamp
- Max wattage: 2×1.5W
- Voltage range: DC 12V
- Dimensions:

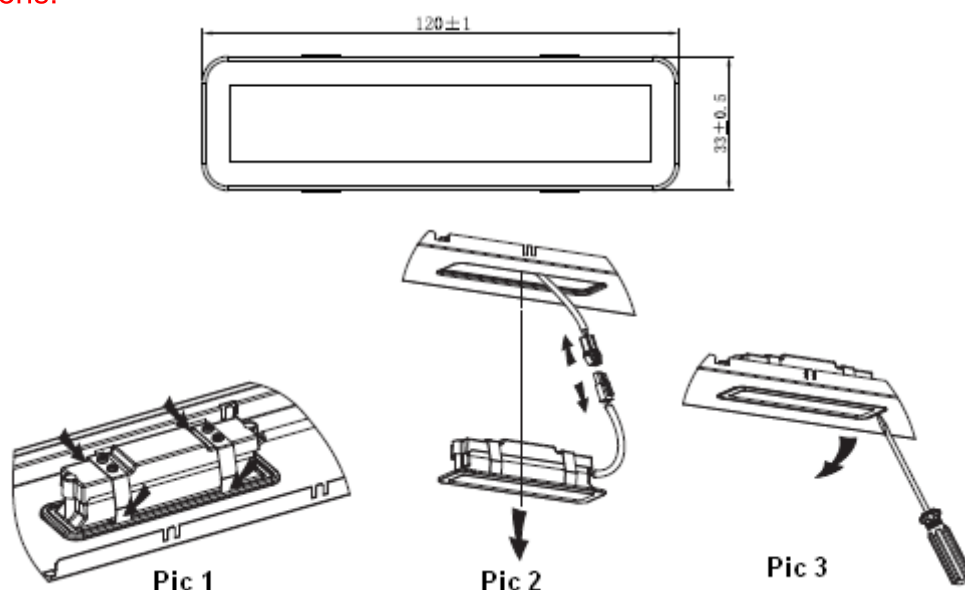

ENVIRONMENTAL PROTECTION:

	This product is marked with the symbol on the selective sorting of waste electronic equipment. This means that this product must not be disposed of with household waste but must be supported by a system of selective collection in accordance with Directive 2012/19/EU. It will then be recycled or dismantled to minimize impacts on the environment, electrical and electronic products are potentially dangerous for the environment and human health due to the presence of hazardous substances. For more information, please contact your local or regional authorities.
---	---

NOTE:

The following shows how to reduce total environmental impact (e.g. energy use) of the cooking process).

- (1) Install the cooker hood in a proper place where there is efficient ventilation.
- (2) Clean the cooker hood regularly so as not to block the airway.
- (3) Remember to switch off the cooker hood light after cooking.
- (4) Remember to switch off the cooker hood after cooking.

INFORMATION FOR DISMANTLING

Do not dismantle the appliance in a way which is not shown in the user manual. The appliance could not be dismantled by user. At the end of life, the appliance should not be disposed of with household waste. Check with your Local Authority or retainer for recycling advice.


Online Warranty Registration

Online Warranty Registration
ลงทะเบียนรับประกันสินค้าออนไลน์



ง่ายกว่า รวดเร็วกว่า
สินค้ากลุ่ม Home Appliances
ระยะเวลาการรับประกัน เริ่มนับจากวันที่ออกไปกำกับสินค้า

Contact After sales service

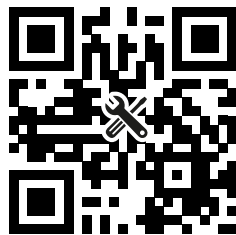

Contact after sales service
Please scan the QR code.

ติดต่อบริการหลังการขาย
กรุณาสแกนคิวอาร์โค้ด

HAFELE (THAILAND) LIMITED

57 Soi Sukhumvit 64, Sukhumvit Rd, Phrakhanong Tai, Phrakhanong, Bangkok 10260

Telephone : (02) 768-7171 Fax : (02) 741-7272

Opening hours Monday - Friday 8:00 a.m. - 5:00 p.m. Saturday 9:00 a.m. - 4:00 p.m. Sunday: closed