

MCP2-CR : โปรตีนคูลมือนี้ไว้ เพื่อประกอบการใช้งาน

ส่วนประกอบ : เครื่องเตรียมอาหาร



ข้อควรระวัง

1. เครื่องเตรียมอาหารนี้เป็นประเภทชาร์จ ควรชาร์จให้เต็มก่อนใช้งาน
2. เครื่องกลับเป็นใบมีดมีคม ต้องรองจานหรือถ้วยก่อนเปิดฝา
3. ห้ามใช้ปลั๊กอาหารที่มีความแข็งแรง เช่น เมล็ดกาแฟ ข้าว ถั่ว น้ำแข็ง และอาหารแข็ง
4. ใบมีดมีคม โปรดระวัง ห้าม! สัมผัส
5. ห้ามใช้งานต่อเนื่องเกิน 30 วินาที ควรกดและปล่อยในรอบการใช้งาน 2 นาที เครื่องควรปล่อยให้เย็นลงก่อนการใช้งานครั้งต่อไป
6. ห้ามใช้แผ่นซีดี เพราะจะทำให้เกิดรอยขีด
7. ห้ามนำเครื่องเข้าไมโครเวฟ เตาอบ หรือเข้าตู้เย็น โพลีสติกสามารถล้างทำความสะอาดผ่านน้ำในอุณหภูมิสูงสุด 100°C ได้
8. ห้ามดึงเครื่องมอเตอร์ และสายชาร์จจนขาด
9. ห้ามนำมอเตอร์ไปใช้กับเครื่องใช้ชนิดอื่นอย่างเด็ดขาด
10. ห้ามใช้งานใกล้แหล่งความร้อนเช่น เตาไฟฟ้า หรือ เตาอบ เป็นต้น
11. ขณะเครื่องกำลังทำงาน ควรนำมือออกจากใบมีด หรือส่วนที่เคลื่อนไหว
12. ห้ามนำเข้าเครื่องล้างจาน
13. ไม่ควรให้เด็กหรือผู้ด้อยความสามารถ เป็นผู้ใช้งาน ใช้ความระมัดระวังอย่างเต็มที่หากใช้เครื่องใกล้เด็ก
14. ห้ามนำเครื่องเตรียมอาหารนี้ไปใช้เพื่อกรานอื่น
15. เครื่องเตรียมอาหารนี้ถูกออกแบบมาให้ใช้งานภายในครัวเรือนเท่านั้น ไม่เหมาะสำหรับการใช้งานเชิงพาณิชย์ หรือใช้ในลักษณะอื่นที่ต่างจากวัตถุประสงค์ในการออกแบบ การรับประกันจะถูกลบเลิกทันที
16. ระวัง! ห้ามเปิดฝารอบออกจนกว่าเครื่องจะหยุดสนิท ใบมีดมีคม


ระวัง! ห้ามใส่ใบมีดเข้ากับตัวมอเตอร์โดยไม่มีใบ / ห้ามสัมผัสใบมีด / ห้ามล้างหัวมอเตอร์

วิธีการใช้งาน


1. เครื่องเตรียมอาหารนี้เป็นประเภทชาร์จ ควรชาร์จให้เต็มก่อนใช้งาน ล้างทำความสะอาดใบมีด เช็ดให้แห้ง ประกอบใบเข้าด้วยกัน




3. ประกอบแผ่นปิด(ฝารอบ) และหัวมอเตอร์ให้ล็อก เครื่องถูกออกแบบมาเพื่อความปลอดภัย หากใบมีดและฝารอบปิดไม่ล็อก เครื่องจะไม่ทำงาน



2. ใส่ใบมีดเข้ากับโถ ใส่วัตถุดิบลงในโถ ตามความต้องการ ห้ามเกินขีด Max



4. ปุ่มสวิตช์ของมอเตอร์เป็นแบบกดเปิด/ปิดเองเมื่อปล่อย การกดสับจะละเอียดขึ้น ถ้าเดินเครื่องเป็นเวลานาน ไม่ควรกดมอเตอร์ให้ทำงานเป็นเวลานานเกิน 30 วินาที ต่อครั้ง

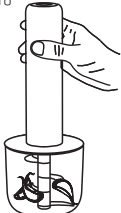

การทำความสะอาด

1. ควรล้างโถสับและใบมีดทุกครั้งหลังใช้งานด้วยน้ำยาล้างจาน
2. ส่วนของมอเตอร์และสายไฟ ห้ามจุ่มลงในน้ำเด็ดขาด ควรใช้น้ำบิดหมาดเช็ดทำความสะอาด
3. ห้ามใช้แผ่นซีดี เพราะจะทำให้เกิดรอยขีด
4. ใบมีดมีความคม โปรดระวัง!
5. ห้ามใช้น้ำยาสารเคมี ที่ไม่ใช่สำหรับการทำความสะอาด ล้างโถและใบมีด
6. ห้ามนำชิ้นส่วนเครื่อง เข้าเครื่องทำความร้อน ไมโครเวฟ และเตาอบ
7. ส่วนของมอเตอร์และสายไฟ ห้ามจุ่มลงในน้ำเด็ดขาด ควรใช้น้ำบิดหมาดเช็ดทำความสะอาด
8. ห้าม! ใช้งานระหว่างชาร์จ ควรชาร์จให้เต็มก่อนใช้งาน

ข้อมูลทางเทคนิค

สินค้า	เครื่องเตรียมอาหารขนาดเล็ก
โวลต์	5V DC
อัตรา	30 Watt
แบตเตอรี่:	แบตเตอรี่: 1,200 mAh

การรับประกัน

เครื่องเตรียมอาหารขนาดเล็ก รุ่น MCP2-CR ระยะเวลาประกัน 30 วัน

KNOW YOUR FOOD CHOPPER




SAFETY NOTICES


- Please fully charge the product before you use it for the first time.
- Make sure the Blade Assembly is in the right place and running smoothly, before you add the ingredients.
- This product can't be used to process hard foods, such as coffee beans, soybeans, rice, ice cubes, frozen foods.
- Please place the ingredients according to the regulations and don't overload the cup.
- Don't touch blade assembly, motor and other dismountable parts when the product is working, to avoid damage to the product.
- This product will automatically stop after working 30 seconds. If you think the chopping effect is not enough, you can press the button again until you are satisfied.
- Please let the product stop working for 10 minutes after it has worked six times continuously, so as to protect the product.
- Don't wash main unit with water directly, please clean it with damp rag.
- Don't touch the blades directly with your hands, the blades are very sharp.
- Don't scratch the product with sharp objects.
- Don't put this product into microwave oven or ice locker, to avoid breaking it.
- Don't use stainless steel scrubber to clean this product.
- Don't use corrosive liquids to clean this product, such as gasoline or acetone.
- Watch out for your hands when you take out the blade assembly or clean it.
- This product should be kept out of reach of children. Don't allow handicapped person, green hand and children use or play with this product.
- Don't put any parts of this product into dishwasher for cleaning.
- This product is only suitable for personal or family use, not for commercial use.

OPERATIONS

1. Please fully charge the product before you use it for the first time. The indicator light will change from red to turn off, when the product is fully charged.

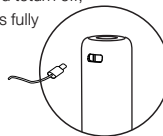


3. Firstly, put the baffle on the cup. Secondly, put main unit on the baffle in right place. Lastly, press on button to start chopping. If the product can't work, it indicates that it is overloaded. Please remove some ingredients until the product can start working smoothly.



2. Put the blade assembly into cup and keep it in the right place. After that, you can put the ingredients into cup.



4. The product will automatically stop after working 30 seconds. If you think the chopping effect is not enough, you can press the button again until you are satisfied.

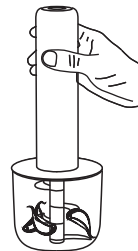

MAINTENANCE AND STORAGE

- Please clean the baffle, blade assembly and cup immediately after you use it, to avoid odor.
- Please clean main unit with damp rag.
- Please flush blade assembly with water directly, don't touch blades with your hands.
- Don't use stainless steel scrubber and corrosive liquids to clean this product.
- Don't disinfect the product with high temperature.
- Please make all parts dry before you reassemble and store the product.
- Please charge and use it once every three months, when you don't use this product for a long time.

WARRANTY

We hereby warranty our Mini Food Processor model MCP2-CR in a period of 30 days.