


คู่มือการใช้งาน
กาต้มน้ำไฟฟ้า
รุ่น : MWK1.5L-CRW
220V., ~50Hz., 1,850-2,200W.

- ① Spout
- ② Lid
- ③ Open lid button
- ④ Handle
- ⑤ Body
- ⑥ Power switch
- ⑦ Base

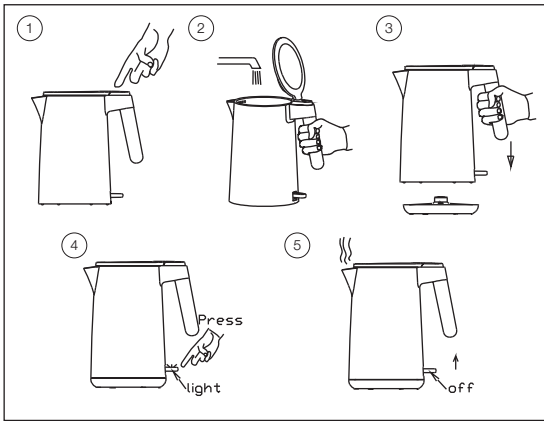

ข้อควรระวังที่สำคัญ

1. ก่อนนำกาต้มน้ำนี้มาใช้งาน กรุณาอ่านคู่มือฉบับนี้อย่างละเอียด
2. เก็บคู่มือ ใบรับประกัน ใบเสร็จ และถ้าเป็นไปได้ ให้เก็บกล่องพร้อมวัสดุบรรจุภายในไว้ด้วย
3. กาต้มน้ำนี้ออกแบบสำหรับการใช้ในครัวเรือนเท่านั้น ห้ามใช้เชิงพาณิชย์
4. ปิดสวิตช์ และถอดปลั๊กเมื่อไม่ใช้งาน เมื่อต้องถอดสายไฟ ให้จับที่ปลั๊กแล้วดึง ห้ามดึงที่สายไฟ
5. ปิดกาต้มน้ำก่อนทำความสะอาด
6. เก็บให้พ้นมือเด็ก ห้ามปล่อยให้เด็กอยู่ใกล้โดยไม่มีผู้ดูแล
7. เด็กอายุ 8 ปีขึ้นไปสามารถใช้ได้หากได้รับคำแนะนำหรือการดูแล และเข้าใจอันตราย การทำความสะอาด/บำรุงรักษาโดยผู้ที่ไม่ควรให้เด็กทำ ยกเว้นเด็กอายุมากกว่า 8 ปีและได้รับการดูแล เก็บอุปกรณ์และสายไฟให้พ้นเด็กที่อายุต่ำกว่า 8 ปี
8. บุคคลที่มีความสามารถทางร่างกาย/ประสาทสัมผัส/สติปัญญาลดลง หรือขาดประสบการณ์ สามารถใช้ได้เมื่อได้รับการดูแลหรือคำแนะนำและเข้าใจอันตราย
9. ห้ามให้เด็กเล่นอุปกรณ์นี้
10. ตรวจสอบกาต้มน้ำและสายไฟเป็นประจำ หากพบความเสียหายหรือทำงานผิดปกติ ให้หยุดใช้ และถอดปลั๊กทันที
11. ห้ามซ่อมด้วยตนเอง โปรดติดต่อศูนย์บริการที่เบอร์ 02-493-6565
12. เก็บกาต้มน้ำและสายไฟให้พ้นความร้อน แสงแดด น้ำ ความชื้น ขอบคม ฯลฯ
13. ใช้เชื้อเพลิง/อุปกรณ์เสริมของแท้เท่านั้น ห้ามเชื่อมต่อกับผลิตภัณฑ์ที่ไม่เข้ากัน
14. ห้ามใช้กาต้มน้ำภายนอกอาคาร
15. ฐานและตัวภายนอกไม่กันน้ำ ให้เก็บให้แห้งเสมอ
16. ห้ามนำกาต้มน้ำจุ่มลงในน้ำหรือให้สัมผัสของเหลว ห้ามจับด้วยมือเปียก หากเปียกให้ถอดปลั๊กทันที
17. ห้ามสัมผัสสิ่งของภายในกาต้มน้ำขณะใช้งาน
18. ใช้กาต้มน้ำตามวัตถุประสงค์เท่านั้น
19. กาต้มน้ำใช้ได้เฉพาะกับฐานที่ให้มาเท่านั้น
20. หากสายไฟชำรุด ต้องให้ผู้ผลิต/ศูนย์บริการหรือช่างผู้ชำนาญเปลี่ยน

การใช้งาน

- เติมน้ำด้วยน้ำเย็นเท่านั้น
- ระดับน้ำต้องอยู่ระหว่างเครื่องหมาย MAX และ MIN
- ปิดสวิตช์ก่อนยกกาต้มน้ำออกจากฐาน
- ปิดฝาให้แน่นเสมอ

- ฐานและตัวภายนอกต้องไม่เปียก
- ตัวกาต้มน้ำต้องเข้ากันได้กับฐานที่ใช้

การใช้งานครั้งแรก

ก่อนใช้ครั้งแรก ให้เติมน้ำต้มสะอาดอุณหภูมิห้อง แล้วต้มน้ำ 2 รอบโดยไม่ใส่สารเติมแต่ง

1. เติมน้ำตามระดับที่กำหนด ห้ามเติมเกิน ใช้ตัวชี้ระดับน้ำ
2. วางกาต้มน้ำบนฐาน
3. การเชื่อมต่อไฟฟ้า
 - ตรวจสอบแรงดันไฟฟ้าบนฉลากที่ฐานว่าตรงกับเต้ารับที่ใช้หรือไม่
 - เชื่อมต่อกับเต้ารับ 220-240V 50/60Hz ที่ติดตั้งอย่างถูกต้องเท่านั้น
4. เปิดกาต้มน้ำที่ตำแหน่ง '1' ไฟควบคุมบนตัวชี้ระดับน้ำจะแสดงขณะน้ำเดือด
5. หลังน้ำเดือด กาต้มน้ำจะตัดเองอัตโนมัติ
 - ถอดกาต้มน้ำออกจากแหล่งจ่ายไฟ
 - ห้ามเปิดฝาระหว่างนี้
6. อุปกรณ์นี้เหมาะสำหรับการใช้ในครัวเรือนและสภาพแวดล้อมที่คล้ายกัน (เช่น ห้องครัวพนักงานในร้าน/สำนักงาน, ผู้เข้าพักในโรงแรม, ที่พักแบบ Bed & Breakfast)
7. หลีกเลี่ยงการทวงของน้ำบริเวณหัวต่อขณะใช้งาน
8. **คำเตือน:** หากเติมน้ำเกิน ระหว่างเติมน้ำเดือดอาจพุ่งออกมาได้
9. **คำเตือน:** อาจเกิดการบาดเจ็บจากการใช้งานผิดวิธี พื้นผิวขององค์ประกอบทำความร้อนยังร้อนคงเหลือหลังใช้งาน

การทำความสะอาด

- ถอดปลั๊กจากเต้ารับก่อนทำความสะอาดเสมอ
- ทำความสะอาดภายนอกด้วยผ้าชุบน้ำสะอาดบิดหมาด โดยไม่ใส่สารเคมี
- กรองแคลเซียม (calcium filter) สามารถถอดออกเพื่อทำความสะอาดได้

การรับประกัน

เราขอรับประกันกาต้มน้ำไฟฟ้าของเรา รุ่น MWK1.5L-CRW เป็นระยะเวลา 1 ปี

Instruction Manual


Water Kettle

Model : MWK1.5L-CRW

220V., ~50Hz., 1,850-2,200W.



- ① Spout
- ② Lid
- ③ Open lid button
- ④ Handle
- ⑤ Body
- ⑥ Power switch
- ⑦ Base

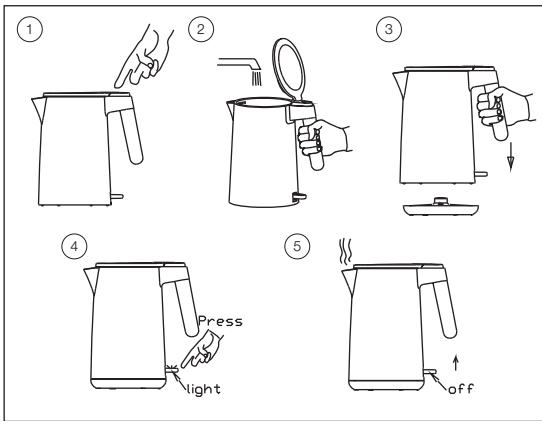

IMPORTANT SAFEGUARDS

1. Before commissioning this kettle, please read the instruction manual carefully.
2. Please keep the instruction manual, guarantee certificate, the sales receipt and if possible, the carton with the inner packaging.
3. This kettle is intended exclusively for private and not for commercial use
4. Switch off the kettle and remove the plug from the socket when the kettle is not in use. When you disconnect the power cord of the kettle, grasp and pull the plug, not the cord/cable.
5. Switch off the kettle before cleaning the kettle.
6. Keep the kettle out of the reach of children. Do not leave children unsupervised with the kettle.
7. This appliance can be used by children aged from 8 years and above if they have been given supervision or instruction concerning use of the appliance in a safe way and if they understand the hazards involved. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised. Keep the appliance and its cord out of reach of children aged less than 8 years.
8. Appliances can be used by persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
9. Children shall not play with the appliance.
10. Test the kettle and the cord/cable regularly for damage. Check that the kettle and is operating properly. If there is damage of any kind or if the kettle is not operating properly, stop using the kettle and unplug it immediately.
11. Do not attempt to repair the kettle yourself, only authorized and qualified personnel may repair this kettle.
12. Keep the kettle and cord/cable away from heat, direct sunlight, water, moisture, sharp edges and the like.
13. Use only original accessories, do not connect incompatible products.
14. Do not use the kettle outdoors.
15. The base and exterior of the kettle are not water-resistant, keep it dry at all times.
16. Under no circumstances must the kettle be placed in water or any liquid or come in contact with liquid. Do not handle the kettle with wet or moist hands. Should the kettle become wet or moist, remove the main plug from the socket immediately.
17. DO NOT touch the contents of the kettle.
18. Use the kettle only for its intended purpose.
19. The kettle is only to be used with the stand provided.
20. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.

OPERATION

- Use only cold water when filling the device.
- The water level must be between the MAX. and MIN. marks.
- Switch the kettle off before removing it from the base.
- Always ensure that the lid is tightly closed.
- The base and exterior of the kettle must not become wet.
- Kettle body used must match with the kettle base.

FIRST USE

Before using the kettle for the first time, fill the kettle with cold water and boiled it twice without any additives.

1. Fill the kettle with water. Do not overfill. Use the water level indicator.
2. Place the kettle on the base.
3. Electrical connection
 - Check whether the electrical voltage which you intend to use is the same as that of the kettle. Details can be found on the label on the base of the kettle.
 - Only connect the kettle to a properly installed 220-240V-50/60Hz socket.
4. Switch the kettle to position '1'. The control lamp on the water indicator shows that the water is being boiled.
5. After boiling, the kettle switches off automatically.
 - Disconnect the kettle from the mains electricity supply.
 - Do not open the lid when pouring.
6. This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
7. Avoid water spillage on connector during use.
8. Warning: If the kettle is overfilled ,boiling water may be ejected.
9. Warning: Potential injury from misuse. The heating element surface is subject to residual heat after use.

CLEANING

- Always remove the plug from the mains supply before cleaning the kettle.
- The exterior of the kettle should be cleaned, if necessary, with a slightly damp cloth without additives.
- The calcium filter can be removed for cleaning

WARRANTY

We hereby warranty our Water Kettle model MWK1.5L-CRW in a period of 1 (one) year.