
gorenje

Life Simplified

Instruction Manual

Cooker Hood

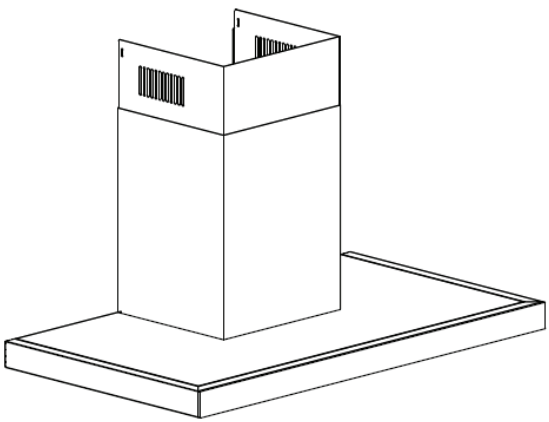

Applicable Model:

WHT94ABG

WHT94AXGB

Please carefully read and properly retain this manual before using the machine

EN

Contents

1 .....Safety instructions

3 ..... Installation

7 .....Start using your cooker hood

9 ..... Troubleshooting

10..... Maintenance and cleaning

13.....Environment protection

SAFETY INSTRUCTIONS

This manual explains the proper installation and use of your cooker hood, please read it carefully before using even if you are familiar with the product. The manual should be kept in a safe place for future reference.

Never to do:

- Do not try to use the cooker hood without the grease filters or if the filters are excessively greasy!
- Do not install above a cooker with a high level grill.
- Do not leave frying pans unattended during use because overheated fats or oils might catch fire.
- Never leave naked flames under the cooker hood.



- If the cooker hood is damaged, do not attempt to use.
- Do not flambé under the cooker hood.
- CAUTION: Accessible parts may become hot when used with cooking appliances.
- The minimum distance between the supporting surface for the cooking vessels on the hob and the lowest part of the cooker hood. (When the cooker hood is located above a gas appliance, this distance shall be at least 65 cm)
- The air must not be discharged into a flue that is used for exhausting fumes from appliances burning gas or other fuels. Cooker hoods and other cooking fume extractors may adversely affect the safe operation of appliances burning gas or other fuels (including those in other rooms) due to back flow of combustion gases. These gases can potentially result in carbon monoxide poisoning. After installation of a cooker hood or other cooking fume extractor, the operation of open flued gas appliances should be tested by a competent person to ensure that back flow of combustion gases does not occur.



Always to do:

- Important! Always switch off the electricity supply at the mains during installation and maintenance such as light bulb replacement.
- The cooker hood must be installed in accordance with the installation instructions and all measurements followed.
- All installation work must be carried out by a competent person or qualified electrician.
- Please dispose of the packing material carefully. Children are vulnerable to it.
- Pay attention to the sharp edges inside the cooker hood especially during installation and cleaning.
- Make sure the ducting has no bends sharper than 90 degrees as this will reduce the efficiency of the cooker hood.
- Warning: Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.
- Warning: Before obtaining access to terminals, all supply circuits must be disconnected.
- If the voltage rating of the lamp is less than the rated voltage of the appliance, the voltage rating of the lamp shall also be marked on or near the lampholder.

Always to do:

- Always put lids on pots and pans when cooking on a gas cooker.
- When in extraction mode, air in the room is being removed by the cooker hood. Please make sure that proper ventilation measures are being observed. The cooker hood removes odours from room but not steam.
- There shall be adequate ventilation of the room when the cooker hood is used at the same time as appliances burning gas or other fuels.
- Cooker hood is for domestic use only.



- If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety
- Children should be supervised to ensure that they do not play with the appliance.
- This appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.



Always to do:

- Caution: The appliance and its accessible parts can become hot during operation. Be careful to avoid touching the heating elements. Children younger than 8 years old should stay away unless they are under permanent supervision.
- There is a fire risk if cleaning is not carried out in accordance with the instructions.
- Regulations concerning the discharge of air have to be fulfilled.
- Clean your appliance periodically by following the method given in the chapter MAINTENANCE.
- For safety reason, please use only the same size of fixing or mounting screw which are recommended in this instruction manual.
- Regarding the details about the method and frequency of cleaning, please refer to maintenance and cleaning section in the instruction manual.
- Regarding the information about how the appliance is to be fixed to its support, please refer to Operation section, the Installation procedures in this manual.
- Cleaning and user maintenance shall not be made by children without supervision.
- When the cooker hood and appliances supplied with energy other than electricity are simultaneously in operation, the negative pressure in the room must not exceed 4 Pa (4 x 10-5 bar).
- WARNING: Danger of fire: do not store items on the cooking surfaces.
- A steam cleaner is not to be used.
- NEVER try to extinguish a fire with water, but switch off the appliance and then cover flame e.g. with a lid or a fire blanket.


INSTALLATION (VENT OUTSIDE)

MOUNTING OF THE V-FLAP

If the cooker hood does not have an assembled V-flap 1, you should mount the half-parts to its body. The images only show an example of how to mount the V-flap, because the outlet may vary according to different models and configurations.


To mount the V-flap 1 you should:

- Mount two half-parts 2 into the body 6;
- the pin 3 should be top oriented;
- the axis 4 should be inserted into the holes 5 on the body;
- repeat all the operations for the 2nd half-part.

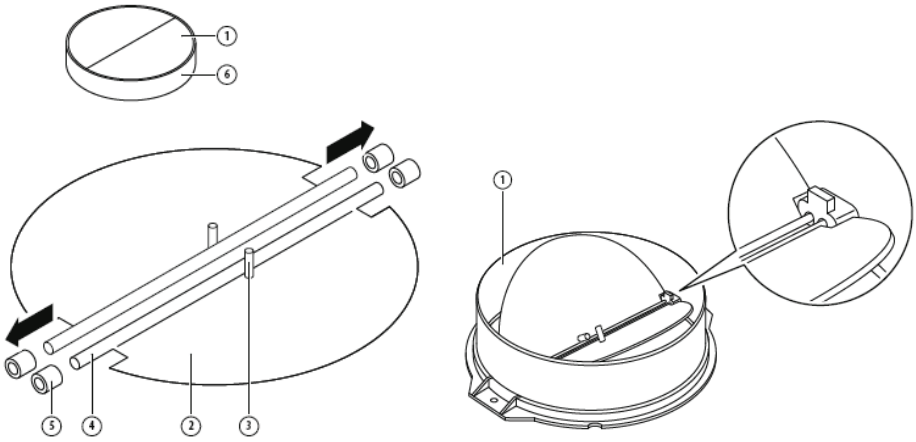


INSTALLATION


If you have an outlet to the outside, your cooker hood can be connected as below picture by means of an extraction duct (enamel, aluminium, flexible pipe or non-flammable material with an interior diameter of 150mm)

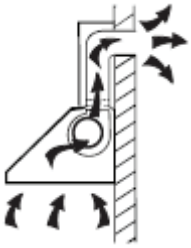

1. Before installation, turn the unit off and unplug it from the outlet.

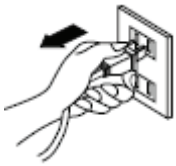


2. The cooker hood should be placed at a distance of 65~75cm above the cooking surface for best effect. See pic 1.

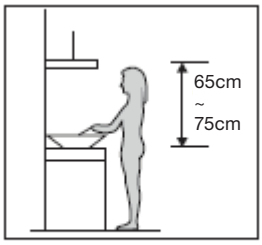


Pic 1

3. Drill 9pcs holes on the wall after the installation height is confirmed and insert 9pcs wall plugs into the holes.Use 5pcs screws ST4x40mm to fix the hook and inside chimney bracket on the wall, and make sure to maintain a horizontal balance when installing. See pic 2 for details.

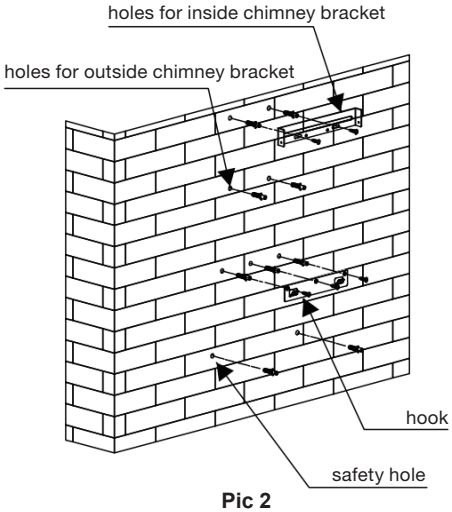


Pic 2

4. Install v-flap onto the air outlet,then secure the air outlet assembly onto the cooker hood by 4pcs screws ST4x8mm,and then fix expansion pipe onto the air outlet with cable tie.Fix the cooker hood onto the hook and secure the appliance on the wall by 2pcs safety screws ST4x30mm. See pic 3 & 4 & 6.

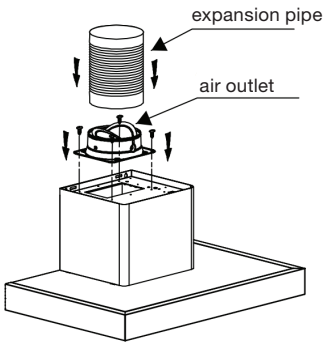


Pic 3

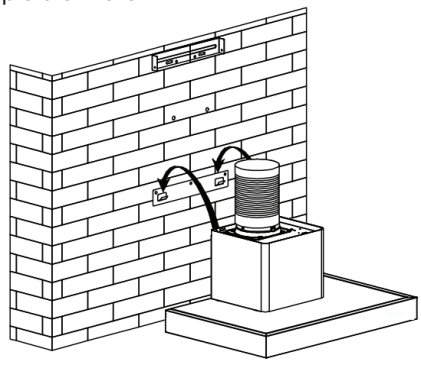


Pic 4

5. Use 2pcs screws ST4*8mm to fix the outside chimney bracket onto the outside chimney and be sure that the inside chimney can be adjusted the height in it freely. After assembling,fix the chimney assembly onto the wall by 2pcs screws ST4x-40mm. See pic 6.

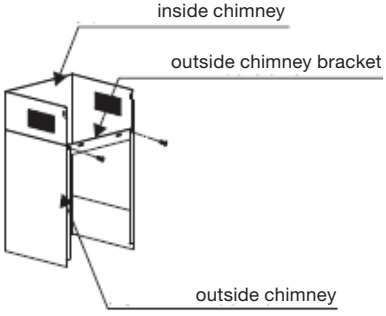


Pic 5

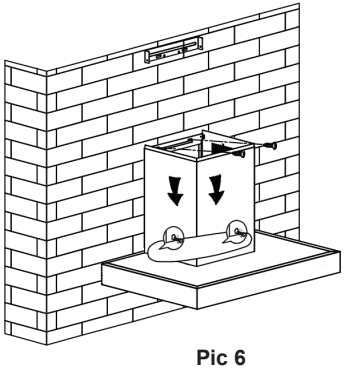

Pic 6

6. Lead expansion pipe to wall outlet,rise the inside chimney and fix it to inside chimney bracket by 2pcs screws ST4x8mm. See pic 7.

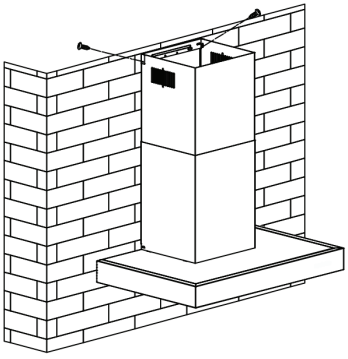


Pic 7

HINTS FOR EXHAUST DUCT INSTALLATION

The following rules must be strictly followed to obtain optimal air extraction:

- Keep expansion pipe short and straight.
- Do not reduce the size or restrict the expansion pipe.
- When using the expansion pipe always install the pipe pulled taut to minimize pressure loss.
- Failure to observe these basic instructions will reduce the performance and increase noise levels of the cooker hood.
- Any installation work must be carried out by a qualified electrician or competent person.
- Do not connect the ducting system of the hood to any existing ventilation system which is being used for any other appliance ,such as warmer tube, gas tube , hot wind tube.
- The angle of the bend of the expansion pipe should not be less than 120º; you must direct the pipe horizontally, or, alternatively, the pipe should go up from the initial point and should be led to an outer wall.
- After the installation ,make sure that the cooker hood is level to avoid grease collection at on end.
- Ensure the expansion pipe selected for installation complies with relevant standards and is fire retardant.

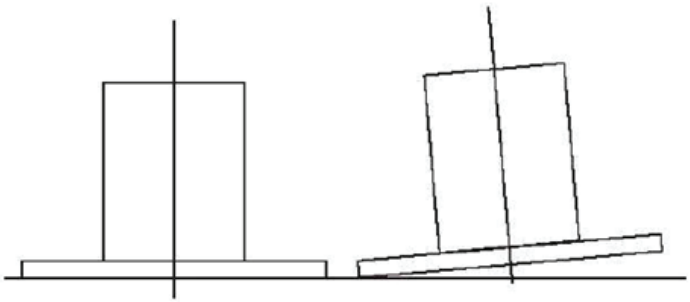


RIGHT WRONG

WARNING:	
	➢ For safety reason, please use only the same size of fixing or mounting screws which are recommended in this instruction manual. ➢ Failure to install the screws or fixing device in accordance with these instructions may result in electrical hazards.

Start Using Your Cooker Hood

Touch control with LED display

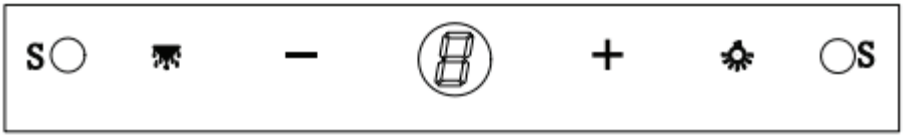

There are five touch buttons: (Heat auto clean/Delay), (Decrease), (Power), (Increase), (Lamp).See Pic above.

1. Power on: After connecting to power, all indicator lights will lit on, all the output close and the hood will enter standby mode, and then enter the backlight state after two seconds.The indicator light will be off automatically if no operation in 2 mins.

2. (Power) button:

2.1 Press power button once, the indicator lights of function keys(increase, decrease, heat auto clean and lamp) will lit on, LED display will show “0” and the hood will enter operation mode. Press power button again, all indicator lights of function keys will be off, and all function operation for the hood will close. The hood enters into standby mode. The above steps can be operated repeatedly. All the function buttons can only operate when entering the working status.

3. (Lamp) button:

3.1 Press lamp button “ ”once, the indicator light of button and the light will be on. Press again, the light will be off. The indicator light of the button will change to backlight mode and run circularly.

4. Increase button “ ”, the hood has 3 speeds,they are low,middle and high.

4.1 Press Increase button once, the indicator light of button will be on and the indicator light of decrease button will at backlight status. The cooker hood starts to work at low speed. The LED display will show “1”,

4.2 Press Increase button again when it is working at the low speed, the cooker hood works at mid speed and the LED display will show “2”,

4.3 Press Increase button again when it is working at the mid speed, the cooker hood works at high speed and the LED display will show “3”.

4.4 When the cooker hood works at high speed,press again, the hood will still work at high speed.

5. (Decrease) button:

5.1 Press decrease button “ ”, the cooker hood will decrease one speed.

Press (Decrease) button when it works at high speed, the cooker hood works at middle

speed. The indicator lights of the (Decrease) button will be on and the indicator lights of the (Increase) button will be at the backlight status.
Press (Decrease) button when it works at mid speed, the cooker hood will work at the low speed. The indicator lights remains the same. The displays show the current gear status.
If continuously reducing to no speed, the LED display will show “0”, the cooker hood will turn off and the indicator light of the Decrease button will change to backlight status.

6. (Heat auto clean/Delay)button
6.1 The heat auto clean/delay button functions as a delay timer when the cooker hob operates at any speed level. (The delay button is inactive when the light button is on). Press the heat auto clean/delay button once to set a 5-minute timer. The indicator light will illuminate.Press the button again to cancel the delay function and the light will turn off. This setting can be cycled repeatedly. When the delay time elapses, the cooker hob and lighting will automatically turn off.
6.2 If you adjust the cooker hob’s speed level after setting the delay function, the delay function will automatically cancel.
6.3 When the cooker hob is not operating at any speed level, the heat auto clean/delay button activates the heat auto clean function. Press the button once to initiate heat auto clean (indicator light on). Press again to exit the function (indicator light off). This cycle is repeatable.
6.3.1 During heat auto clean operation: The cooker hob first heats for 9 minutes before stopping the heating function. The motor then automatically runs at high speed for 60 seconds before shutting down, simultaneously exiting the heat auto clean function (indicator light turns off).
7. Gesture sensor mode:

7.1 Wave your hand once from left to right, maintaining a distance over 10cm from the sensor surface. The cooker hood will start to work at low speed and the LED display will show “1”.
The lights will lit on. The indicator light of the (Increase) , (Lamp) button button will be on. The indicator light of the (Decrease), (Heat auto clean) button will be at backlight status.
Wave your hand from left to right again ,the cooker hood works at mid speed and the LED display will show “2”.
Wave your hand in the same direction as above for another time, the cooker hood works at high speed and the LED display will show “3”. And the indicator light of the Increase/Lamp/Decrease and Heat auto clean button remains the same. Wave your hand in the same way again when the hood works at the highest speed, the hood will work at the same speed.
7.2 When wave your hand from right to left once ,the cooker hood will shift to a lower speed. When the hood work at high speed, wave your hand from right to left ,the hood will switch to mid speed and the LED display will show “2”. The indicator light of the (Decrease) , (Lamp) button button will be on. The indicator light of the (Increase) , (Heat auto clean) button will be at backlight status.
When the hood work at mid speed, wave your hand from right to left ,the hood will switch to low speed,and the LED display will show “1”. And the indicator light remains the same. If continuously reducing to no speed, the indicator light will be off. All the function operation of the hood will not be available. The hood will then enter standby mode. The above steps can be operated repeatedly.
7.3 If without any operation for functional buttons, the gesture sensor will enter sleeping mode after 10 minutes. Re-awake gesture function requires manual operation of any function buttons. The gesture function can be operated only when it has been activated.


TROUBLESHOOTING

Fault	Possible Cause	Solution
Light on, but motor does not work	Fan switch turned off	Select a fan switch position.
	Fan switch failed	Contact service center.
	Motor failed	Contact service center.
Light does not work, motor does not work	House fuses blown	Reset/Replace fuses.
	Mains power cable is loose or disconnected	Refit mains power cable to power outlet. Switch power outlet on.
Oil leakage	One way valve and the outlet are not tightly sealed	Take down the one way valve and seal with sealant.
	Leakage from the connection of chimney and cover	Take chimney down and seal.
Lights not working	Broken or faulty bulbs	Replace blubs as per this instruction.
Insufficient suction	The distance between the cooker hood and the gas top is too far	Refit the cooker hood to the correct distance.
The Cooker hood inclines	The fixing screw is not tight enough	Tighten the hanging screw and make it horizontal.

NOTE:
Any electrical repairs to this appliance must conform to your local, state and federal laws. Please contact the service centre if in any doubt before undertaking any of the above. Always disconnect the unit from the power source when opening the unit.

MAINTENANCE AND CLEANING

Caution:

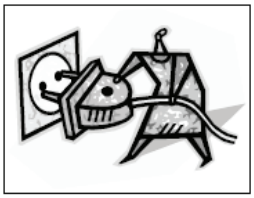

- Before maintenance or cleaning is carried out, the cooker hood should be disconnected from the mains power supply. Ensure that the cooker hood is switched off at the wall socket and the plug removed.
- External surfaces are susceptible to scratches and abrasions, so follow the cleaning instructions to ensure the best possible result is achieved without damage.

GENERAL

Cleaning and maintenance should be carried out with the appliance cold especially when cleaning.Avoid leaving alkaline or acid substances (lemon juice, vinegar etc.) on the surfaces.

STAINLESS STEEL

The stainless steel must be cleaned regularly (e.g.weekly) to ensure a long life expectancy.Dry with a clean soft cloth. A specialized stainless steel cleaning fluid may be used.

NOTE:

Ensure that wiping is done along with the grain of the stainless steel to prevent any unsightly crisscross scratching patterns from appearing.

CONTROL PANEL SURFACE

The inlay control panel can be cleaned using warm soapy water. Ensure the cloth is clean and well wrung before cleaning. Use a dry soft cloth to remove any excess moisture left after cleaning.

Important

Using neutral detergents and avoid using harsh cleaning chemicals, strong household detergents or products containing abrasives,as this will affect the appearance of the appliance appearance and potentially remove any printing of artwork on the control panel and will void manufactures warrantee.

THE OIL CUP

- Your cooker hood includes a unique oil cup which collects the oil that is deposited on the grease filters.
- When the oil cup is about 2/3 full the oil cup needs to be cleaned.
- Take away the oil cup, by slightly pulling the oil cup forwards to release it from the cooker hood.
- Discard the oil before cleaning the cup.
- Ensure the cup has been cleaned and dried before reattaching to the cooker hood.


GREASE MESH FILTERS

Immerse the filter in water at around 40-50°C, pour in cleaning agent, soaking for about 2-3 minutes, and then brush the filter with a soft brush. Do not apply too much pressure, avoid to damage it .

The filter can be washed in a dishwasher. Put the filter into the dishwasher, add cleaning agent, and adjust the temperature to around 60°C for washing.
All filters are made of metal, please do not use cleaning agents that have a corrosive effect on metal products when cleaning.

NOTE:
Please make sure the power is turned off when cleaning the appliance.

The disassembly order of filter is shown in the figure below:

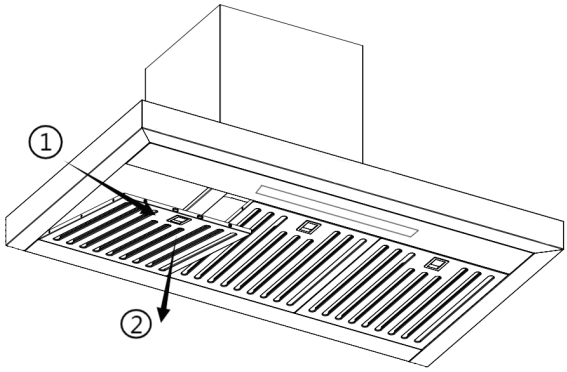


INSTALLING GREASE MESH FILTERS

- To install filters for the following four steps:
- Angle the filter into the slots at the back of the hood.
- Push the button on the handle of the filter.
- Release the handle once the filter fits into a resting position.
- Repeat to install all filters.

CARBON FILTER


Activated carbon filter can be used to trap odors. Normally the activated carbon filter should be changed every 3 to 6 months according to your cooking habits. The installation procedure of the activated carbon filter is as below:

1. Remove the grease filter(s).

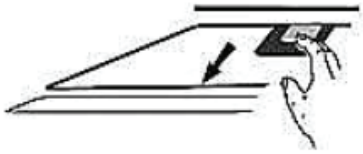



2. Hook the carbon filter over the pins that are located at the end of the motor.
3. Turn the carbon filter anticlockwise, until you feel it click into place.

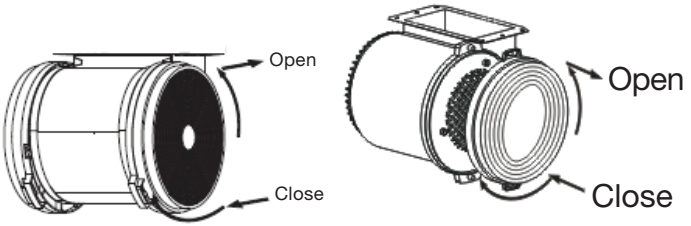


※ Repeat this process for the second carbon filter. You need to place a carbon filter at either end of the motor.
※ Refit the motor access panel and fully tighten the screws that you removed previously.
※ Refit the lower and upper chimney sections to the main body of the hood.

NOTE:
- Make sure the filter is securely locked. Otherwise, it would loosen and cause danger.
- When activated carbon filter attached, the suction power will be lowered.

BULB REPLACEMENT

Important :	✧ The bulb must be replaced by the manufacturer, its service agent or similarly qualified persons. ✧ Always switch off the electricity supply before carrying out any operations on the appliance. When handling bulb, make sure it has completely cooled down before any direct contact with hands. ✧ When handling bulbs hold with a cloth or gloves to ensure perspiration does not come in contact with the bulb as this can reduce the life of the bulb.

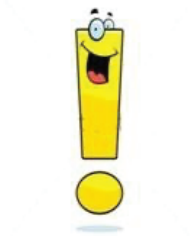



Note:
- Before changing the lights, make sure that the appliance is turned off and unplugged.
- Protect against danger when changing lights, such as wearing gloves.


Changing the lights:

➢ Remove the grease filter.
➢ Use screwdriver to unscrew 2pcs ST4*8mm on both sides of lamp plate and then dismantle the lamp plate.
➢ Use cross screwdriver to unscrew the screw on lamp,unplug the buckle with appropriate force,take out the lamp base and dismantle the terminal of the light connecting wire.
➢ Apply the reverse procedure to install the light back.

ILCOS D code for this lamp is: DSS-3.5/30-S-320/45.2
– LED modules– rectangle lamp
– Max wattage: 1×3.5 W
– Voltage range: DC12V
– Dimensions:



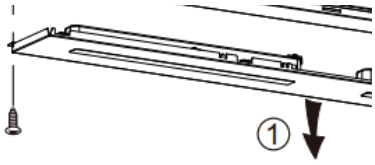

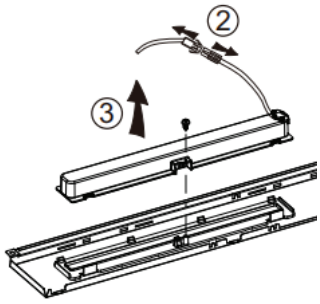

ENVIRONMENTAL PROTECTION:

	This product is marked with the symbol on the selective sorting of waste electronic equipment. This means that this product must not be disposed of with household waste but must be supported by a system of selective collection in accordance with Directive 2012/19/EU. It will then be recycled or dismantled to minimize impacts on the environment, electrical and electronic products are potentially dangerous for the environment and human health due to the presence of hazardous substances.For more information, please contact your local or regional authorities.

NOTE:

The following shows how to reduce total environmental impact (e.g. energy use) of the cooking process).

(1) Install the cooker hood in a proper place where there is efficient ventilation.
(2) Clean the cooker hood regularly so as not to block the airway.
(3) Remember to switch off the cooker hood light after cooking.
(4) Remember to switch off the cooker hood after cooking.

INFORMATION FOR DISMANTLING


Do not dismantle the appliance in a way which is not shown in the user manual. The appliance could not be dismantled by user. At the end of life, the appliance should not be disposed of with household waste. Check with your Local Authority or retainer for recycling advice.

gorenje
Life Simplified

gorenje

Life Simplified

คู่มือการใช้งาน
เครื่องดูดควัน

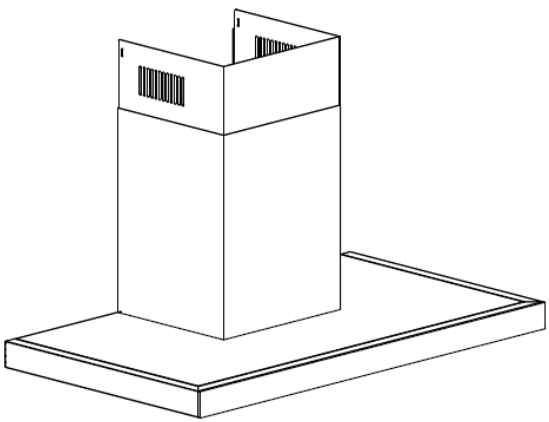

รุ่นที่ใช้ได้:

WHT94ABG

WHT94AXGB

โปรดอ่านคู่มือนี้อย่างละเอียดและเก็บไว้ใช้อ้างอิงก่อนใช้งานเครื่อง

TH

สารบัญ

1 ..... คำแนะนำด้านความปลอดภัย

3 ..... การติดตั้ง

7 ..... เริ่มต้นใช้งานเครื่องดูดควัน

9 ..... การแก้ไขปัญหา

10 ..... การบำรุงรักษาและการทำความสะอาด

13 ..... การปกป้องสิ่งแวดล้อม

คำแนะนำด้านความปลอดภัย

คู่มือนี้อธิบายวิธีการติดตั้งและการใช้งานเครื่องดูดควันอย่างถูกต้อง โปรดอ่านโดยละเอียดก่อนใช้งาน แม้ว่าคุณจะคุ้นเคยกับผลิตภัณฑ์แล้วก็ตาม โปรดเก็บคู่มือนี้ไว้ในที่ปลอดภัยเพื่อใช้อ้างอิงในอนาคต

ข้อห้ามในการใช้งาน:

- ห้ามใช้งานเครื่องดูดควันโดยไม่มีแผ่นกรองไขมัน หรือเมื่อแผ่นกรองมีไขมันสะสมมากเกินไป!
- ห้ามติดตั้งเครื่องดูดควันเหนือเตาที่มีเตาย่างความร้อนสูง
- ห้ามทอดอาหารทิ้งไว้โดยไม่มีผู้ดูแล เพราะน้ำมันหรือไขมันที่ร้อนจัดอาจติดไฟได้
- ห้ามปล่อยให้มีเปลวไฟโดยตรงใต้เครื่องดูดควัน



- หากเครื่องดูดควันชำรุดเสียหาย ห้ามพยายามใช้งาน
- อย่าจุดไฟใต้เครื่องดูดควัน
- ข้อควรระวัง: ชิ้นส่วนที่สามารถสัมผัสได้อาจร้อนขึ้นขณะใช้งานร่วมกับอุปกรณ์ประกอบอาหาร
- ระยะห่างขั้นต่ำระหว่างพื้นผิวรองภาชนะบนเตา กับส่วนที่ต่ำที่สุดของเครื่องดูดควัน (หากติดตั้งเครื่องดูดควันเหนือเตาแก๊ส ต้องมีระยะห่างไม่น้อยกว่า 65 ซม.)
- อากาศที่ดูดออกไปต้องไม่ถูกระบายเข้าสู่ปล่องระบายควันที่ใช้ระบายไอเสียจากอุปกรณ์ที่เผาไหม้ด้วยแก๊สหรือเชื้อเพลิงอื่นๆเครื่องดูดควันและอุปกรณ์ดูดควันจากการทำอาหารอื่นๆ อาจส่งผลเสียต่อการทำงานที่ปลอดภัยของอุปกรณ์ที่เผาไหม้ด้วยแก๊สหรือเชื้อเพลิงอื่นๆ (รวมถึงอุปกรณ์ที่อยู่ในห้องอื่น) เนื่องจากการไหลย้อนกลับของก๊าซจากการเผาไหม้ ก๊าซเหล่านี้อาจทำให้เกิดพิษคาร์บอนมอนอกไซด์ได้ หลังจากติดตั้งเครื่องดูดควันหรืออุปกรณ์ดูดควันจากการทำอาหารอื่นๆ ควรให้ผู้เชี่ยวชาญทำการตรวจสอบการทำงานของอุปกรณ์แก๊สที่มีปล่องเปิด เพื่อให้แน่ใจว่าจะไม่เกิดการไหลย้อนกลับของก๊าซจากการเผาไหม้



ข้อควรปฏิบัติ:

- ข้อสำคัญ! ควรปิดสวิตช์จ่ายไฟที่แหล่งจ่ายหลักทุกครั้งก่อนทำการติดตั้งหรือบำรุงรักษา เช่น การเปลี่ยนหลอดไฟ
- ต้องติดตั้งเครื่องดูดควันตามคำแนะนำการติดตั้ง และปฏิบัติตามข้อกำหนดการวัดทั้งหมด
- การติดตั้งทั้งหมดต้องดำเนินการโดยผู้ที่มีความชำนาญหรือช่างไฟฟ้าที่มีคุณสมบัติเหมาะสม
- โปรดทิ้งวัสดุบรรจุภัณฑ์อย่างระมัดระวัง เนื่องจากเด็กอาจได้รับอันตรายจากวัสดุเหล่านี้
- โปรดระวังขอบคมภายในเครื่องดูดควัน โดยเฉพาะระหว่างการติดตั้งและทำความสะอาด
- ตรวจสอบให้แน่ใจว่าท่อระบายอากาศไม่มีส่วนโค้งที่หักมุมเกินเกิน 90 องศา เพราะจะทำให้ประสิทธิภาพของเครื่องดูดควันลดลง
- คำเตือน: การไม่ติดตั้งสกรูหรืออุปกรณ์ยึดตามคำแนะนำเหล่านี้ อาจทำให้เกิดอันตรายจากไฟฟ้าได้
- คำเตือน: ก่อนเข้าถึงขั้วไฟฟ้า ต้องตัดวงจรจ่ายไฟทั้งหมดออกก่อนทุกครั้ง
- หากแรงดันไฟฟ้าของหลอดไฟต่ำกว่าแรงดันไฟฟ้าของเครื่องใช้ไฟฟ้า
  ต้องมีการระบุแรงดันไฟฟ้าของหลอดไฟไว้ที่ตัวหรือใกล้กับขั้วหลอดไฟด้วย

ข้อควรปฏิบัติ:

- ควรปิดฝาหม้อและกระทะเสมอเมื่อปรุงอาหารด้วยเตาแก๊ส
- เมื่อใช้งานในโหมดดูดอากาศ อากาศภายในห้องจะถูกดูดออกโดยเครื่องดูดควัน โปรดตรวจสอบให้แน่ใจว่ามีการระบายอากาศที่เหมาะสม เครื่องดูดควันจะช่วยขจัดกลิ่นในห้อง แต่ไม่สามารถขจัดไอน้ำได้
- ต้องมีการระบายอากาศที่เพียงพอในห้องเมื่อใช้งานเครื่องดูดควันร่วมกับอุปกรณ์ที่ใช้แก๊สหรือเชื้อเพลิงอื่นๆ
- เครื่องดูดควันออกแบบมาเพื่อใช้ในครัวเรือนเท่านั้น



- หากสายไฟชำรุดเสียหาย ต้องทำการเปลี่ยนสายโดยผู้ผลิต ตัวแทนด้านบริการ หรือช่างผู้เชี่ยวชาญ เพื่อป้องกันไม่ให้เกิดอันตราย
- เครื่องใช้ไฟฟ้านี้ไม่ได้ออกแบบมาให้ใช้งานได้สำหรับบุคคล (รวมทั้งเด็ก) ที่มีความบกพร่องในสมรรถภาพทางกายประสาทสัมผัส หรืออาการทางจิต หรือขาดประสบการณ์และความรู้ เว้นแต่จะได้รับการควบคุมดูแลขณะใช้งานหรือ ได้รับคำแนะนำในการใช้จากผู้รับผิดชอบต่อความปลอดภัยของบุคคลดังกล่าว
- เด็กควรได้รับการควบคุมดูแลไม่ให้เล่นอุปกรณ์นี้
- เด็กที่มีอายุตั้งแต่ 8 ปีขึ้นไป และบุคคลที่มีสภาพร่างกาย การรับรู้ หรือสภาพจิตใจไม่ปกติ หรือขาดความรู้และประสบการณ์สามารถใช้เครื่องปรับอากาศนี้ได้ แต่ต้องมีการควบคุมดูแลหรือได้รับคำแนะนำเกี่ยวกับการใช้งานอุปกรณ์ในวิธีที่ปลอดภัย และเข้าใจถึงอันตรายที่อาจเกิดขึ้น ไม่ควรให้เด็กเล่นอุปกรณ์นี้ ไม่ควรให้เด็กเป็นผู้ทำความสะอาดและบำรุงรักษาเครื่องนี้ โดยที่ไม่มีการควบคุมดูแล



ข้อควรปฏิบัติ:

- ข้อควรระวัง: ตัวเครื่องและส่วนที่สามารถสัมผัสได้อาจร้อนขณะใช้งาน โปรดระมัดระวังอย่าสัมผัสชิ้นส่วนที่มีความร้อน เด็กที่มีอายุต่ำกว่า 8 ปีไม่ควรเข้าใกล้ เว้นแต่จะอยู่ภายใต้การดูแลอย่างใกล้ชิดตลอดเวลา
- อาจมีความเสี่ยงจากไฟไหม้ได้หากไม่ทำความสะอาดตามคำแนะนำ
- ต้องปฏิบัติตามกฎระเบียบที่เกี่ยวข้องกับการระบายอากาศ
- ทำความสะอาดเครื่องใช้ไฟฟ้าเป็นระยะ โดยปฏิบัติตามวิธีการที่ระบุไว้ในหัวข้อ “การบำรุงรักษา”
- เพื่อความปลอดภัย โปรดใช้เฉพาะสกรูยึดหรือสกรูสำหรับติดตั้งขนาดเดียวกัน ที่แนะนำไว้ในคู่มือการใช้งานนี้เท่านั้น
- สำหรับรายละเอียดเกี่ยวกับวิธีการและความถี่ในการทำความสะอาด โปรดอ้างอิงหัวข้อ “การบำรุงรักษาและการทำความสะอาด” ในคู่มือการใช้งาน
- สำหรับข้อมูลเกี่ยวกับวิธีการยึดเครื่องเข้ากับอุปกรณ์รองรับ โปรดดูในหัวข้อ “การใช้งาน” และ “ขั้นตอนการติดตั้ง” ในคู่มือนี้
- ไม่ควรให้เด็กเป็นผู้ทำความสะอาดและบำรุงรักษาเครื่องนี้ โดยที่ไม่มีการควบคุมดูแล
- เมื่อเครื่องดูดควันและอุปกรณ์ที่ใช้พลังงานอื่นนอกเหนือจากไฟฟ้ามีการทำงานพร้อมกัน ความดันลบภายในห้องต้องไม่เกิน 4 Pa (4 x 10-5 bar)
- คำเตือน: อันตรายจากไฟ: อย่าเก็บสิ่งของไว้บนพื้นผิวสำหรับประกอบอาหาร
- ไม่ควรใช้เครื่องทำความสะอาดแบบไอน้ำ
- ห้ามพยายามดับไฟด้วยน้ำ ควรปิดเครื่อง และใช้ฝาหม้อหรือผ้าดับเพลิงปิดเปลวไฟแทน


การติดตั้ง (ระบายอากาศออกสู่ภายนอก)

การติดตั้งแผ่น V-Flap

หากเครื่องดูดควันไม่มีแผ่น V-Flap 1 ติดตั้งมาจากโรงงาน คุณจะต้องติดตั้งแผ่น V-Flap ที่แยกเป็นสองส่วนเข้ากับตัวเครื่อง ภาพประกอบที่แสดงเป็นเพียงตัวอย่างวิธีการติดตั้ง V-Flap เท่านั้น เนื่องจากช่องทางการระบายอากาศอาจแตกต่างกันไปตามรุ่นและรูปแบบของเครื่อง


ขั้นตอนการติดตั้ง V-Flap 1 มีดังนี้:

- ติดตั้งส่วนครึ่งสองชิ้น 2 เข้ากับตัวเครื่อง 6
- หมุดยึด 3 ควรชี้ไปด้านบน
- แกนหมุน 4 ควรสอดเข้าในรู 5 บนตัวเครื่อง
- ทำซ้ำขั้นตอนทั้งหมดสำหรับส่วนครึ่งชิ้นที่สอง

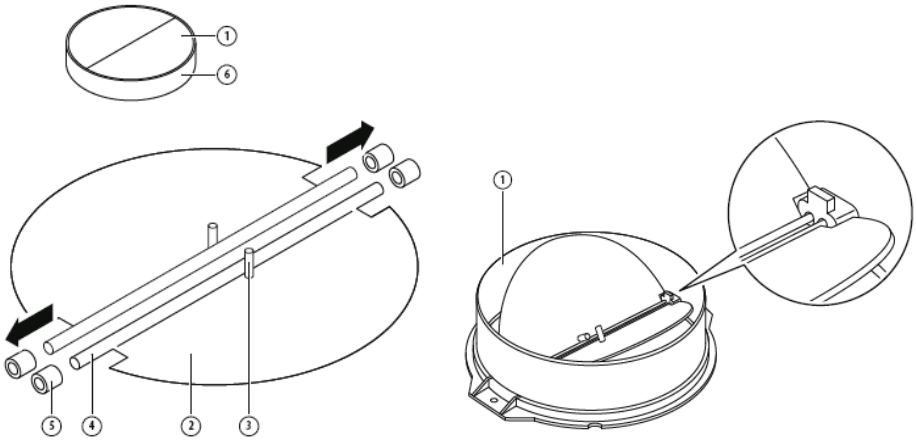


การติดตั้ง


หากมีช่องระบายอากาศออกสู่ภายนอก เครื่องดูดควันของคุณสามารถเชื่อมต่อได้ตามภาพด้านล่าง โดยใช้ท่อดูดอากาศ (อาจเป็นท่อเคลือบ อะลูมิเนียม ท่ออ่อน หรือวัสดุที่ไม่ติดไฟ) ที่มีเส้นผ่านศูนย์กลางภายในขนาด 150 มม.

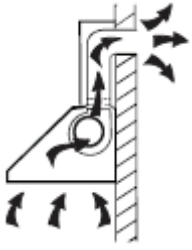

1. ก่อนติดตั้ง โปรดปิดเครื่องและถอดปลั๊กออกจากเต้ารับ

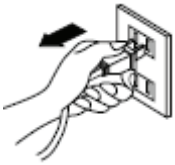


2. ควรติดตั้งเครื่องดูดควันให้ห่างจากพื้นผิวเตาในระยะ 65~75 ซม. เพื่อประสิทธิภาพสูงสุด ดูรูปที่ 1

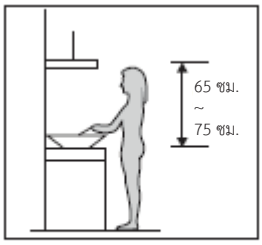


รูปที่ 1

3. หลังจากยืนยันความสูงในการติดตั้งแล้ว ให้เจาะรู 9 รู บนผนัง และใส่พุกผนัง 9 ตัว ลงในรูจากนั้นใช้สกรูขนาด ST4x40 มม. จำนวน 5 ตัว ยึดขอแขวนและขายึดปล่องควันด้านในเข้ากับผนัง โดยต้องตรวจสอบให้แน่ใจว่าอยู่ในแนวระนาบขณะติดตั้ง ดูรูปที่ 2 สำหรับรายละเอียด

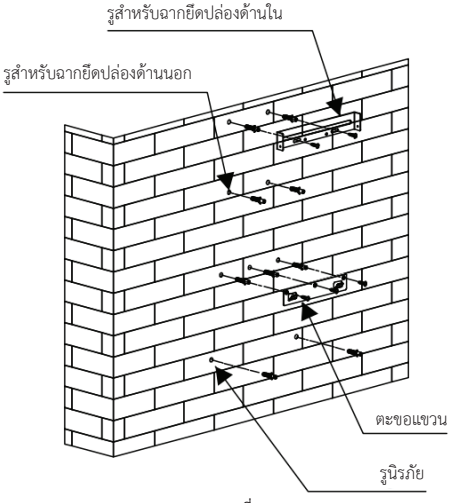


รูปที่ 2

4. ติดตั้งแผ่น V-flap เข้ากับช่องระบายอากาศ จากนั้นยึดชุดช่องระบายอากาศเข้ากับเครื่องดูดควันโดยใช้สกรู ST4x8 มม. จำนวน 4 ตัว แล้วยึดท่อขยายเข้ากับช่องระบายอากาศโดยใช้สายรัดเคเบิลยึดเครื่องดูดควันเข้ากับขอแขวน และยึดเครื่องเข้ากับผนังโดยใช้สกรูนิรภัย ST4x30 มม. จำนวน 2 ตัว ดูรูปที่ 3, 4 และ 6

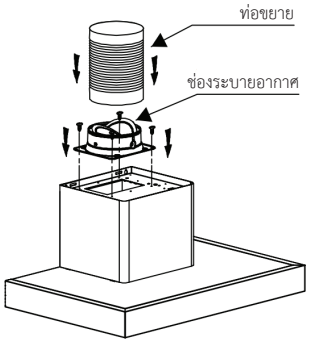


รูปที่ 3

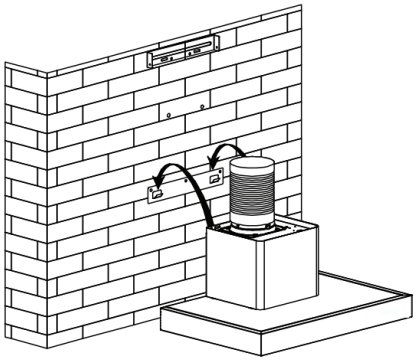


รูปที่ 4

5. ใช้สกรู ST4x8 มม. จำนวน 2 ตัว เพื่อยึดขายึดปล่องควันด้านนอกเข้ากับปล่องควันด้านนอก แและตรวจสอบให้แน่ใจว่าปล่องควันด้านในสามารถปรับความสูงได้อย่างอิสระหลังจากประกอบเสร็จแล้ว ให้ยึดชุดปล่องควันเข้ากับผนังโดยใช้สกรูขนาด ST4x40 มม. จำนวน 2 ตัว ดูรูปที่ 6

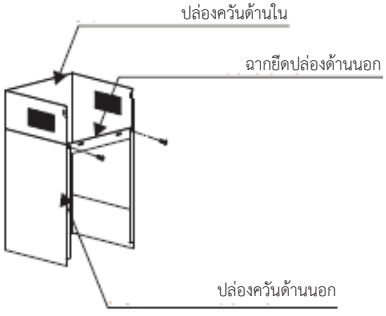


รูปที่ 5

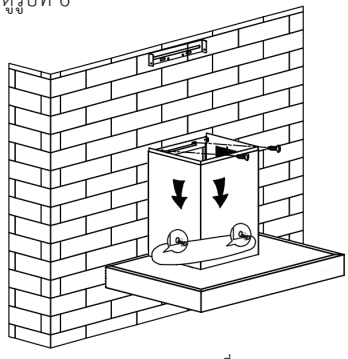

รูปที่ 6

6. ต่อท่อขยายเข้ากับช่องระบายอากาศบนผนัง ยกปล่องควันด้านในขึ้น และยึดเข้ากับขายึดปล่องควันด้านในด้วยสกรู 2 ตัว ขนาด ST4x8 มม. ดูรูปที่ 7

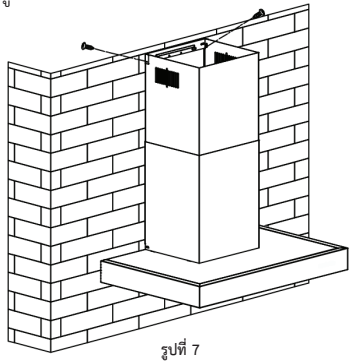


รูปที่ 7

ข้อแนะนำในการติดตั้งท่อระบายอากาศ

ต้องปฏิบัติตามข้อแนะนำต่อไปนี้อย่างเคร่งครัดเพื่อให้ได้ประสิทธิภาพในการดูดอากาศสูงสุด:

- ควรใช้ท่อขยายสั้นและตรงที่สุด
- ห้ามลดขนาดหรือทำให้ท่อขยายแคบลง
- เมื่อใช้ท่อขยาย ควรติดตั้งให้ท่อตึงอยู่เสมอ เพื่อลดการสูญเสียแรงดัน
- หากไม่ปฏิบัติตามคำแนะนำพื้นฐานเหล่านี้ อาจทำให้ประสิทธิภาพลดลงและเกิดเสียงดังมากขึ้นขณะใช้งาน
- งานติดตั้งทั้งหมดต้องดำเนินการโดยช่างไฟฟ้าที่มีคุณสมบัติเหมาะสมหรือผู้ชำนาญ
- ห้ามเชื่อมต่อท่อระบายอากาศของเครื่องดูดควันเข้ากับระบบระบายอากาศอื่นที่กำลังใช้งานร่วมกับอุปกรณ์อื่น เช่น ท่อทำความร้อน ท่อแก๊ส หรือท่อลมร้อน
- มุมโค้งงอของท่อขยายต้องไม่น้อยกว่า 120 องศา โดยควรติดตั้งท่อในแนวนอน หรืออีกทางหนึ่งคือให้ท่อยกขึ้นจากจุดเริ่มต้นแล้วออกไปยังผนังด้านนอก
- หลังการติดตั้ง ควรตรวจสอบให้แน่ใจว่าเครื่องดูดควันอยู่ในแนวระนาบ เพื่อป้องกันไม่ให้คราบไขมันไหลไปรวมกันที่ปลายด้านใดด้านหนึ่ง
- ตรวจสอบให้แน่ใจว่าท่อขยายที่เลือกติดตั้งนั้นเป็นไปตามมาตรฐานที่เกี่ยวข้อง และเป็นวัสดุกันไฟ

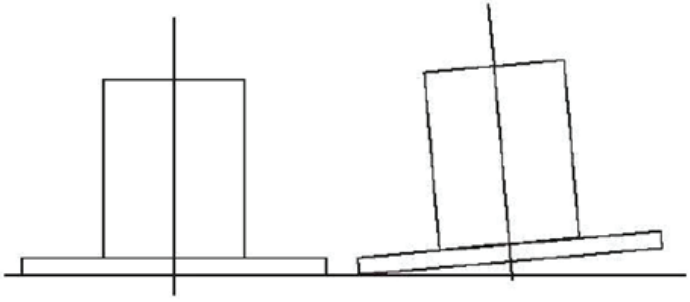


ถูกต้อง ผิด

คำเตือน: 	➢ เพื่อความปลอดภัย โปรดใช้เฉพาะสกรูยึดหรือสกรูสำหรับติดตั้งขนาดเดียวกัน ที่แนะนำไว้ในคู่มือการใช้งานนี้เท่านั้น ➢ การไม่ติดตั้งสกรูหรืออุปกรณ์ยึดตามคำแนะนำเหล่านี้ อาจทำให้เกิดอันตรายจากไฟฟ้าได้

การเริ่มต้นใช้งานเครื่องดูดควันของคุณ

ระบบควบคุมแบบสัมผัสพร้อมหน้าจอแสดงผล LED

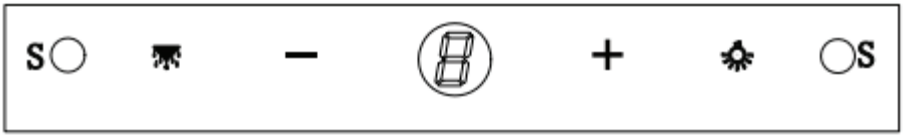

5 ปุ่ม: (ทำความสะอาดอัตโนมัติด้วยความร้อน/ตั้งเวลา) (ลดความเร็ว), (เปิด/ปิดเครื่อง), (เพิ่มความเร็ว), (ไฟส่องสว่าง)ดูรูปด้านบน

1. การเปิดเครื่อง หลังจากเชื่อมต่อกับแหล่งจ่ายไฟ ไฟแสดงสถานะทั้งหมดจะสว่างขึ้น แต่ฟังก์ชันต่างๆ จะยังไม่ทำงาน และเครื่องดูดควันจะเข้าสู่โหมดสแตนด์บาย จากนั้นจะเข้าสู่โหมดแสงพื้นหลังหลังจากผ่านไปสองวินาทีโดยไฟแสดงสถานะจะดับลงอัตโนมัติหากไม่มีการใช้งานภายใน 2 นาที

2. ปุ่ม (เปิด/ปิดเครื่อง)

2.1 กดปุ่มเปิด/ปิด หนึ่งครั้ง ไฟแสดงสถานะของปุ่มฟังก์ชัน (เพิ่ม, ลด ทำความสะอาดอัตโนมัติด้วยความร้อน และไฟส่องสว่าง) จะสว่างขึ้น และหน้าจอ LED จะแสดงเลข “0” และเครื่องดูดควันจะเข้าสู่โหมดการทำงาน
เมื่อกดปุ่มเปิด/ปิดอีกครั้ง ไฟแสดงสถานะของปุ่มฟังก์ชันทั้งหมดจะดับลง และฟังก์ชันการทำงานทั้งหมดของเครื่องดูดควันจะหยุดลง เครื่องดูดควันจะเข้าสู่โหมดสแตนด์บาย ขั้นตอนข้างต้นสามารถดำเนินการซ้ำได้ ปุ่มฟังก์ชันทั้งหมดจะสามารถใช้งานได้เฉพาะเมื่อเครื่องอยู่ในโหมดทำงานเท่านั้น

3. ปุ่ม (ไฟส่องสว่าง):

กดปุ่มไฟส่องสว่าง " " หนึ่งครั้ง ไฟแสดงสถานะของปุ่มและไฟจะเปิดขึ้น กดอีกครั้ง ไฟจะดับลง ไฟแสดงสถานะของปุ่มจะเปลี่ยนเป็นโหมดแสงพื้นหลัง และทำงานเป็นวงรอบ

4. ปุ่มเพิ่มความเร็ว “ ” เครื่องดูดควันมีความเร็ว 3 ระดับ ได้แก่ ต่ำ กลาง และสูง

4.1 กดปุ่มเพิ่มความเร็วหนึ่งครั้ง ไฟแสดงสถานะของปุ่มจะสว่างขึ้น และไฟแสดงสถานะของปุ่มลดความเร็วจะอยู่ในโหมดแสงพื้นหลัง เครื่องดูดควันจะเริ่มทำงานที่ความเร็วต่ำ หน้าจอ LED จะแสดง “1”
4.2 กดปุ่มเพิ่มความเร็วอีกครั้งขณะทำงานด้วยความเร็วต่ำ เครื่องดูดควันจะทำงานที่ความเร็วกลาง หน้าจอ LED จะแสดง “2”
4.3 กดปุ่มเพิ่มความเร็วอีกครั้งขณะทำงานด้วยความเร็วกลาง เครื่องดูดควันจะทำงานที่ความเร็วสูง หน้าจอ LED จะแสดง “3”
4.4 เมื่อเครื่องดูดควันทำงานที่ความเร็วสูงแล้ว หากกดปุ่ม อีกครั้ง เครื่องจะยังคงทำงานที่ความเร็วสูงเท่าเดิม

5. ปุ่ม (ลดความเร็ว):

5.1 กดปุ่มลดความเร็ว “ ” เครื่องดูดควันจะลดความเร็วลงหนึ่งระดับ
หากกดปุ่ม (ลดความเร็ว) ขณะที่เครื่องทำงานด้วยความเร็วสูง เครื่องจะทำงานที่ความเร็วกลาง ไฟแสดงสถานะของปุ่ม (ลดความเร็ว) จะสว่างขึ้น และไฟแสดงสถานะของปุ่ม (เพิ่มความเร็ว) จะเปลี่ยนเป็นโหมดแสงพื้นหลัง
หากกดปุ่ม (ลดความเร็ว) ขณะที่เครื่องทำงานด้วยความเร็วกลาง เครื่องจะทำงานที่ความเร็วต่ำ โดยไฟแสดงสถานะยังคงเหมือนเดิม หน้าจอแสดงผลจะแสดงสถานะความเร็วปัจจุบัน

หากลดระดับลงจนไม่มีความเร็ว หน้าจอ LED จะแสดง “0” เครื่องดูดควันจะปิดลง และไฟแสดงสถานะของปุ่มลดความเร็วจะเปลี่ยนเป็นโหมดแสงพื้นหลัง

6. ปุ่ม (ทำความสะอาดอัตโนมัติด้วยความร้อน/ตั้งเวลา)

6.1 ปุ่มทำความสะอาดอัตโนมัติด้วยความร้อน/ตั้งเวลา ทำหน้าที่เป็นตัวตั้งเวลา เมื่อเครื่องดูดควันกำลังทำงานในระดับความเร็วใดก็ตาม (ปุ่มตั้งเวลาจะไม่ทำงานเมื่อปุ่มไฟส่องสว่างเปิดอยู่) กดปุ่มทำความสะอาดอัตโนมัติด้วยความร้อน/ตั้งเวลาหนึ่งครั้ง เพื่อเริ่มตั้งเวลา 5 นาที ไฟแสดงสถานะจะสว่างขึ้นกดปุ่มอีกครั้งเพื่อยกเลิกฟังก์ชันตั้งเวลา และไฟแสดงสถานะจะดับลง การตั้งค่านี้สามารถดำเนินการซ้ำได้ เมื่อครบเวลาที่ตั้งไว้ เครื่องดูดควันและไฟจะปิดโดยอัตโนมัติ

6.2 หากคุณปรับระดับความเร็วของเครื่องดูดควันหลังจากตั้งค่าฟังก์ชันตั้งเวลาแล้ว ฟังก์ชันตั้งเวลาจะถูกยกเลิกโดยอัตโนมัติ

6.3 เมื่อเครื่องดูดควันไม่ได้ทำงานที่ระดับความเร็วใดๆ การกดปุ่มทำความสะอาดอัตโนมัติด้วยความร้อน/ตั้งเวลา จะเป็นการเปิดใช้งานฟังก์ชันทำความสะอาดอัตโนมัติด้วยความร้อน กดปุ่มหนึ่งครั้งเพื่อเริ่มการทำความสะอาดด้วยความร้อน (ไฟแสดงสถานะจะติด) กดอีกครั้งเพื่อออกจากฟังก์ชัน (ไฟแสดงสถานะจะดับ) การทำงานนี้สามารถดำเนินการซ้ำได้

6.3.1 ขณะทำงานในโหมดทำความสะอาดอัตโนมัติด้วยความร้อน: เครื่องดูดควันจะทำความร้อนเป็นเวลา 9 นาทีก่อนหยุดฟังก์ชันทำความร้อน จากนั้นมอเตอร์จะทำงานอัตโนมัติด้วยความเร็วสูงเป็นเวลา 60 วินาที แล้วปิดตัวเองลง พร้อมกับออกจากโหมดทำความสะอาดอัตโนมัติด้วยความร้อน (ไฟแสดงสถานะจะดับลง)

7. โหมดเซ็นเซอร์ตรวจจับท่าทาง:

7.1 โบกมือหนึ่งครั้งจากซ้ายไปขวา โดยรักษาระยะห่างจากพื้นผิวเซ็นเซอร์มากกว่า 10 ซม.

เครื่องดูดควันจะเริ่มทำงานด้วยความเร็วต่ำและหน้าจอ LED จะแสดง “1”ไฟส่องสว่างจะเปิดขึ้น ไฟแสดงสถานะของปุ่ม (เพิ่มความเร็ว) และปุ่ม (ไฟส่องสว่าง) จะติด ไฟแสดงสถานะของปุ่ม (ลดความเร็ว) และปุ่ม (ทำความสะอาดอัตโนมัติด้วยความร้อน) จะอยู่ในโหมดแสงพื้นหลัง

โบกมือจากซ้ายไปขวาอีกครั้ง เครื่องดูดควันจะทำงานที่ความเร็วระดับกลาง และหน้าจอ LED จะแสดง “2”

โบกมือในทิศทางเดิมอีกครั้ง เครื่องดูดควันจะทำงานด้วยความเร็วสูงสุด และหน้าจอ LED จะแสดง “3” ไฟแสดงสถานะของปุ่ม เพิ่มความเร็ว / ไฟส่องสว่าง / ลดความเร็ว / ทำความสะอาดอัตโนมัติด้วยความร้อน จะยังคงอยู่ในสถานะเดิม หากโบกมือในทิศทางเดิมอีกครั้งขณะที่เครื่องดูดควันกำลังทำงานที่ความเร็วสูงสุด เครื่องดูดควันจะยังคงทำงานด้วยความเร็วเท่าเดิม

7.2 เมื่อโบกมือจากขวาไปซ้ายหนึ่งครั้ง เครื่องดูดควันจะลดระดับความเร็วลงหนึ่งระดับ ขณะที่เครื่องทำงานด้วยความเร็วสูง เมื่อโบกมือจากขวาไปซ้าย เครื่องจะเปลี่ยนไปทำงานที่ความเร็วระดับกลาง และหน้าจอ LED จะแสดง “2” ไฟแสดงสถานะของปุ่ม (ลดความเร็ว) และปุ่ม (ไฟส่องสว่าง) จะติด

ไฟแสดงสถานะของปุ่ม (เพิ่มความเร็ว) และปุ่ม (ทำความสะอาดอัตโนมัติด้วยความร้อน) จะอยู่ในโหมดแสงพื้นหลัง

ขณะที่เครื่องทำงานด้วยความเร็วระดับกลาง เมื่อโบกมือจากขวาไปซ้าย เครื่องจะเปลี่ยนไปทำงานที่ความเร็วต่ำ และหน้าจอ LED จะแสดง “1” โดยไฟแสดงสถานะยังคงเหมือนเดิม หากลดระดับลงจนไม่มีความเร็ว ไฟแสดงสถานะจะดับลง ฟังก์ชันการทำงานทั้งหมดของเครื่องดูดควันจะไม่สามารถใช้งานได้ และเครื่องดูดควันจะเข้าสู่โหมดสแตนด์บาย ขั้นตอนข้างต้นสามารถดำเนินการซ้ำได้

7.3 หากไม่มีการกดใช้งานปุ่มฟังก์ชันใด ๆ เป็นเวลา 10 นาที ระบบเซนเซอร์ตรวจจับท่าทางจะเข้าสู่โหมดพัก หากต้องการเปิดใช้งานระบบตรวจจับท่าทางอีกครั้ง จะต้องกดปุ่มฟังก์ชันใดก็ได้ก่อน ฟังก์ชันตรวจจับท่าทางจะสามารถใช้งานได้เฉพาะเมื่อได้ถูกเปิดใช้งานแล้วเท่านั้น


การแก้ไขปัญหา

ข้อผิดพลาด	สาเหตุที่เป็นไปได้	วิธีแก้ไข
ไฟติด แต่มอเตอร์ไม่ทำงาน	สวิตช์พัดลมปิดอยู่	เลือกตำแหน่งความเร็วพัดลมใหม่
	สวิตช์พัดลมเสีย	ติดต่อศูนย์บริการ
	มอเตอร์เสีย	ติดต่อศูนย์บริการ
ไฟไม่ติด มอเตอร์ไม่ทำงาน	ฟิวส์ภายในบ้านขาด	รีเซ็ตหรือเปลี่ยนฟิวส์ใหม่
	สายไฟหลักหลวม หรือหลุดออก	เสียบสายไฟหลักเข้ากับเต้ารับให้แน่น เปิดสวิตช์เต้ารับ
น้ำมันรั่ว	วาล์วทางเดียวและช่องระบายอากาศปิดไม่สนิท	ถอดวาล์วทางเดียวออก แล้วซีลด้วยสารกันรั่ว
	มีการรั่วซึมบริเวณรอยต่อระหว่างปล่องดูดควันและฝาครอบ	ถอดปล่องดูดควันออก แล้วซีลรอยต่อ
ไฟไม่ทำงาน	หลอดไฟชำรุดหรือเสีย	เปลี่ยนหลอดไฟตามคำแนะนำในคู่มือนี้
การดูดอากาศไม่เพียงพอ	ระยะห่างระหว่างเครื่องดูดควันและเตาแก๊สมากเกินไป	ติดตั้งเครื่องดูดควันใหม่ให้ได้ระยะที่เหมาะสม
เครื่องดูดควันเอียง	สกรูยึดไม่แน่นพอ	ขันสกรูแขวนให้แน่นและปรับให้ได้ระดับ

หมายเหตุ:
การซ่อมแซมทางไฟฟ้าทุกประเภทของอุปกรณ์นี้ จะต้องเป็นไปตามกฎหมายท้องถิ่น รัฐ และกฎหมายของประเทศ หากมีข้อสงสัยใดๆ โปรดติดต่อศูนย์บริการก่อนดำเนินการข้างต้น ควรถอดอุปกรณ์ออกจากแหล่งจ่ายไฟเสมอเมื่อต้องเปิดตัวเครื่อง

การบำรุงรักษาและการทำความสะอาด

ข้อควรระวัง:

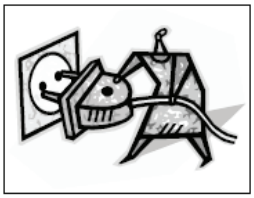

- ก่อนดำเนินการบำรุงรักษาหรือทำความสะอาด ต้องถอดเครื่องดูดควันออกจากแหล่งจ่ายไฟหลัก โดยตรวจสอบให้แน่ใจว่าได้ปิดปิดสวิตช์เต้ารับที่ผนังและถอดปลั๊กออกแล้ว
- พื้นผิวภายนอกของเครื่องอาจเกิดรอยขีดข่วนหรือถลอกได้ง่าย ควรทำความสะอาดตามคำแนะนำอย่างระมัดระวังเพื่อให้ได้ผลลัพธ์ที่ดีที่สุดโดยไม่ทำให้เครื่องเสียหาย

ข้อมูลทั่วไป

การทำความสะอาดและการบำรุงรักษาควรดำเนินการเมื่อเครื่องเย็น โดยเฉพาะในระหว่างการทำความสะอาด หลีกเลี่ยงการปล่อยให้สารที่มีฤทธิ์เป็นด่างหรือกรด (เช่น น้ำมะนาว น้ำส้มสายชู ฯลฯ) ค้างอยู่บนพื้นผิวของเครื่อง

สแตนเลส

ควรทำความสะอาดพื้นผิวสแตนเลสเป็นประจำ (เช่น สัปดาห์ละหนึ่งครั้ง) เพื่อยืดอายุการใช้งานใช้ผ้านุ่มสะอาดเช็ดให้แห้ง สามารถใช้น้ำยาทำความสะอาดเฉพาะสำหรับสแตนเลสได้

หมายเหตุ:
ควรเช็ดตามแนวลายของสแตนเลสเสมอ เพื่อป้องกันรอยขีดข่วนไขว้กันที่อาจดูไม่สวยงาม

พื้นผิวแผงควบคุม

แผงควบคุมแบบฝังสามารถทำความสะอาดได้โดยใช้น้ำสบู่อุ่น ตรวจสอบให้แน่ใจว่าผ้าสะอาดและบิดหมาดดีแล้วก่อนทำความสะอาด ใช้ผ้านุ่มแห้งเช็ดเพื่อขจัดความชื้นส่วนเกินที่หลงเหลืออยู่หลังจากการทำความสะอาด

ข้อสำคัญ
ควรใช้น้ำยาทำความสะอาดชนิดที่เป็นกลาง และหลีกเลี่ยงการใช้สารเคมีทำความสะอาดที่ฤทธิ์รุนแรง น้ำยาทำความสะอาดในครัวเรือนที่เข้มข้น หรือผลิตภัณฑ์ที่มีสารกัดกร่อน เนื่องจะทำให้ลักษณะภายนอกของเครื่องดูดควันเสียหาย และอาจลบลายพิมพ์บนแผงควบคุม อีกทั้งยังอาจทำให้การรับประกันของผู้ผลิตเป็นโมฆะ

ถ้วยรองน้ำมัน

- เครื่องดูดควันของคุณมาพร้อมกับถ้วยรองน้ำมันที่ออกแบบมาเป็นพิเศษ เพื่อรองรับน้ำมันที่สะสมอยู่บนแผ่นกรองไขมัน
- เมื่อถ้วยรองน้ำมันเต็มประมาณ 2/3 ควรถอดออกเพื่อนำไปทำความสะอาด
- ถอดถ้วยรองน้ำมัน โดยดึงถ้วยรองน้ำมันไปข้างหน้าเล็กน้อยเพื่อปลดออกจากเครื่องดูดควัน
- เทน้ำมันทิ้งก่อนทำความสะอาดถ้วย
- ตรวจสอบให้แน่ใจว่าถ้วยมีการทำความสะอาดและเช็ดให้แห้งก่อนนำกลับไปติดตั้งเข้ากับเครื่องดูดควันอีกครั้ง


แผ่นกรองไขมันตาข่าย

แช่แผ่นกรองในน้ำอุณหภูมิประมาณ 40-50°C เทน้ำยาทำความสะอาดลงไป แช่ทิ้งไว้ประมาณ 2-3 นาที แล้วใช้แปรงขนนุ่มขัดแผ่นกรอง อย่าออกแรงมากเกินไป เพื่อหลีกเลี่ยงความเสียหาย

แผ่นกรองสามารถล้างในเครื่องล้างจานได้ ใส่แผ่นกรองลงในเครื่องล้างจาน เติมน้ำยาทำความสะอาด และตั้งอุณหภูมิประมาณ 60°C สำหรับการล้าง
แผ่นกรองทั้งหมดทำจากโลหะ โปรดอย่าใช้น้ำยาทำความสะอาดที่มีฤทธิ์กัดกร่อนต่อโลหะเมื่อทำความสะอาด

หมายเหตุ:
โปรดตรวจสอบให้แน่ใจว่าปิดแหล่งจ่ายไฟก่อนทำความสะอาดเครื่องดูดควัน

ลำดับการถอดแผ่นกรองแสดงในภาพด้านล่าง

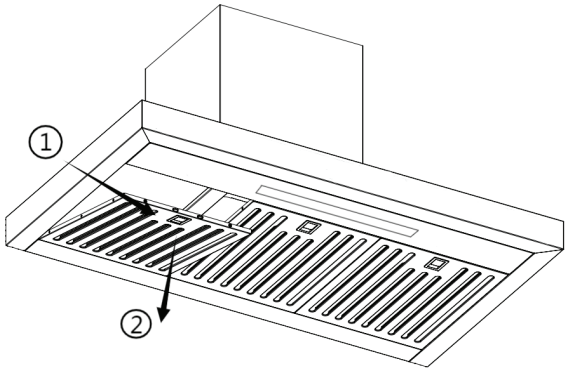


การติดตั้งแผ่นกรองไขมันตาข่าย

- ในการติดตั้งแผ่นกรอง ให้ทำตามสี่ขั้นตอนดังนี้
- ทำมุมแผ่นกรองให้เข้ากับช่องที่ด้านหลังของเครื่องดูดควัน
- กดปุ่มที่ด้ามจับของแผ่นกรอง
- ปล่อยด้ามจับเมื่อแผ่นกรองอยู่ในตำแหน่งที่พอดี
- ทำซ้ำเพื่อติดตั้งแผ่นกรองทั้งหมด

แผ่นกรองคาร์บอน


แผ่นกรองคาร์บอนกัมมันต์สามารถใช้ดักจับกลิ่นได้ โดยปกติควรเปลี่ยนแผ่นกรองคาร์บอนทุก 3 ถึง 6 เดือน ขึ้นอยู่กับลักษณะการปรุงอาหารของคุณ ขั้นตอนการติดตั้งแผ่นกรองคาร์บอนกัมมันต์มีดังนี้:

1. ถอดแผ่นกรองไขมันออก

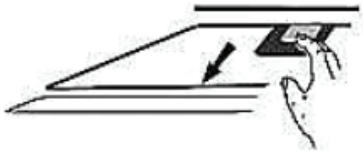



2. เกี่ยวแผ่นกรองคาร์บอนเข้ากับหมุดที่อยู่บริเวณปลายของมอเตอร์
3. หมุนแผ่นกรองคาร์บอนทวนเข็มนาฬิกาจนรู้สึกว่าแผ่นกรองล็อกเข้าที่

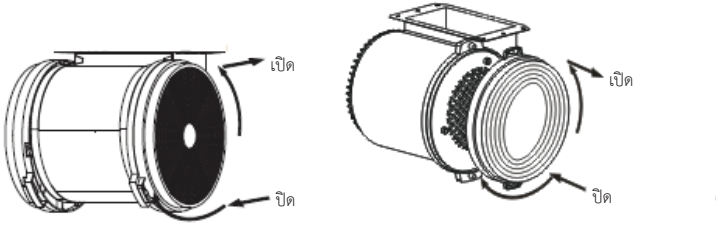

※ ทำซ้ำขั้นตอนนี้สำหรับแผ่นกรองคาร์บอนอันที่สอง คุณต้องวางแผ่นกรองคาร์บอนไว้ที่ปลายแต่ละด้านของมอเตอร์

※ ติดตั้งแผงครอบมอเตอร์กลับเข้าที่ และขันสกรูที่ถอดออกไปก่อนหน้านี้ให้แน่น

※ ติดตั้งส่วนปล่องควันด้านล่างและด้านบนกลับเข้ากับตัวเครื่องดูดควัน

หมายเหตุ:
ตรวจสอบให้แน่ใจว่าได้ล็อกแผ่นกรองอย่างแน่นหนา มิฉะนั้นอาจหลุดหลวมและก่อให้เกิดอันตรายได้

- เมื่อติดตั้งแผ่นกรองคาร์บอนกัมมันต์แล้ว แรงดูดของเครื่องดูดควันจะลดลง

การเปลี่ยนหลอดไฟ

ข้อสำคัญ : 	✧ การเปลี่ยนหลอดไฟจะต้องดำเนินการโดยผู้ผลิต ตัวแทนบริการ หรือบุคคลที่มีคุณสมบัติใกล้เคียงกันเท่านั้น ✧ ต้องปิดแหล่งจ่ายไฟฟ้าก่อนดำเนินการใด ๆ กับเครื่องดูดควัน ขณะจับหลอดไฟ ควรตรวจสอบให้แน่ใจก่อนว่าหลอดไฟเย็นสนิทแล้วก่อนที่จะสัมผัสด้วยมือโดยตรง ✧ ควรใช้ผ้าหรือถุงมือจับหลอดไฟเพื่อป้องกันไม่ให้เหงื่อสัมผัสกับหลอดไฟโดยตรง เนื่องจากอาจทำให้อายุการใช้งานของหลอดไฟสั้นลงได้

หมายเหตุ:


- ก่อนเปลี่ยนหลอดไฟ ตรวจสอบให้แน่ใจว่าได้ปิดเครื่องและถอดปลั๊กออกแล้ว
- ควรป้องกันอันตรายขณะเปลี่ยนหลอดไฟ เช่น สวมถุงมือป้องกัน


การเปลี่ยนหลอดไฟ:


➢ ถอดแผ่นกรองไขมันออก
➢ ใช้ไขควงไขสกรู 2 ตัว ขนาด ST4*8 มม. ที่ด้านข้างทั้งสองของแผ่นยึดหลอดไฟ แล้วถอดแผ่นยึดหลอดไฟออก
➢ ใช้ไขควงปากแฉกไขสกรูบนหลอดไฟ ถอดตัวล็อกออกด้วยแรงที่เหมาะสม นำฐานหลอดไฟออก และถอดขั้วต่อสายไฟของหลอดไฟออก
➢ ดำเนินการทำขั้นตอนย้อนกลับ เพื่อติดตั้งหลอดไฟกลับเข้าที่

รหัส ILCOS D สำหรับหลอดไฟนี้คือ: DSS-3.5/30-S-320/45.2

- โมดูล LED – หลอดไฟทรงสี่เหลี่ยมผืนผ้า
- กำลังไฟสูงสุด: 1×3.5 วัตต์
- ช่วงแรงดันไฟฟ้า: DC12V
- ขนาด:



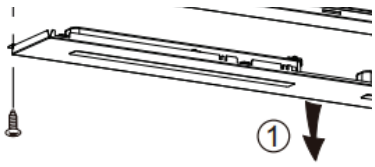

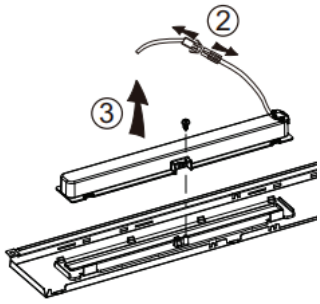

การปกป้องสิ่งแวดล้อม:



ผลิตภัณฑ์นี้มีสัญลักษณ์การคัดแยกขยะอุปกรณ์อิเล็กทรอนิกส์ ซึ่งหมายความว่า ผลิตภัณฑ์นี้ต้องไม่ทิ้งรวมกับขยะในครัวเรือน แต่ต้องนำไปกำจัดโดยระบบการคัดแยกขยะเฉพาะ ตามข้อกำหนดของข้อบังคับสหภาพยุโรป 2012/19/EU ผลิตภัณฑ์จะถูกรีไซเคิลหรือถอดแยกชิ้นส่วนเพื่อลดผลกระทบต่อสิ่งแวดล้อม เนื่องจากอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์อาจมีสารอันตรายที่เป็นอันตรายต่อสิ่งแวดล้อมและสุขภาพของมนุษย์หากต้องการข้อมูลเพิ่มเติม โปรดติดต่อหน่วยงานท้องถิ่นหรือภูมิภาคของท่าน

หมายเหตุ:

ข้อแนะนำต่อไปนี้เป็นวิธีลดผลกระทบต่อสิ่งแวดล้อมโดยรวม (เช่น การใช้พลังงาน) จากกระบวนการทำอาหาร

(1) ติดตั้งเครื่องดูดควันในตำแหน่งที่เหมาะสม ซึ่งมีการระบายอากาศที่ดี

(2) ทำความสะอาดเครื่องดูดควันเป็นประจำ เพื่อไม่ให้ช่องลมอุดตัน

(3) อย่าลืมปิดไฟเครื่องดูดควันหลังทำอาหารเสร็จ

(4) อย่าลืมปิดเครื่องดูดควันหลังจากทำอาหารเสร็จ

ข้อมูลเกี่ยวกับการถอดอุปกรณ์

ห้ามถอดชิ้นส่วนเครื่องด้วยวิธีที่ไม่ได้ระบุไว้ในคู่มือการใช้งาน ผู้ใช้ไม่สามารถถอดชิ้นส่วนเครื่องได้ด้วยตนเอง เมื่อสิ้นสุดอายุการใช้งาน ห้ามทิ้งอุปกรณ์นี้รวมกับขยะในครัวเรือน โปรดตรวจสอบคำแนะนำในการรีไซเคิลกับหน่วยงานท้องถิ่นผู้จัดจำหน่ายของท่าน

gorenje
Life Simplified