

MINIMEX

COFFEE MAKER

คู่มือการใช้งาน
เครื่องชงกาแฟ (ดรีป)
Minimex
รุ่น MDC1-2



Instruction Manual Minimex Drip Coffee Maker

Model : MDC1-2
220V., ~50Hz., 600 W.

ไทย / English

คำแนะนำเพื่อความปลอดภัย

- ควรอ่านคู่มือเล่มนี้อย่างละเอียดก่อนใช้งาน
- ตรวจสอบให้แน่ใจว่า ระบบไฟในบ้าน ได้แก่ ค่าแรงดันไฟ (โวลต์) ตรงกับตัวเครื่อง ก่อนใช้งาน
- ระวังอย่าให้สายไฟหรือตัวเครื่องจุ่มลงในน้ำ เพราะอาจเป็นอันตรายเกิดไฟฟ้าช็อตได้
- ถอดปลั๊กไฟออกจากเต้าเสียบไฟบ้านทุกครั้งที่ไม่ได้ใช้งานหรือเมื่อทำความสะอาดครัวปล่อยให้เครื่องยืนลงก่อนเริ่มต้นทำความสะอาด
- ห้ามใช้อุปกรณ์บนเครื่องรุ่นนี้ร่วมกับตัวเครื่องนี้ เพราะอาจเป็นสาเหตุให้เกิดอันตรายร้ายแรงได้
- โดยแก้วใส่กาแฟถูกออกแบบมาให้ใช้กับเครื่องซึ่งรุ่นนี้เท่านั้น ห้ามน้ำไปใช้ช้อนน้ำบันเตาไฟหรือเครื่องรุ่นอื่น
- ห้ามทำความสะอาดโดยแก้วและตัวเครื่องด้วยแอลกอฮอล์หรือผลิตภัณฑ์ที่มีฤทธิ์เคมี
- อย่าปล่อยให้สายไฟรั้งกับขอบโต๊ะ หรือสัมผัสกับแหล่งความร้อน
- ห้ามวางเครื่องบนพื้นที่มีความร้อน หรือใกล้แหล่งความร้อน เพื่อป้องกันความเสียหาย
- เมื่อถอดปลั๊ก ให้จับที่ตัวลักษณะไม่ควรดึงสายไฟ
- ห้ามใช้เครื่องเพื่อจุดประسังค์อื่นนอกเหนือจากการซิงก์แเฟดริปเท่านั้น
- ใช้เครื่องด้วยความระมัดระวังเป็นพิเศษเมื่อมีเด็กเล็กอยู่ใกล้
- ขณะใช้งานเครื่องจะมีไอน้ำกระจายออก ควรใช้ด้วยความระมัดระวัง
- ควรปิดสวิตช์ที่ตัวเครื่องก่อนถอดปลั๊กออกจากเต้าเสียบไฟบ้าน
- อย่าเปิดสวิตช์ให้เครื่องทำงานโดยไม่มีน้ำอยู่ในตัวเครื่อง
- หยุดใช้งานทันทีที่พับบัว ตัวโกล์มีรอยแตกร้าว
- ระวังน้ำร้อนลวก อย่าเปิดฝาเครื่องขณะเครื่องกำลังทำงาน
- ขณะเครื่องกำลังทำงานส่วนประกอบต่างๆ จะมีความร้อนมาก ควรหยิบจับด้วยความระมัดระวัง
- อย่างไร้โถที่ไม่มีน้ำอยู่ ในขณะที่สูบน้ำเครื่องร้อน เพราะอาจเป็นสาเหตุที่ทำให้โถแตกได้
- อย่างไร้โถที่มีความร้อนลงบนพื้นผิวที่มีความเย็น
- เครื่องออกแบบให้ใช้งานในที่ร่ม ห้ามใช้ในที่ล่างแจ้ง
- ขณะเครื่องกำลังทำงานอยู่ห้ามเลี้ยงการใช้มือสัมผัสโถ เพราะมีความร้อนสูง ควรจับเฉพาะบริเวณมือถือ หรือปุ่มจับเท่านั้น
- หากพบร้า ปลั๊กหรือสายไฟมีรอยแตกหักเสียหาย ควรหยุดใช้งานทันทีและติดต่อศูนย์บริการฯ
- ห้ามวางเครื่องใกล้เต้าไฟหรือเตาอบ
- หากพบร้า โถมีรอยแตกร้าวหรือมีจับหลวม ควรหยุดใช้งานทันที
- ห้ามใช้ความพยายามในการแกะเครื่องออก เมื่อมีปัญหาควรติดต่อศูนย์บริการฯ
- เครื่องซิงก์แเฟ Minimax รุ่น MDC1-2 ออกแบบให้ใช้งานในบ้านเท่านั้น
- ควรเก็บคู่มือเล่มนี้ไว้เพื่ออาจใช้ศึกษาข้อมูลในอนาคต

ส่วนประกอบ



(1)	ฝาปิดแท็งก์น้ำ
(2)	กรวยเครื่อง
(3)	ตัวกรอง
(4)	กรวยขั้นน้ำ
(5)	ฝาปิดโถ
(6)	โถแก้ว
(7)	มือจับโถ
(8)	ฐานเครื่อง (อุ่นโถ)
(9)	แท็งก์น้ำ
(10)	ช่องบอกระดับน้ำ
(11)	สวิตซ์เครื่อง

ก่อนการใช้งาน

ควรตรวจสอบให้มั่นใจว่า อุปกรณ์ที่บรรจุในกล่องครบถ้วนตามที่ระบุในคู่มือ เท่านั้นในแท็งก์น้ำจัน ถังระดับสูงสุด (Max) เอ็อกวางบนฐานให้สนิทแล้วปิดเครื่องให้น้ำร้อนผ่านอุปกรณ์ราย กรอง และหยดลงในโถ แล้วปิดเครื่อง นำโถออกแล้วเทน้ำทิ้ง ทำเช่นนี้ 2-3 รอบ แล้วถอดอุปกรณ์ต่างๆ เช่น โถแก้ว ราย และกรอง ออกล้างแล้วเช็ดให้แห้งประกอบเข้าที่พร้อมใช้งาน

การซักกาแฟ

1. เปิดฝาครอบแท็งก์น้ำแล้วเติมน้ำดื่มสะอาดลงในแท็งก์น้ำจนถึงระดับสูงสุด (Max)
2. ใส่กาแฟบดลงในกรอง สัดส่วนโดยประมาณ ใช้กาแฟ 10 กรัม (ประมาณ 2 ช้อนตวง) ต่อการซักกาแฟ 1 ถ้วย (จึงท่านอาจปรับสัดส่วนนี้ได้ตามรสนิยมการดื่มกาแฟของท่านได้) ตรวจสอบให้แน่ใจว่าตัวกรองและราย ติดตั้งเข้าที่สนิท มิฉะนั้นอาจทำให้ปิดฝาแท็งก์น้ำไม่ได้
3. วางโถแก้วลงบนฐานอุ่นโถ
4. เสียบปลั๊กไฟเข้ากับเต้าเสียบไฟบ้าน
5. เปิดสวิตช์ไปที่เครื่องหมาย “I” สัญญาณไฟสีแดงที่สวิตซ์จะสว่างขึ้น เครื่องจะเริ่มจะทำงาน
6. หากท่านได้ปริมาณกาแฟเพียงพอแล้วท่านสามารถหยุดการทำงานกาแฟได้โดยกดสวิตช์ไปที่ตำแหน่ง “O” ไฟสัญญาณสีแดงจะดับลง อย่างไรก็ตามหากท่านต้องการซักกาแฟอีก ไฟสัญญาณจะสว่างขึ้น เครื่องจะเริ่มซักกาแฟต่อไป ท่านสามารถกดสวิตช์ไปที่ตำแหน่ง “I”

ข้อควรระวัง : ขณะเครื่องกำลังทำงานควรใช้ด้วยความระมัดระวัง เพราะเครื่องมีความร้อนสูง

7. ฐานเครื่องจะมีความร้อนเพื่อรักษาอุณหภูมิของกาแฟในโถ อย่าปล่อยให้กาแฟในโถแห้งขณะอุ่น เพราะอาจทำให้โถแตกร้าว
8. เมื่อการซักกาแฟเสร็จสิ้น (ประมาณ 1 นาที หลังจากกาแฟไม่หยดออกแล้ว) ท่านสามารถถอดโถออกเสิร์ฟได้ หากท่านพบว่ามีกาแฟหยดลงบนฐาน ควรรีบเช็ดด้วยผ้าชุบน้ำบิดหมาดทันที เพื่อบังกันมิให้ฐานเกิดคราบ สนปรก

หมายเหตุ : ปริมาณน้ำกาแฟจะน้อยกว่าน้ำที่เติมลงในแท็งก์น้ำ เนื่องจากน้ำจำนวนหนึ่งดูดซึม อยู่ในผงกาแฟบด

9. ปิดสวิตช์ และถอดปลั๊กทุกรั้งที่ซักกาแฟเสร็จ

การบำรุงรักษาและกำกับความสะอาด

ก่อนการบำรุงรักษาหรือทำความสะอาด ต้องปิดสวิตช์และถอดปลั๊กออกจากเต้าเสียบไฟบ้านทุกครั้ง!

1. ถอดราย ตัวกรองและถังออกล้างด้วยน้ำยาล้างจาน
2. ใช้ผ้าสะอาดชุบน้ำบีดหมาดเขึดตัวเครื่องให้สะอาด
3. บริเวณปลายน้ำหมายของตัวกรองและกรวยอาจมีคราบตะกรันเกิดขึ้นควรใช้ผ้าเช็ดออกทุกครั้ง
4. อาจมีน้ำหยดลงเป็นคราบบริเวณฐานอุ่นไก จึงควรใช้ผ้าเช็ดให้สะอาดทุกครั้ง
5. เช็ดอุปกรณ์ทุกชิ้นให้แห้งแล้วสักลับเข้าที่ เพื่อให้พร้อมใช้งานในครั้งต่อไป

การจัดการบตามรับ

หลังจากใช้งานได้สักระยะอาจมีคราบตะกรันบริเวณกรวย กรอง โถเกวและแท๊กน้ำ ซึ่งแสดงถึงคุณภาพน้ำที่ท่านใช้ ท่านควรเลือกใช้น้ำดีมีที่สะอาดบริสุทธิ์และมีความกระด้างต่ำ การจัดการบตามรับ ทำได้ดังนี้

1. นำผงล้างคราบตะกรันผสมน้ำสะอาด (สัดส่วนตามคำแนะนำของผู้ผลิตผงล้างคราบตะกรัน)
เทลงในแท๊กน้ำ จนถึงระดับ Max (ท่านอาจใช้กรดซิตริกแทน อัตราส่วนน้ำ : กรดซิตริก 100 : 3)
2. ตรวจสอบให้มั่นใจว่า ไม่มีผงกาแฟ
3. เปิดสวิตช์ไปที่ “ I ” ไฟสัญญาณสีแดงสว่างขึ้นเครื่องเริ่มทำงาน
4. ปล่อยให้เครื่องทำงานจนกว่าได้น้ำออกมากปริมาณ 2 ถ้วย
5. ปิดสวิตช์โดยกดสวิตช์ไปที่ “ O ” แล้วปล่อยให้น้ำยาเหลืออยู่ในตัวเครื่องเป็นเวลา 15 นาที
6. เปิดสวิตช์อีกครั้งแล้วทำงานขั้นตอน 4-6 ประมาณ 3 ครั้ง
7. เทน้ำยาในระบบออกให้หมดแล้วเติมน้ำดีมีสะอาดลงในแท๊ก ทำงานขั้นตอน 4-6 อีก 3 ครั้งจนน้ำหมดแท๊ก

การรับประกัน

เครื่องซักกาแฟ (ดิริป) รุ่น MDC1-2 มีระยะเวลาประกัน 1 ปี

เงื่อนไขการรับประกัน

การรับประกันครอบคลุมถึงคุณภาพของสินค้าและฝีมือการประกอบ ผู้ใช้ต้องใช้งานและบำรุงรักษาอย่างถูกต้องตามคำแนะนำในหนังสือคู่มือ

ข้อยกเว้นการรับประกัน

บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบต่อความเสียหายใดๆ ที่เป็นผลสืบเนื่องจากการใช้สินค้า และส่วนที่ธุรกิจการรับประกันหากลูกค้า :

- นำสินค้าไปใช้ผิดจากวัตถุประสงค์ของการออกแบบ
- ใช้งานผิดวิธีหรือไม่ได้ใช้งานตามวิธีที่อธิบายในหนังสือคู่มือ
- ไม่ได้บำรุงรักษาตามคำแนะนำในหนังสือคู่มือ

การใช้สิทธิ์การรับประกันสินค้า

การรับประกันสินค้ามีผลตามวันที่ที่ระบุในใบรับประกันสินค้า กรุณาแสดงใบรับประกันสินค้า/ ใบกำกับภาษี/ ใบเสร็จรับเงิน เพื่อเป็นหลักฐานในการซื้อต่อเจ้าหน้าที่ศูนย์บริการฯ ในการใช้สิทธิ์การรับประกันสินค้า การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่าความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆ ทั้งสิ้น

การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน

บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่า ความบกพร่องของสินค้านั้นอยู่ในเงื่อนไข การรับประกันหรือไม่ ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆ ทั้งสิ้น หากบริษัทฯ พิจารณาเห็นว่า ต้องเปลี่ยนสินค้าใหม่ให้แก่ลูกค้าแต่สินค้ารุ่นเดียวกันไม่มี จำหน่ายแล้ว บริษัทฯ จะเป็นผู้ตัดสินใจว่า สินค้ารุ่นใดเหมาะสมที่จะเปลี่ยนแทน

การคืนสินค้า

ในกรณีที่ลูกค้าซื้อสินค้าไปแล้วแต่ไม่พึงพอใจ บริษัทฯ ยินดีรับคืนสินค้าภายใน 15 วัน โดยมีเงื่อนไขว่า สินค้า ต้องมีบรรจุภัณฑ์อย่างสมบูรณ์และสินค้าไม่ได้ถูกใช้งานมาก่อน โดยลูกค้าต้องนำหลักฐานการซื้อเพื่อคืนสินค้า ณ ร้านค้าที่ซื้อเท่านั้น

ศูนย์บริการ

หากท่านต้องการบริการรายละเอียดเพิ่มเติมหรือสั่งซื้ออุปกรณ์พิเศษท่านสามารถติดต่อศูนย์บริการได้

Service Center : Tel. 02-493-6565, LineOA : @minimex_service

E-mail : SERVICE_minimex@penk.co.th

ช่วยกันรักษาสิ่งแวดล้อม




เราขอชี้ชวนให้ท่านร่วมรักษาสภาพแวดล้อม
ด้วยการทิ้งเศษอุปกรณ์ที่เลิกใช้แล้ว ณ สถานที่ เหมาะสม



MINIMEX
COFFEE MAKER

Instruction Manual
Drip Coffee Maker
MiniMex
Model : MDC1-2

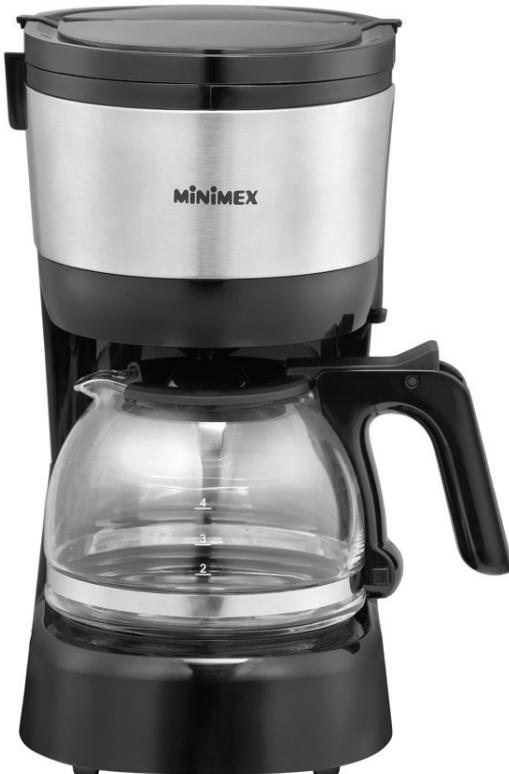

Instruction Manual
MiniMex Drip Coffee Maker

Model : MDC1-2
220V., ~50Hz., 600 W.

Turkish / English

IMPORTANT SAFEGUARDS

Before using the electrical appliance, the following basic precautions should always be followed including the following:

1. Read all instructions.
2. Make sure that your outlet voltage corresponds to the voltage stated on the rating label of the coffee maker.
3. Do not operate any appliance with a damaged cord or plug, or in abnormal state.
If its main cord is damaged, it must be replaced by the manufacturer, the nearest service agent or a qualified person.
4. To protect against fire, electric shock and injury to persons do not immerse cord, plug, in water or other liquid.
5. Remove plug from wall outlet before cleaning and when not in use. Allow appliance cool down completely before taking off, attaching components or before cleaning.
6. The use of accessory is not recommended by the appliance manufacturer. It may result in fire, electric shock and/or person injury.
7. The container is designed for use with this appliance. It can not be used on a range top.
8. Do not clean container with cleansers, steel wool pads, or other abrasive materials.
9. Do not hang power cord over the edge of table or counter, or touch hot surface.
10. Do not place the coffee maker on hot surface or beside fire in order to avoid to be damaged.
11. To disconnect, remove plug from wall outlet. Always hold the plug. But never pull the cord.
12. Do not use appliance for other than intended use and place it in a dry environment.
13. Close supervision is necessary when your appliance is being used near children.
14. Be careful not to get burned by the steam.
15. To disconnect, turn any control to "Off", then remove plug from wall outlet.
16. Do not let the coffee maker operate without water.
17. Never use the appliance if the carafe shows any signs of cracks. Only use the carafe with this appliance. Use carefully as the carafe is very fragile.
18. Scalding may occur if the cover is removed during the brewing cycles.
19. Some parts of appliance is hot when operated, so do not touch with hand. Use handles or knobs only.
20. Never leave the empty carafe on the warming plate otherwise the carafe is liable to crack.
21. This appliance has been incorporated with a grounded plug. Please ensure the wall outlet in your house is well earthed.
22. Do not set a hot container on a hot or cold surface.

23. The appliance can be used by children aged from 8 years and above and persons with reduced physical, sensory or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved. Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children unless they are older than 8 and supervised.

24. Keep the appliance and its cord out of reach of children less than 8 years.

25. This appliance is intended to be used in household and similar applications such as:

- staff kitchen areas in shops, offices and other working environments;
- farm houses;
- by clients in hotels, motels and other residential type environments;
- bed and breakfast type environments.

26. Do not use outdoors.

27. Save these instructions.

KNOW YOUR COFFEE MAKER



1 Water tank cover

2 Funnel

3 Filter

4 Outside funnel

5 Carafe lid

6 Carafe

7 Carafe handle

8 Keeping warm place

9 Water tank

10 Water gauge

11 Switch

BEFORE FIRST USE

Check that all accessories are complete and the unit is not damaged. Add water into water tank to the MAX level and brew water for several times without coffee powder, then discard the water. Clean all detachable parts thoroughly with water.

USING YOUR COFFEE MAKER

1. Open the water tank cover and fill the water tank with fresh water. The water level should not exceed **MAX level** as indicated on the water gauge.
2. Add coffee powder into filter. Usually a cup of coffee need a level spoon of coffee powder, but you may adjust according to personal taste. Then assemble the filter with coffee powder into the funnel, and make sure the funnel is fitted properly. Finally, close the water tank cover.
3. Insert the carafe on the warming plate horizontally.
4. Plug the power cord into the outlet.
5. Press **ON/OFF** switch to the “ **I** ” position, the indicator will be illuminated. The appliance will begin working.
6. The brewing process can be interrupted by pressing **ON/OFF** switch to the “ **O** ” position at any time. The appliance will continue brewing once the **ON/OFF** switch is pressed to the “ **I** ” position.

NOTE :

You can take out carafe, pour and serve at any time. The appliance will stop dripping automatically. But the time cannot exceed 30 seconds.

CAUTION :

DO NOT touch cover, warming plate and so on when operating as they are very hot.

7. When the process is finished, if you do not want to serve immediately, keep the coffee maker is energized, the coffee can be kept warm in the warming plate. For an optimum coffee taste, serve it just after brewing.

NOTE :

Please make sure the carafe is not empty when keeping warm to avoid dry boiling.

8. Remove out carafe to serve when finish brewing (about one minute later after the coffee stops dripping out.)

NOTE : The coffee you get will less than the water you have added, as some water is absorbed by coffee powder. DO NOT touch cover, warming plate and so on when operating as they are very hot.

9. Always turn the coffee maker off and disconnect the power supply when not use.

NOTE : Pay attention to pour the coffee out, otherwise you may be hurt as the temperature of coffee just finished is high.

CLEANING AND MAINTENANCE

CAUTION :

Be sure to unplug this appliance before cleaning. To protect against electrical shock, do not immerse cord, plug or unit in water or liquid. After each use, always make sure plug is first removed from wall outlet.

1. Clean all detachable parts after each use in hot, sudsy water.
2. Wipe the product's exterior surface with a soft, damp cloth to remove stains.
3. Water droplets may buildup in the area above the funnel and drip onto the product base during brewing. To control the dripping, wipe off the area with a clean, dry cloth after each use of the product.
4. Use a damp cloth to gently wipe the warming plate. Never use abrasive cleaner to clean it.
5. Replace all parts and keep for next use.
6. Any other servicing should be performed by an authorized service representative.

REMOVING MINERAL DEPOSITS

To keep your coffee maker operating efficiently, you should clean away the mineral deposits left by the water regularly according to the water quality in your area and the frequency of use.

If the mineral deposit is excessive, the appliance will represent the following signs:

1. Fill the tank with water and descaler to the MAX level (the proportion of water and descaler is 4:1, details refers to the instruction of descaler. Please use "household descaler", you can use the citric acid (obtainable from chemist's or drug stores) instead of the descaler (one hundred parts of water and three parts of citric acid)).
2. Make sure the filter is free of coffee powder.
3. Press switch, the indicator will be illuminated. The appliance will begin working.
4. Make about two cups of coffee.
5. Press the switch again to stop the unit immediately, make the descaler deposit in the unit at least 15 minutes.
6. Restart the unit and repeat the steps of 4-6 at least 3 times.
7. Then brewing coffee (no coffee powder) with tap water, repeat the steps of 4-6 for 3 times (it is not necessary to wait 15 minutes in step of 6), then brewing until no water is left in the tank.

WARRANTY

We hereby warranty our Drip Coffee Maker model MDC1-2 in a period of 1 (one) year.

Warranty Conditions

The warranty cover product defective and workmanship . Users must properly use and maintain following the instructions manual..

Warranty exceptions

We disclaims all responsibility for incidental or consequential damage caused by use of this appliance
This warranty will be void if customers.

- lead to a misunderstanding of the purpose of the design, such as using product in a commercial use.
- Use the wrong way or not used as described in the instruction manual.
- no maintenance as recommended in the instruction manual.

Customer right for product warranty

The warranty is effective on the date specified in the warranty card , invoice or receipt as proof of purchase.

Determination of defective product

The company will inspect the false or defective of the product and decide that the defective of the product is in warranty or not. The decision is solely the rights of the company. If the product proved to be defected and covered by warranty, company will be responsible for parts and labor to repair and deliver the product to customers' house. Customers do not have to pay any fee.If the company considers that it must change its products to customers, but the same model of product is not available, the company will determine an appropriate version of the product to be replaced.

Returns of Product

If customer purchases to be dissatisfy. Customer could return the product within 15 days after purchasing date only if the product is completely perfect packaging and has not been used before.
Customers must present proof of purchase to return the product at the store of purchase only.

Service Center

If customer need service or information, customer can contact our Minimex Service Center
Service Center : Tel. 02-493-6565, LineOA : @minimex_service
E-mail : SERVICE_minimex@penk.co.th

ENVIRONMENT FRIENDLY DISPOSAL

Please dispose of old machines in an environmentally neutral way.

Old machines contain valuable materials which should be salvaged for recycling.

Please therefore dispose of old machines via your regional collection system



MINIMEX

COFFEE MAKER

DISTRIBUTOR

จัดจำหน่ายโดย

บริษัท เพ็ป ค ອิบิเตอร์เกอร์ดดิ้ง จำกัด

อาคาร พ.บ. ทาวเวอร์ ชั้นที่ 16 เลขที่ 1000/63-64

ถนนสุขุมวิท 71 แขวงคลองตันเหนือ เขตวัฒนา กรุงเทพฯ 10110

หมายเลขโทรศัพท์ 02-493-6565 แฟกซ์ 02-391-1141

ศูนย์บริการ minimex 02-493-6565