

MINIMEX HAND FROTHER

คู่มือการใช้งาน เครื่องปั่นฟองนมมือถือ Minimex รุ่น MHF3



Instruction Manual HAND FROTHER


Model : MHF3
220V., ~50Hz., 10 W.
ไทย / English

ก่อนการใช้งานครั้งแรก

- เพื่อความปลอดภัยและรักษาคุณภาพของเครื่องปั่นฟองนมมือถือ ควรอ่านและปฏิบัติตามคู่มืออย่างละเอียด
- ห้ามนำอุปกรณ์แช่ หรือจุ่มลงในน้ำ หรือของเหลว เพื่อไม่ให้เกิดความเสียหายต่อเครื่องปั่นฟองนม
 - ระหว่างการใช้งาน ระวังนิ้วมือในการสัมผัสหัวตี เพราะอาจทำให้บาดเจ็บ โปรดถือเครื่องบิดให้แน่นเมื่อใช้งาน
 - เก็บผลิตภัณฑ์นี้ให้ห่างจากเด็ก
 - ห้ามถอด ช่อมแซมผลิตภัณฑ์ด้วยตัวเอง การรับประกันจะสิ้นสุดทันที ควรโทรหาศูนย์บริการเพื่อขอคำแนะนำและการซ่อมแซม
 - ห้ามใช้น้ำยาทำความสะอาดที่มีกรด ด่าง หรือเป็นสารกัดกร่อนในการทำทำความสะอาดเครื่องปั่นฟองนม
 - ห้ามใช้งานติดต่อกันเป็นระยะเวลานาน
 - หลีกเลี่ยงการใช้งานที่ใกล้ ก๊าซ แก๊ส เต้าไฟฟ้า และอุปกรณ์ที่มีอุณหภูมิสูง
 - การใช้ผลิตภัณฑ์ในลักษณะใดก็ตามที่ไม่ได้ระบุไว้ในคู่มือนี้ การรับประกันจะสิ้นสุดทันที


เครื่องปั่นฟองนมนี้ใช้งานสำหรับในบ้าน
ไม่สามารถใช้ในเชิงพาณิชย์

ส่วนประกอบ

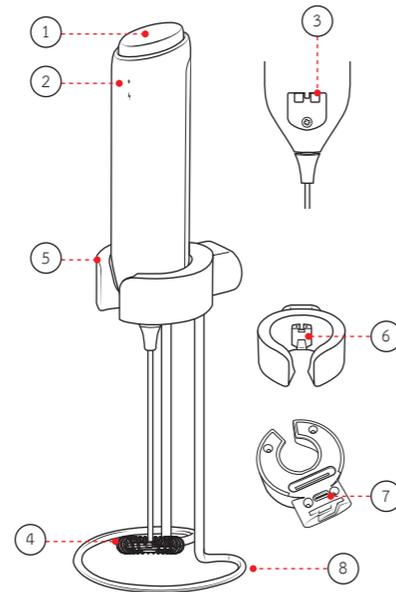

- 2 / ไทย -


ส่วนประกอบ (ต่อ)

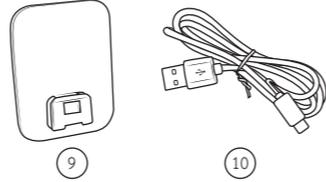

- | | |
|---------------|---------------------|
| ① ปุ่ม | ⑥ หมุดโลหะ |
| ② ไฟแสดงสถานะ | ⑦ ช่องชาร์จ Type -C |
| ③ ช่องชาร์จไฟ | ⑧ ขาตั้งโลหะ |
| ④ หัวตี | ⑨ ขาตั้งติดผนัง |
| ⑤ ฐานชาร์จ | ⑩ สายชาร์จ Type-C |

การติดตั้งในการใช้งาน


ผลิตภัณฑ์สามารถใช้งานได้สองวิธีคือ
ใช้ขาตั้งโลหะ 2 แห่งเข้ากับช่องที่ด้านล่างของฐานชาร์จ
ใส่ให้ลงล็อก จากนั้นวางเครื่องที่ตั้งตรงในฐานชาร์จ

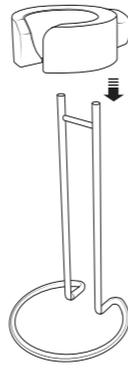

- 3 / ไทย -


ติดผนัง

เลือกผนังที่เรียบและสามารถติดได้ เช็ดให้สะอาดเพื่อหลีกเลี่ยงฝุ่นและคราบน้ำ ฉีกฟิล์มสีขาวออกจากแผ่นติดผนัง จากนั้นติดตั้งบนผนังโดยให้ด้านที่มีตะขอยึดด้านล่าง กัดแน่นและรอประมาณ 24 ชั่วโมง

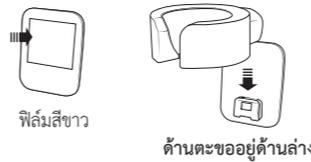

การชาร์จไฟ

- ประกอบฐานชาร์จเข้ากับแผ่นติดผนัง กดลงไปจนได้ยินเสียง "คลิก" ฐานชาร์จจะล็อกเรียบร้อยแล้ว
- วางเครื่องที่ตั้งตรงในฐานชาร์จ

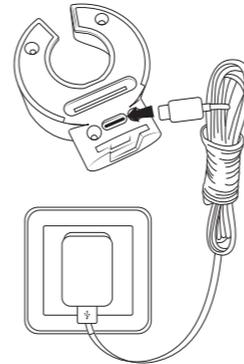


หมายเหตุ :

- เมื่อไม่ได้ใช้งาน แนะนำให้ชาร์จทุก 3 เดือนเพื่อให้อายุการใช้งานของแบตเตอรี่
- อะแดปเตอร์ไม่ได้แถมมากับผลิตภัณฑ์นี้ ควรชาร์จด้วยอะแดปเตอร์ที่ได้รับการรับรองความปลอดภัย UL/GS หรือเทียบเท่าที่มีแรงดันไฟฟ้าออก 5V
- ก่อนเชื่อมต่อกับแหล่งจ่ายไฟ ตรวจสอบให้อะแดปเตอร์ ปลั๊กสายชาร์จ และอุปกรณ์ให้แห้งสนิท
- ควรถอดอุปกรณ์ออกจากแหล่งจ่ายไฟเมื่อไม่ได้ใช้งาน
- ก่อนการใช้งานทุกครั้ง ตรวจสอบว่าอุปกรณ์และสายอยู่ในสภาพดี ห้ามชาร์จอุปกรณ์หลายไฟเสียหยา

- 4 / ไทย -

วิธีการใช้งาน

- กดปุ่ม เครื่องที่ก่อนจะเริ่มทำงาน
- ปล่อยปุ่ม เครื่องที่ก่อนจะหยุดทำงาน

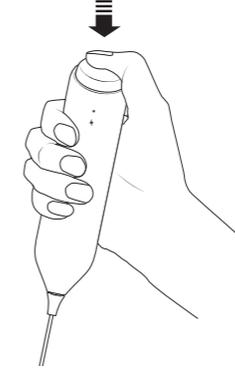

ข้อควรระวัง :

- ผลิตภัณฑ์นี้ถูกออกแบบมาเฉพาะสำหรับการตีฟองนม การใช้ผลิตภัณฑ์นี้สำหรับวัตถุประสงค์อื่นนอกเหนือจากที่กำหนดอาจทำให้เกิดความเสียหายต่ออุปกรณ์
- หลังการใช้งาน ห้ามล้างผลิตภัณฑ์โดยตรง หากน้ำเข้าไปในตัวเครื่องจะทำให้เครื่องเสียหาย แนะนำให้จุ่มหัวตีลงในถ้วยน้ำและกดปุ่มเพื่อคืนให้สะอาดง่าย
- หากมีน้ำหรือของเหลวอื่น ๆ บนหัวตี ห้ามวางผลิตภัณฑ์คว่ำเพื่อลดความเสี่ยงที่น้ำจะไหลเข้าไปในตัวเครื่อง
- เมื่อไม่ได้ใช้งาน ให้เก็บผลิตภัณฑ์ในที่สะอาดและแห้ง
- หัวตีไม่สามารถถอดออกได้ ห้ามพยายามถอดหัวตีออก
- แนะนำการใช้งานต่อเนื่องติดต่อกันของผลิตภัณฑ์นี้ไม่ควรเกิน 3 นาที

การแก้ปัญหา

หากเครื่องตีฟองไม่ทำงาน หรือสั่นมากเกินไป และหยุดระหว่างการทำฟอง โปรดชาร์จแบตเตอรี่แล้วลองใหม่อีกครั้ง

หมายเหตุ : ไม่แนะนำให้ใช้งานผลิตภัณฑ์ขณะชาร์จ

หากทำตามขั้นตอนข้างต้นแล้วเครื่องตีฟองยังทำงานผิดปกติอยู่ โปรดติดต่อศูนย์บริการเบอร์ 02-493-6565

- 5 / ไทย -

การรับประกัน

เครื่องปั่นฟองนมมือถือ รุ่น MHF3 ระยะเวลาประกัน 30 วัน
เงื่อนไขการรับประกัน
การรับประกันครอบคลุมถึงคุณภาพของสินค้าและฝีมือการประกอบ ผู้ใช้ต้องใช้งานและบำรุงรักษาอย่างถูกต้องตามคำแนะนำในหนังสือคู่มือ

ข้อยกเว้นการรับประกัน

- บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบต่อความเสียหายใดๆ ที่เป็นผลสืบเนื่องจากการใช้สินค้า และสงวนสิทธิ์การรับประกันหากลูกค้า :
- นำสินค้าไปใช้ผิดจากวัตถุประสงค์ของการออกแบบ
 - ใช้งานผิดวิธีหรือไม่ได้ใช้งานตามวิธีที่อธิบายในหนังสือคู่มือ
 - ไม่ได้บำรุงรักษาตามคำแนะนำในหนังสือคู่มือ

การใช้สิทธิ์การรับประกันสินค้า

การรับประกันสินค้ามีผลตามวันที่ระบุในใบรับประกันสินค้า กรุณาแสดงใบรับประกันสินค้าหรือใบกำกับภาษี ใบเสร็จรับเงิน เพื่อเป็นหลักฐานในการซื้อต่อเจ้าหน้าที่ศูนย์บริการฯ ในการใช้สิทธิ์การรับประกันสินค้า การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่า ความบกพร่องของสินค้านั้นอยู่ในเงื่อนไข การรับประกัน หรือไม่ ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆ ทั้งสิ้น

การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน

บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่า ความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯจะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆ ทั้งสิ้น หากบริษัทฯ พิจารณาเห็นว่า ต้องเปลี่ยนสินค้าใหม่ให้แก่ ลูกค้าแต่สินค้ารุ่นเดียวกันไม่มีจำหน่ายแล้ว บริษัทฯ จะเป็นผู้ตัดสินใจว่า สินค้ารุ่นใดเหมาะสมที่จะเปลี่ยนแทน

การคืนสินค้า

ในกรณีที่ลูกค้าซื้อสินค้าไปแล้วแต่ไม่ถูกใจ บริษัทฯ ยินดีรับคืนสินค้าภายใน 15 วัน โดยมีเงื่อนไขว่า สินค้าต้องมีบรรจุภัณฑ์อย่างสมบูรณ์ และสินค้าไม่ได้ถูกใช้งานมาก่อน โดยลูกค้าต้องนำหลักฐานการซื้อเพื่อคืนสินค้า ณ ร้านค้าที่ซื้อเท่านั้น

ศูนย์บริการ

หากท่านต้องการบริการรายละเอียดเพิ่มเติมหรือสั่งซื้ออุปกรณ์พิเศษท่านสามารถติดต่อศูนย์บริการฯ ได้
Service Center : Tel. 02-493-6565,
LineOA : @minimex_service
E-mail : SERVICE_minimex@penk.co.th

- 6 / ไทย -

Instruction Manual
Hand Frother
Minimex
Model : MHF3




Instruction Manual
HAND FROTHER
Model : MHF3
220V., ~50Hz., 10 W.
English


BEFORE USING FOR THE FIRST TIME

- To ensure safety and maintain the high quality of the product, we recommend that you read and follow the instructions carefully.
- Do not immerse the main body of the product in water or any other liquid to avoid harm to human or the product.
- Keep body parts (e.g. fingers) and utensils away from the whisk when it is working.
- Keep this product away from children.
- Do not dismantle the product by yourself, or otherwise warranty will be invalid.
- Do not use acidic, alkaline or other abrasive detergent to clean the product.
- No extended use is allowed.
- Keep away from flammable, explosive gas.
- Using the product in any manner not described in these instructions releases the manufacturer from

KNOW YOUR FROTHER

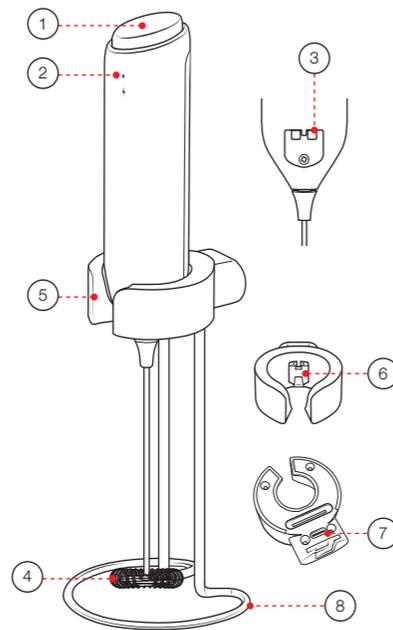

KNOW YOUR FROTHER

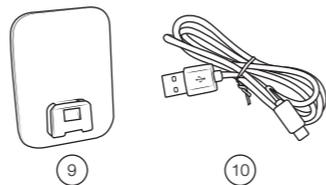


- | | |
|--------------------|-------------------------|
| ① Button | ⑥ Metal Pin |
| ② Indicator Light | ⑦ Charging Socket |
| ③ Electric Contact | ⑧ Metal Stand |
| ④ Whisk | ⑨ Wall-Mounted Bracket |
| ⑤ Charging Base | ⑩ Type-C Charging Cable |

HOW TO STORAGE

The product can be stored in two ways for daily use.

Storage by metal stand

Insert the 2 rods of the metal stand into the slots at the bottom of the charging base, make sure the rods are inserted to the bottom. Then put the frother upright into the charging base.




Storage by Wall-Mounted Bracket

Choose a flat and pasteable wall, wipe it clean to avoid dust and water stains.

Tear off the white film of the wall-mounted bracket, stick it vertically to the wall with the buckle end downward, press it firmly and then wait for 24 hours.

Align the slot on the back of the charging base with the buckle on bracket, and press it downward until hearing a "click", meaning the installation is complete.

Put the frother upright into the charging base.

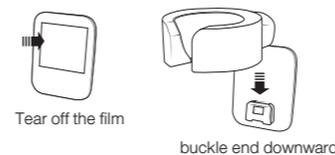


HOW TO CHARGE

- Insert the Type-C interface of the charging cable into the socket at the bottom of the charging base.
- Insert the charging base into the metal stand or wall-mounted bracket, put the frother upright into the charging base and ensure full contact of the metal pins of the frother and the charging base.
- Connect the other end of the cable to an adapter, then plug it firmly into the indoor electric socket, the power indicator light lights up in white, indicating it is charging normally.

- The indicator light stops lighting when the battery is fully charged.

- It takes no more than 3 hours to fully charge the battery.

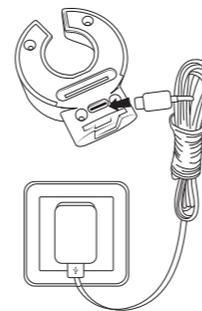

NOTE :

- When not in use, it is recommended to charge every three months to ensure service life of the battery.
- Adapter is not included with this product. Charge with UL/GS or equivalent safety approved adapters with output voltage of 5V.
- Before connecting to the power source, ensure the adapter, charging cable plug, and the charging port on the device are completely dry.
- Always disconnect the device from the power supply if it is to be left unattended.
- Before each use, check that the appliance and cord are in good condition. Never use the appliance if the cord is damaged.

HOW TO USE

- Press the button, the frother starts working.
- Release the button, the frother stops working.



CAUTIONS :

- This product is specifically designed for frothing milk to enhance your coffee experience. Please note that using this product for purposes other than its intended use may result in damage to the device.
- After use, do not rinse the product directly, as water may enter the main unit and cause damage. It is recommended to immerse the frother's whisk in a cup of water and press the button to stir for easy cleaning.
- If there is water or other liquid on the whisk, please do not place the product upside down to avoid water flowing into the main body.
- When not in use, store the product in a clean and dry place.
- The whisk is non-detachable. Do not try to detach the whisk.
- It is recommended that the continuous working time of this product should not exceed 3 minutes.

TROUBLESHOOTING

If the frother does not work or vibrates significantly stops during frothing:

Please recharge it and then try again.

NOTE : It is not recommended to use the product while charging.

If the above operations are correct and the frother still works abnormally, please contact the vendor for maintenance service.

WARRANTY

We hereby warranty our Minimex Hand Frother MHF3 in a period of 30 days.

Warranty Conditions

The warranty cover product defective and workmanship. Users must properly use and maintain following the instructions manual.

Warranty exceptions

We disclaims all responsibility for incidental or consequential damage caused by use of this appliance. This warranty will be void if customers.

- lead to a misunderstanding of the purpose of the design, such as using product in a commercial use.
- Use the wrong way or not used as described in the instruction manual.
- no maintenance as recommended in the instruction manual.

Customer right for product warranty

The warranty is effective on the date specified in the warranty card, invoice or receipt as proof of purchase.

Determination of defective product

The company will inspect the false or defective of the product and decide that the defective of the product is in warranty or not. The decision is solely the rights of the company. If the product proved to be defective and covered by warranty, company will be responsible for parts and labor to repair and deliver the product to customers' house. Customers do not have to pay any fee. If the company considers that it must change its products to customers, but the same model of product is not available, the company will determine an appropriate version of the product to be replaced.

Returns of Product

If customer purchases to be dissatisfied, customer could return the product within 15 days after purchasing date only if the product is completely perfect packaging and has not been used before. Customers must present proof of purchase to return the product at the store of purchase only.

Service Center

If customer need service or information, customer can contact our Minimex Service Center
Service Center : Tel. 02-493-6565,
LineOA : @minimex_service
E-mail : SERVICE_minimex@penk.co.th