


# HÄFELE

คู่มือการใช้งาน  
เครื่องคั้นน้ำส้ม

495.19.337

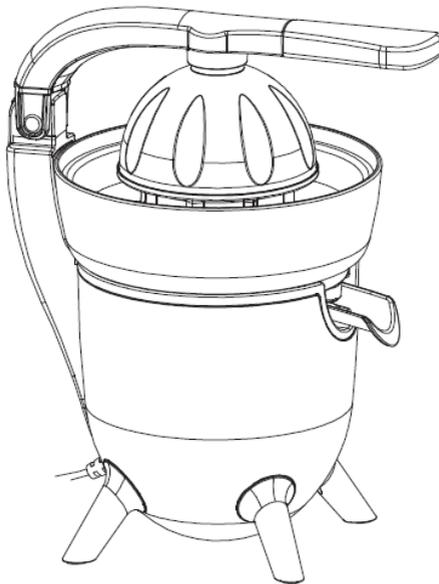

โปรดอ่านคู่มืออย่างละเอียดก่อนใช้งาน

บริษัท เฮเฟล (ประเทศไทย) จำกัด

57 ซอยสุขุมวิท 64 ถนนสุขุมวิท แขวงพระโขนงใต้ เขตพระโขนง กรุงเทพฯ 10260

โทรศัพท์: +66 (0) 2768 7171




## คำแนะนำด้านความปลอดภัย

เมื่อใช้อุปกรณ์ไฟฟ้า ควรปฏิบัติตามข้อควรระวังด้านความปลอดภัยขั้นพื้นฐานเสมอ รวมถึงสิ่งต่อไปนี้:

1. อ่านคำแนะนำทั้งหมดก่อนเริ่มใช้งานเครื่อง
2. ถอดปลั๊กออกจากตัวรับ โดยให้ดึงที่ตัวปลั๊ก ห้ามดึงสายไฟ ในกรณีต่อไปนี้
  - หากเกิดความผิดปกติ
  - หลังใช้งานเสร็จ
  - หากไม่ได้ใช้งานเป็นเวลานาน
  - ก่อนทำความสะอาด
  - ก่อนถอดหรือใส่ถวายเป็น
3. อย่าใช้แรงกดที่ถวายเป็นมากเกินไป เพราะอาจทำให้มอเตอร์หยุดทำงาน
4. ตรวจสอบให้แน่ใจว่าการเชื่อมต่อ (เช่น ปลั๊กไฟหรือฐานวาง) พร้อมสำหรับการติดตั้งเครื่องคั้นน้ำผลไม้
5. วางเครื่องบนพื้นผิวเรียบที่ทำความสะอาดง่าย และไม่เสียหายจากน้ำผลไม้ที่อาจกระเด็น
6. ห้ามวางเครื่องบนพื้นผิวที่ร้อน เช่น เตาไฟ หรือใกล้เปลวไฟ
7. เครื่องมีฐานดูดติดพื้น (suction feet) ฐานดูดสูญญากาศจะยึดติดกับพื้นผิวเรียบได้ทุกชนิด เพื่อให้ยึดติดได้ดี พื้นผิวจะต้องเรียบ และปราศจากฝุ่นหรือคราบน้ำมัน ฐานดูดสูญญากาศจะไม่สามารถยึดติดกับพื้นผิวที่มีลวดลายหรือพื้นผิวขรุขระได้ ควรทำให้ฐานดูดขึ้นเล็กน้อยก่อนกดลงบนพื้นผิว
8. อย่าติดตั้งฐานดูดสูญญากาศบนพื้นผิวที่บอบบาง สิบางชนิดหรือสารเคลือบสังเคราะห์บางประเภทอาจเกิดปฏิกิริยากับวัสดุของฐานดูดสูญญากาศ และทำให้วัสดุนั้นอ่อนตัวลง ซึ่งอาจทำให้เกิดรอยบนพื้นผิวได้
9. ห้ามใช้ผลิตภัณฑ์ทำความสะอาดที่มีฤทธิ์กัดกร่อนหรือเป็นด่าง เนื่องจากอาจทำให้พื้นผิวของเครื่องเสียหายได้
10. เพื่อป้องกันไฟฟ้าช็อต ห้ามจุ่มสายไฟ ปลั๊ก หรือเครื่องใช้ไฟฟ้า ลงในน้ำหรือของเหลวอื่นใด
11. เครื่องใช้ไฟฟ้านี้ไม่ได้ออกแบบมาให้บุคคล (รวมถึงเด็ก) ที่มีความสามารถทางร่างกาย ประสาทสัมผัส หรือจิตใจลดลง หรือผู้ที่ไม่มีประสบการณ์และความรู้ใช้งาน เว้นแต่บุคคลเหล่านั้นจะได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้งานเครื่องจากผู้รับผิดชอบด้านความปลอดภัยของพวกเขา ควรดูแลเด็กอย่างใกล้ชิดเพื่อให้แน่ใจว่าเด็กจะไม่เล่นกับเครื่องใช้ไฟฟ้านี้

12. ถอดปลั๊กออกจากเต้ารับเมื่อไม่ได้ใช้งาน และก่อนทำความสะอาด ปล่อยให้เครื่องเย็นลงก่อนที่จะประกอบหรือถอดชิ้นส่วน
13. ห้ามใช้งานเครื่องใช้ไฟฟ้าใด ๆ หากสายไฟหรือปลั๊กเสียหาย หรือหากเครื่องทำงานผิดปกติ หรือได้รับความเสียหายไม่ว่าด้วยวิธีใดก็ตาม กรุณานำเครื่องไปยังศูนย์บริการที่ได้รับอนุญาตใกล้บ้านคุณ เพื่อให้ช่างตรวจสอบ ซ่อมแซม หรือปรับแต่ง
14. การใช้อุปกรณ์เสริมที่ไม่ได้รับการแนะนำจากผู้ผลิตเครื่องใช้ไฟฟ้า อาจก่อให้เกิดอันตรายได้
15. ห้ามเก็บสิ่งของอื่นใดไว้ในตัวเครื่อง ยกเว้นอุปกรณ์เสริมที่ผู้ผลิตแนะนำเท่านั้น
16. หากสายไฟชำรุด จะต้องเปลี่ยนโดยผู้ผลิต ตัวแทนบริการ หรือช่างผู้มีความชำนาญที่เหมาะสมเท่านั้น เพื่อหลีกเลี่ยงอันตราย
17. เครื่องนี้ไม่เหมาะสำหรับผู้ที่มีความบกพร่องทางร่างกาย การตอบสนอง หรือจิตใจ (รวมถึงเด็ก) เว้นแต่จะอยู่ภายใต้การดูแลหรือได้รับคำแนะนำจากผู้ที่มีขีดชอบด้านความปลอดภัย ควรดูแลเด็กอย่างใกล้ชิดเพื่อให้แน่ใจว่าเด็กจะไม่เล่นกับเครื่องนี้

# รายละเอียดผลิตภัณฑ์

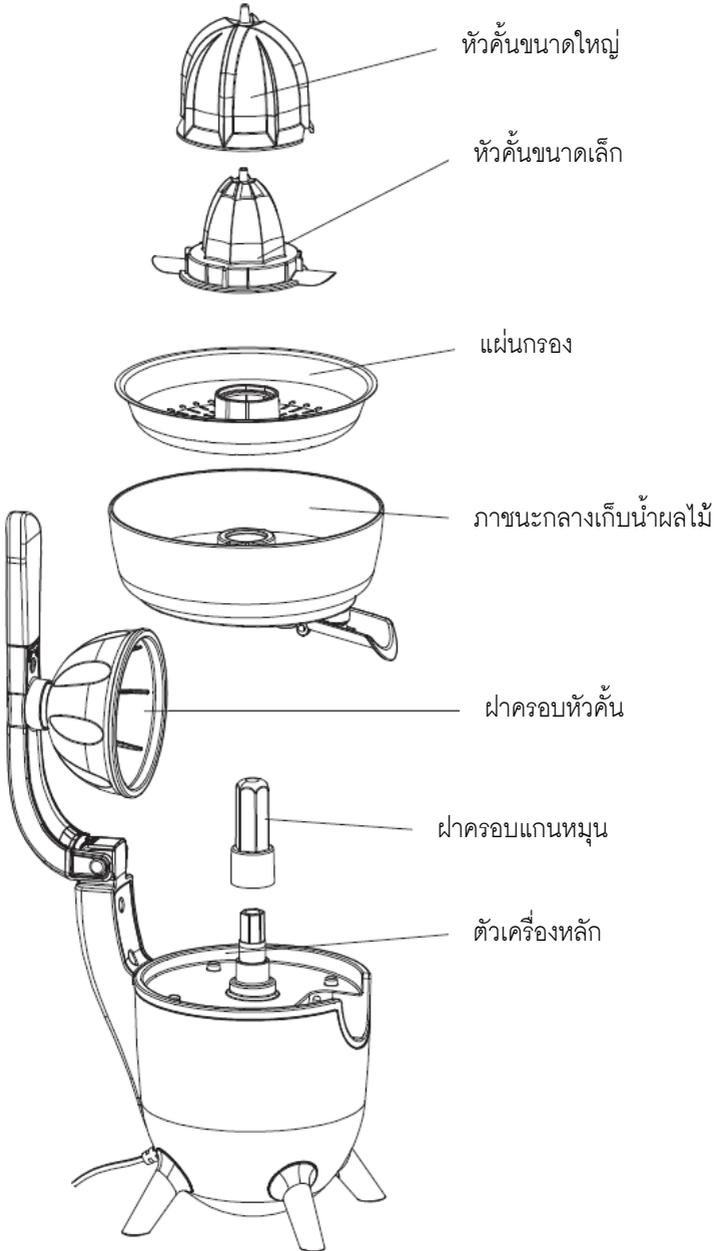

## ก่อนใช้งานครั้งแรก

1. **คำเตือน:** เก็บวัสดุบรรจุภัณฑ์ให้ห่างจากเด็ก เพราะอาจทำให้ขาดอากาศหายใจได้
2. แกะเครื่องคั้นน้ำส้มออกจากกล่อง และนำวัสดุบรรจุภัณฑ์ทั้งหมดออก
3. ตรวจสอบเครื่องคั้นน้ำส้มว่ามีความเสียหายที่มองเห็นได้หรือไม่ และตรวจสอบว่าชิ้นส่วนทั้งหมดอยู่ครบถ้วน
4. ควรทำความสะอาดเครื่องก่อนใช้งานครั้งแรก
5. ใช้ผ้าชุบน้ำหมาดๆ เช็ดฐานมอเตอร์
6. ก่อนใช้งานเครื่องครั้งแรก ให้ล้างหัวคั้น ตะแกรงกรอง ภาชนะกลางรองน้ำผลไม้ และฝาปิดกันฝุ่นแบบใส ด้วยน้ำอุ่นผสมกับน้ำยาล้างจานเล็กน้อย

## การใช้งาน

### การติดตั้งเครื่องคั้นน้ำส้ม

1. วางเครื่องบนพื้นผิวเรียบที่ทำความสะอาดได้ง่าย
2. ดึงสายไฟออกจากช่องเก็บสาย (อยู่ใต้เครื่อง) ให้ได้ความยาวตามต้องการ และตรวจสอบให้แน่ใจว่าสายไฟอยู่ในตำแหน่งที่ถูกต้อง
3. เสียบปลั๊กเข้ากับเต้ารับไฟฟ้า AC 230V, 50Hz

## การใช้เลือกใช้อุปกรณ์เสริม

1. ขึ้นอยู่กับขนาดของผลไม้ที่คุณจะคั้น คุณสามารถเลือกใช้หัวคั้นขนาดใหญ่หรือขนาดเล็กได้
2. หัวคั้นขนาดใหญ่เหมาะสำหรับการคั้นผลไม้ขนาดใหญ่ เช่น เกรปฟรุ้ต ส้ม เป็นต้น
3. หัวคั้นขนาดเล็กเหมาะสำหรับการคั้นผลไม้ขนาดเล็ก เช่น มะนาว ไลม์ เป็นต้น
4. ติดตั้งหัวคั้นขนาดเล็กลงบนแกนหมุนโดยตรง
5. หากคุณต้องการใช้หัวคั้นขนาดใหญ่ ให้ติดตั้งหัวคั้นขนาดเล็กลงบนแกนหมุนก่อน จากนั้นจึงใส่หัวคั้นขนาดใหญ่ครอบลงบนหัวคั้นขนาดเล็กอีกที

6. หมุนกรวยขนาดใหญ่ตามเข็มนาฬิกา เพื่อให้ล็อกเข้ากับกรวยขนาดเล็ก
7. หากต้องการแยกกรวยออกจากกัน ให้ดึงกรวยขนาดใหญ่ขึ้น จากนั้นหมุนทวนเข็มนาฬิกาเพื่อปลดล็อกออก

## การคั้นน้ำผลไม้

**คำเตือน:** หากคุณกดหัวคั้นแรงเกินไป มอเตอร์อาจหยุดทำงานได้

1. ถอดฝาปิดกันฝุ่นออก
2. ติดตั้งหัวคั้นที่เหมาะสมลงบนแกนหมุน
  - a) หากคุณต้องการเก็บน้ำไว้ในภาชนะกึ่งกลางก่อน ให้กดช่องเทน้ำขึ้นเพื่อปิด
  - b) หากคุณต้องการให้น้ำไหลลงแก้วโดยตรง ให้กดช่องเทน้ำลงเพื่อเปิด และวางแก้วรองไว้ด้านล่าง
3. ฝานผลไม้รสเปรี้ยวออกเป็นสองซีก แล้วกดด้านที่ผ่าของผลไม้ 1 ซีก ลงบนหัวคั้น
  - เครื่องจะเริ่มทำงานอัตโนมัติเมื่อคุณกดผลไม้ลง และหัวคั้นจะเริ่มหมุน
  - เครื่องจะหยุดทำงานอัตโนมัติทันทีเมื่อคุณลดแรงกดบนหัวคั้น
  - หัวคั้นจะดูดเนื้อผลไม้และบีบน้ำออกจากผลไม้
  - น้ำจะไหลผ่านตะแกรงกรองลงในถังเก็บน้ำผลไม้ และสามารถไหลต่อไปยังแก้วได้ (หากเปิดช่องเทน้ำ)
  - ตะแกรงจะช่วยกรองเนื้อผลไม้ที่หยาบและเมล็ดออกจากน้ำผลไม้ที่คั้นได้
4. เพื่อให้ น้ำผลไม้ถูกคั้นออกมาได้มากที่สุด ให้กดผลไม้ลงบนหัวคั้นหลายๆ ครั้ง

## หลังการใช้งาน

1. ถอดหัวคั้น ตะแกรงกรอง ภาชนะกึ่งกลาง และแกนหมุนออกจากตัวเครื่อง แล้วทำความสะอาดชิ้นส่วนเหล่านี้
2. ถอดปลั๊กเครื่องออกจากเต้ารับ

## เคล็ดลับการดื่มผลไม้รสเปรี้ยว

1. ดื่มน้ำที่หลังคั้น น้ำผลไม้จากผลไม้รสเปรี้ยว เช่น ส้ม มะนาว หรือเกรปฟรุต ควรดื่มน้ำที่ และไม่ควรเก็บไว้ในภาชนะโลหะ เพราะอาจทำให้รสชาติเปลี่ยนแปลงและสูญเสียวิตามินซี
2. ผสมเพื่อเพิ่มคุณค่า น้ำผลไม้รสเปรี้ยวเหมาะสำหรับการผสม เช่น ผสมน้ำส้มกับน้ำมะนาว เพื่อเพิ่มวิตามินซีและรสชาติที่สดชื่นยิ่งขึ้น
3. เพิ่มรสชาติให้เครื่องดื่ม น้ำผลไม้คั้นสดช่วยเพิ่มรสเปรี้ยวและกลิ่นหอมให้ค็อกเทลได้ดี น้ำมะนาวช่วยเพิ่มความอร่อยเมื่อใส่ในชาร้อน และช่วยเสริมภูมิคุ้มกัน โดยเฉพาะเวลาที่ไม่สบาย

## การทำความสะดวก

### อันตราย:

1. ถอดปลั๊กเครื่องคั้นน้ำส้มก่อนทำความสะอาด
2. ห้ามจุ่มฐานมอเตอร์ลงในน้ำหรือของเหลวอื่นๆ หรือวางไว้ใต้น้ำที่ไหล เพราะอาจทำให้เกิดไฟฟ้าช็อตได้
3. หัวคั้นน้ำ, ตะแกรงกรอง และภาชนะกลาง สามารถล้างด้วยเครื่องล้างจานได้
4. ใช้ผ้าชุบน้ำหมาดๆ เช็ดฐานมอเตอร์
5. หากคุณใช้ปากเทของภาชนะกลางบ่อยๆ อาจมีเนื้อผลไม้สะสมอยู่ในปากเท ดังนั้นควรทำความสะอาดปากเททุกครั้งหลังใช้งาน

## ปัญหาและวิธีแก้ไขเบื้องต้น

ปัญหา	แนวทางแก้ไข
มอเตอร์ไม่ทำงาน	ตรวจสอบว่าปลั๊กเสียบเข้ากับเต้ารับอย่างแน่นหนาหรือไม่
มอเตอร์หยุดทำงานขณะคั้นน้ำ	อาจกดหัวคั้นแรงเกินไป ลองลดแรงกดดู
น้ำหยดออกจากช่องเทแม่ฝ่าจะปิดอยู่	อาจมีเศษเนื้อผลไม้ติดอยู่ในช่องเท ลองถอดออกมาทำความสะอาด

# คำแนะนำและข้อมูลเกี่ยวกับการทิ้งวัสดุบรรจุภัณฑ์ที่ใช่แล้ว

ทิ้งวัสดุบรรจุภัณฑ์หรือกล่องกระดาษในสถานที่กำจัดขยะสาธารณะ

การกำจัดเครื่องใช้ไฟฟ้าและอุปกรณ์อิเล็กทรอนิกส์ที่ใช่แล้ว



ความหมายของสัญลักษณ์บนผลิตภัณฑ์ อุปกรณ์เสริม หรือบรรจุภัณฑ์ เป็นการระบุว่าผลิตภัณฑ์นี้ไม่ควรได้รับการกำจัดเหมือนเป็นขยะทั่วไปในครัวเรือน กรุณากำจัดผลิตภัณฑ์นี้ ณ จุดรวบรวมสำหรับการรีไซเคิลขยะประเภทอุปกรณ์ไฟฟ้าและอิเล็กทรอนิกส์

สำหรับอีกทางเลือกหนึ่งในบางรัฐของสหภาพยุโรปหรือรัฐอื่น ๆ ในยุโรป อาจส่งคืนผลิตภัณฑ์เก่าของคุณไปยังผู้ค้าปลีกในพื้นที่ของคุณเมื่อซื้อผลิตภัณฑ์ใหม่ที่เทียบเท่าการกำจัดที่ถูกต้องนี้จะช่วยประหยัดทรัพยากรธรรมชาติที่มีค่า และช่วยในการป้องกันผลกระทบเชิงลบที่อาจเกิดขึ้นต่อสิ่งแวดล้อมและสุขภาพของมนุษย์ซึ่งอาจเกิดจากการกำจัดของเสียที่ไม่เหมาะสม โปรดสอบถามหน่วยงานในพื้นที่ของคุณหรือศูนย์รวบรวมขยะที่ใกล้ที่สุดสำหรับรายละเอียดเพิ่มเติม การกำจัดของเสียประเภทนี้อย่างไม่เหมาะสมอาจก่อให้เกิดค่าปรับได้สำหรับในบางประเทศ

สำหรับหน่วยงานในสหภาพยุโรป

หากคุณต้องการทิ้งอุปกรณ์ไฟฟ้าหรืออิเล็กทรอนิกส์ โปรดขอข้อมูลที่จำเป็นจากผู้ขายหรือซัพพลายเออร์ของคุณ

การกำจัดในประเทศอื่น ๆ นอกสหภาพยุโรป

หากคุณต้องการทิ้งผลิตภัณฑ์นี้ โปรดขอข้อมูลที่จำเป็นเกี่ยวกับวิธีการกำจัดที่ถูกต้องจากหน่วยงานรัฐบาลท้องถิ่นหรือจากผู้ขายของคุณ



ผลิตภัณฑ์นี้ เป็นไปตามข้อกำหนดพื้นฐานตามกฎข้อบังคับที่เกี่ยวข้องของสหภาพยุโรปการเปลี่ยนแปลงข้อความ การออกแบบ และข้อกำหนดทางเทคนิค อาจเกิดขึ้นได้โดยไม่ต้องแจ้งให้ทราบล่วงหน้าและเราขอสงวนสิทธิ์ในการเปลี่ยนแปลงเหล่านี้

## การรับประกัน

### คำจำกัดความการรับประกันสินค้า

1. วันที่ได้รับการประกันสินค้าคือวันที่ลูกค้าได้รับสินค้าที่ระบุตามใบเสร็จรับเงิน
2. ลูกค้าต้องทำการลงทะเบียนรับการประกันสินค้าผ่านทางออนไลน์บนหน้าเว็บไซต์ของบริษัทตามลิงค์นี้ <https://app.hafele.co.th/warranty#/> หรือ สแกนผ่าน QR code ด้านล่างนี้ทันทีหลังจากที่ได้รับสินค้านี้ หากไม่ทำการลงทะเบียนการรับประกันสินค้า จะไม่อยู่ในข่ายของการรับประกันของทางบริษัททุกกรณี
3. การรับประกันสินค้าตามเงื่อนไขของบริษัทนั้น จะไม่ครอบคลุมในเรื่องการใช้งานผิดวิธีและ นอกเหนือจากคำแนะนำ หรือความผิดพลาดจากผู้ใช้เอง
4. สินค้าจะต้องอยู่ในกล่องบรรจุภัณฑ์พร้อมอุปกรณ์เสริมต่างๆ ต้องอยู่ครบถ้วน



### ใบรับประกันสินค้า

1. สินค้าที่ต้องการบริการหลังการขาย จำเป็นต้องใช้เอกสารประกอบ ดังนี้
  - ใบส่งของหรือหมายเลขคำสั่งซื้อ
  - ใบกำกับภาษีหรือใบเสร็จรับเงิน (ถ้ามี)
  - ใบรับประกัน (บริษัทจะนับจากกรณีที่ลูกค้าลงทะเบียนรับประกันเท่านั้น)
2. อุปกรณ์เสริมหรืออะไหล่ต่างๆ และบรรจุภัณฑ์ที่เกิดความเสียหายจากการขนส่ง ไม่อยู่ในเงื่อนไขของการรับประกัน

### โปรดลงทะเบียนผลิตภัณฑ์ภายใน 14 วันหลังจากวันที่ซื้อ


(ต้องแนบใบเสร็จรับเงินต้นฉบับหรือใบเสร็จรับเงินอิเล็กทรอนิกส์ของการซื้อหรือหมายเลขคำสั่งซื้อที่ทำ การสั่งซื้อโดยตรงกับทางช่องทาง E-Commerce ของบริษัทฯ เท่านั้น)

# HÄFELE

## INSTRUCTION MANUAL

### CITRUS JUICER

495.19.337

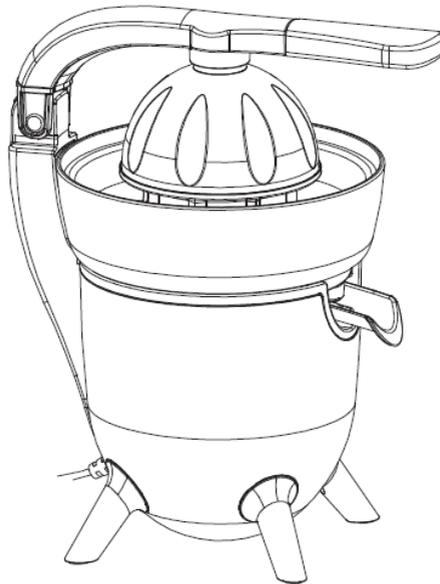

**Please read the manual carefully before using the product.**

**Häfele (Thailand) Co., Ltd.**

**57 Soi Sukhumvit 64, Sukhumvit Road, Prakanong Tai, Phrakanong,**

**Bangkok 10260, Phone: +66 (0) 2768 7171**



## IMPORTANT SAFEGUARDS


**When using electrical appliances, basic safety precautions should always be followed, including the following**

1. Read all the instructions before operating.
2. Remove the mains plug from the wall socket outlet, always pull the plug not the cord
  - If a disturbance occurs.
  - After use.
  - If the citrus juicer is out of use for a prolonged period of time.
  - Before cleaning the citrus juicer.
  - Before removing and inserting the pressing cones.
3. If you apply too much pressure to the cone while juicing the motor may seize.
4. Keep the connection for placing the juicer.
5. Place the juicer on a level surface that will not be harmed by splashes of juice as splashing cannot always be avoided. The surface should be easy to clean.
6. Do not stand the juicer on hot surfaces, such as hotplates or near naked flames.
7. Your citrus juicer is equipped with suction feet. The suction feet will adhere to any smooth surface. For them to adhere well, the surface must be flat and also free of dust or grease. The suction feet cannot adhere to a textured surface. Slightly moisten the suction feet before you press them onto the surface.
8. Do not fix the suction feet to sensitive surfaces. Some paints or synthetic coating may react adversely with the material of the suction feet and soften them. This could cause them to leave marks.
9. Never use abrasive or caustic cleaning products, as these may damage the surfaces.
10. To protect against electrical shock, do not immerse cord, plug or appliance itself in water or other liquids.
11. This appliance is not intended for use by persons (including children) with

reduced physical sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety. Children should be supervised to ensure that they do not play with the appliance.

12. Unplug from outlet when not in use and before cleaning. Allow to cool before putting on or taking off parts.
13. Do not operate any appliance with a damaged cord or plug or after the appliance malfunction or has been damaged in any manner. Return the appliance to the nearest authorized service facility for examination, repair or adjustment.
14. The use of accessory attachments not recommended by the appliance manufacturers may cause injuries.
15. Do not store any materials other than manufacturers recommended accessories in this unit when not in use.
16. If the supply cord is damaged, it must be replaced by the manufacturer, its service agent or similarly qualified persons in order to avoid a hazard.
17. This machine is unavailable for weakness, unresponsive or psychopathic person (including children), unless under the direction or help from the person who have responsibility for security. Children should be overseen, so it can be testified that they are not playing with it.

# KEY PARTS NAME AND LOCATION

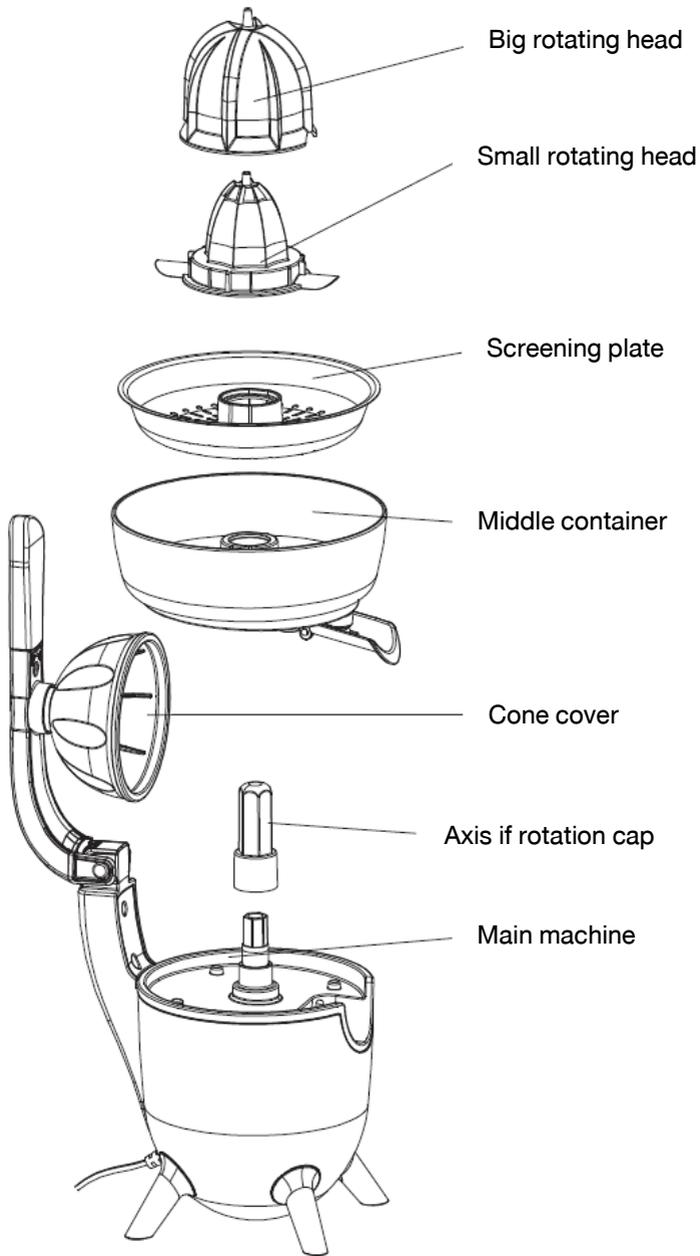

## BEFORE FIRST USE

1. **Danger:** Keep the packaging material away from children. They could suffocate.
2. Unpack the citrus juicer and remove all of the packaging.
3. Material Examine the juicer for visible damage and check that all of the parts are present.
4. You should clean the appliance before using it for the first time.
5. Wipe the motor base with a damp cloth.
6. Before using the juicer for the first time, rinse the cones, strainer, juice container and transparent dust lid with warm water and a few drops of washing-up liquid.

## OPERATION

### Setting up the juicer.

1. Stand the appliance on an even surface that is easy to clean.
2. Unwind the power cord to the length you require from the cord storage compartment (underneath the juicer). Make sure that the cord is correct.
3. Connect the mains plug to an AC 230V, 50Hz socket outlet.

## SELECTING ACCESSORIES

1. Depending on the size of the fruit you are juicer, you can use the large or the small cone.
2. The large cone is suitable for juicing small citrus fruit, such as grapefruit, oranges etc.

3. The small cone is suitable for juicing small citrus fruit, such as lemons, limes etc.
4. Fit the small juicing cone directly onto the drive shaft.
5. If you wish to use the large cone, fit the small cone onto the drive shaft. Then fit the large cone over the top of the small cone.
6. Rotate the large cone clockwise to lock it into the small cone.
7. To separate the cones, pull the large cone upward, then rotate it counterclockwise to unlock.

## JUICING

**Caution:** if you apply too much pressure to the juicing cone, the motor may seize.

1. Remove the transparent dust lid.
2. Fit the appropriate cone onto the drive shaft.
  - a) If you wish to collect the juice in the container, press the spout upwards to close it.
  - b) If you want the juice to run straight into a glass, press the spout downwards to open it and place a stand under it.
3. Cut a citrus fruit in half and press the cut end of one fruit half onto the cone.
  - The juicer switches on automatically when you press the fruit down and the cone starts to turn.
  - The juicer automatically switches off as soon as you reduce pressure on the cone.
  - The cone scrapes the pulp out and squeezes the juice from the fruit.
  - The juice flows through the strainer into the juice container from where it can run into a glass (the spout must be open).
  - The strainer keeps back thick pulp and seeds.
4. To maximize the quantity of juice extracted from a fruit, press a fruit onto the cone several times.

## AFTER USE

1. Remove cone, strainer, juice container and drive shaft from the appliance and clean them.
2. Unplug the appliance.

## JUICING ADVICE

1. Citrus fruit juices should be consumed immediately and never stored in a metal container.
2. Citrus juices are ideal for mixing. For example, you can mix orange juice with lemon juice for an extra vitamin C.
3. Freshly squeezed juice gives cocktails a particularly tangy twist and better flavor. Lemon juice is also delicious in hot tea and additionally helps you build up your defenses when you have a cold.

## CLEANING

### **Danger:**

1. Unplug the citrus juicer before you clean it.
2. The motor base must not be immersed in water or other liquids or held under running water as this could give you an electric shock.
3. The juicing cones, strainer and juice container can go in the dishwasher.
4. Wipe the motor base with a damp cloth.
5. If you use the spout on the juice container frequently, pulp may build up in the spout. Therefore, clean the spout after each use.

## FAULT / REMEDY

FAULT	REMEDY
Motor won't start	Is the mains plug connected properly to the socket outlet?
Motor stops running while juicing	Are you pressing on the cone too hard?
Although the spout is closed, juice still drips out	Are there any bits of pulp left in the spout?

## INSTRUCTIONS AND INFORMATION REGARDING THE DISPOSAL OF USED PACKAGING MATERIALS

**Dispose of packaging material at a public waste disposal site.**

### DISPOSAL OF USED ELECTRICAL AND ELECTRONIC APPLIANCES



The meaning of the symbol on the product, its accessory or packaging indicates that this product shall not be treated as household waste. Please, dispose of this product at your applicable collection point for the recycling of electrical & electronic equipment waste.

Alternatively, in some states of the European Union or other European states you may return your products to your local retailer when buying an equivalent new product. The correct disposal of this product will help save valuable natural resources and help in preventing the potential negative impact on the environment and human health, which could be caused as a result of improper liquidation of waste. Please ask your local authorities or the nearest waste collection center for further details. The improper disposal of this type of waste may fall subject to national regulations for fines.

#### **For business entities in the European Union**

If you wish to dispose of an electrical or electronic device, request the necessary information from your seller or supplier.

#### **Disposal in other countries outside the European Union**

If you wish to dispose of this product, request the necessary information about the correct disposal method from local government departments or from your seller.



meets all the basic EU regulation requirements that relate to it. Changes to the text, design and technical specifications may occur without prior notice and we reserve the right to make these changes.

## WARRANTY

### EFFECTIVE DEFINITION OF PRODUCT WARRANTY

1. The date the warranty will start from the date that specify on receipt or invoice.
2. Customers must register for product warranty online on the Company's website at this link <https://app.hafele.co.th/warranty#/> or scan via QR code below immediately after receiving this product. If not registered, the product will not be covered by the company's warranty in all cases.
3. If misused and in addition to any advice or error from the users, the warranty will not cover all cases.
4. The product must be in the package with all accessories complete.



### PRODUCT WARRANTY CERTIFICATE

1. Product after-sales service valid warranty certificate such as
  - Delivery noted or various order numbers of purchase.
  - Invoice or receipt (if any).
  - Warranty card (the company will count from the case that the customer registers the warranty only).
2. Accessories or spare parts and packaging are damaged in transportation not in terms of warranty.

**Please register the product within 14 days after the date of purchased.**

(The original receipt or e-receipt of the purchase or order number must be attached directly to the company's E-Commerce channel only).