

MINIMEX
CYCLONE

คู่มือการใช้งาน
เครื่องปั่นน้ำผลไม้

Minimex
รุ่น MCC1



Instruction Manual
Heavy Duty Blender

Model : Minimex Cyclone 1 (MCC1)

220V., ~50Hz., 1,680W.

ไทย / English

คำแนะนำเพื่อความปลอดภัย:

ข้อควรระวังเพื่อความปลอดภัย

ความปลอดภัยของคุณ และความปลอดภัยของผู้ใช้งานเป็นสิ่งสำคัญมาก

เราได้ให้ข้อความด้านความปลอดภัยที่สำคัญหลายประการในคู่มือนี้ โปรดอ่านและปฏิบัติตามเพื่อความปลอดภัยทั้งหมด ข้อความด้านความปลอดภัยทั้งหมดจะแจ้งให้คุณทราบถึงอันตรายที่อาจเกิดขึ้น แจ้งการใช้งานที่ถูกต้อง และเหตุที่อาจเกิดขึ้นหากไม่ปฏิบัติตามคำแนะนำ

ข้อควรระวัง : บังชี้ถึงสถานการณ์อันตรายในระดับปานกลาง ซึ่งหากไม่หลีกเลี่ยง อาจส่งผลให้เกิดการบาดเจ็บเล็กน้อยหรือปานกลาง

คำเตือน: บังชี้ถึงสถานการณ์อันตรายที่อาจเกิดขึ้น ซึ่งหากไม่หลีกเลี่ยง อาจส่งผลให้เกิดการบาดเจ็บสาหัสหรือเสียชีวิตได้

- การทำงานที่ไม่ถูกต้องและการใช้งานเครื่องอย่างไม่เหมาะสมอาจทำให้อุปกรณ์เสียหายอย่างร้ายแรงและทำให้ผู้ใช้บาดเจ็บได้
- เครื่องใช้ไฟฟ้าใช้เพื่อวัตถุประสงค์ที่ออกแบบมาเท่านั้น
- ผู้ผลิตไม่รับผิดชอบต่อความเสียหายใดๆ ที่เกิดจากการทำงานที่ไม่ถูกต้อง และการใช้งานที่ไม่เหมาะสม

คำแนะนำในการต่อสายดิน

- เครื่องใช้ไฟฟ้านี้ต้องต่อสายดิน ในกรณีที่เกิดการลัดวงจรทางไฟฟ้า การต่อสายดินจะช่วยลดความเสี่ยงจากการถูกไฟฟ้าดูดโดยการเป็นสายหนีไฟสำหรับกระแสไฟฟ้า
- เครื่องใช้ไฟฟ้านี้มีสายไฟที่มีสายดิน และปลั๊กต่อสายดิน
- ปลั๊กต้องเสียบเข้ากับเต้ารับที่ติดตั้ง และต่อสายดินอย่างเหมาะสม หากเต้ารับเป็นเต้ารับติดผนังแบบ 2 ขา มาตรฐาน เป็นความรับผิดชอบและหน้าที่ส่วนบุคคลของคุณที่จะต้องเปลี่ยนเป็นเต้ารับติดผนังแบบ 3 ขาที่ต่อสายดินอย่างเหมาะสม
- เนื่องจากความผันผวนของแรงดันไฟฟ้าในสายไฟที่อาจเกิดขึ้น แนะนำให้ติดตั้งวงจรฟิวส์แยกต่างหากจากแผงมิเตอร์ ซึ่งจะช่วยให้จัดการความผันผวนของกระแสไฟที่อาจทำให้มอเตอร์มีปัญหาได้ แผ่นป้ายพิกัดระบุแรงดันไฟฟ้าและความถี่ที่เครื่องใช้ไฟฟ้าที่ระบุชัดเจน

คำเตือน :

- การใช้ปลั๊กสายดินอย่างไม่เหมาะสมอาจส่งผลให้เกิดความเสี่ยงต่อการถูกไฟฟ้าดูด ปรีกษาช่างไฟฟ้าที่มีคุณสมบัติเหมาะสมหรือศูนย์บริการ หากไม่เข้าใจคำแนะนำในการต่อสายดินอย่างสมบูรณ์ หรือหากมีข้อสงสัยว่าเครื่องใช้ไฟฟ้ามีการต่อสายดินอย่างเหมาะสมหรือไม่
- ห้ามต่อสายไฟ ห้ามตัดหรือถอดขาสายดินที่สามออกจากสายไฟไม่ว่ากรณีใดๆ ห้ามใช้อะแดปเตอร์ปลั๊กที่ไม่มีสายดิน (สองขา) กับเครื่องใช้นี้

คำเตือน :

- เก็บเครื่องใช้ไฟฟ้าและปลั๊กไฟฟ้าให้ห่างจากน้ำและของเหลวอื่นๆ
- ในกรณีที่เครื่องใช้ไฟฟ้าตกลงไปในน้ำ ถูกรั่ว หรือของเหลวใดๆ ให้ดึงปลั๊กออกจากเต้ารับทันที และนำเครื่องไปตรวจสอบโดยศูนย์บริการ
- การไม่ปฏิบัติตามคำแนะนำเหล่านี้อาจนำไปสู่สถานการณ์ที่อันตรายถึงชีวิต
- ห้ามพยายามเปิดตัวเครื่องเอง
- ห้ามสอดวัตถุใดๆ เข้าไปในตัวเครื่อง

คำเตือน :

- ห้ามสัมผัสปลั๊กด้วยมือที่เปียกหรือชื้น
- ตรวจสอบปลั๊กและสายไฟเป็นประจำ หากปลั๊กหรือสายไฟเสียหาย ห้ามใช้งาน ติดต่อศูนย์บริการทันที
- ห้ามใช้เครื่องหลังจากที่เครื่องตกลงมาจากที่สูง หรือเสียหายในลักษณะอื่นใด ห้ามใช้งาน ติดต่อศูนย์บริการทันที
- ห้ามพยายามซ่อมเครื่องเอง การทำเช่นนี้อาจนำไปสู่สถานการณ์ที่อันตรายถึงชีวิต
- ตรวจสอบให้แน่ใจว่าสายไฟไม่สัมผัสกับวัตถุคมหรือร้อน และเก็บให้ห่างจากเปลวไฟ เมื่อดึงปลั๊กออกจากเต้ารับ ให้ดึงที่หัวปลั๊กเสมอ ห้ามดึงที่สายไฟ
- ตรวจสอบให้แน่ใจว่าไม่มีใครสามารถดึงสายไฟ (หรือสายต่อ) หลุดโดยไม่ตั้งใจ หรือสะดุดสายไฟ
- ควรเฝ้าดูเครื่องอยู่เสมอขณะใช้งาน
- ห้าม! เด็กใช้เครื่องใช้ไฟฟ้า ไม่ควรให้เด็กหรือผู้ด้อยความสามารถ เป็นผู้ใช้งาน ใช้ความระมัดระวังอย่างยิ่งหากใช้เครื่องใกล้เด็ก
- ห้ามนำเครื่องเตรียมอาหารนี้ไปใช้เพื่อการอื่น

ข้อควรระวัง : ถอดปลั๊กออกจากเต้ารับเสมอเมื่อไม่ได้ใช้งานเครื่อง และก่อนทำความสะอาดเสมอ

คำเตือน : ปลั๊กยังเสียบอยู่ในเต้ารับ เครื่องใช้ไฟฟ้ายังคงเชื่อมต่อกับแหล่งพลังงาน

- ปิดเครื่องก่อนดึงปลั๊กออกจากเต้ารับ
- ห้ามถือเครื่องโดยยังต่อกับสายไฟ ปลั๊กพ่วง
- เครื่องใช้ไฟฟ้านี้ใช้สำหรับปั่นอาหารเท่านั้น
- ห้ามใช้อุปกรณ์เสริมใดๆ ที่ไม่ได้มาพร้อมกับเครื่อง
- เชื่อมต่อเครื่องเข้ากับเต้ารับไฟฟ้า 220-240VAC ที่ต่อสายดินเท่านั้น
- ห้ามถอดขาสายดินออกจากปลั๊ก เพื่อความปลอดภัย
- หลีกเลี่ยงการใช้งานเกินกำลัง
- ท่านสามารถใส่ลงในโถได้เมื่อปิดฝาโถอยู่เท่านั้น
- ปิดเครื่องหลังใช้งานโดยถอดปลั๊กออกจากเต้ารับ
- ถอดปลั๊กออกจากเต้ารับเสมอเมื่อถอดอุปกรณ์ หรือทำความสะอาดเครื่อง
- ตรวจสอบค่าไฟฟ้า และค่าไฟสำหรับเครื่องใช้ไฟฟ้าก่อนใช้งานทุกครั้ง
- เครื่องใช้ไฟฟ้านี้ไม่เหมาะสำหรับบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพทางกาย สัมผัส หรือจิตใจ ไม่สมบูรณ์ หรือขาดประสบการณ์และความรู้ เว้นแต่จะได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้เครื่องจากบุคคลที่รับผิดชอบด้านความปลอดภัย
- เครื่องใช้ไฟฟ้านี้มีวัตถุประสงค์เพื่อใช้ในครัวเรือน และการใช้งานที่คล้ายคลึงกัน เช่น:
 - พื้นที่ครัวพนักงานในร้านค้า สำนักงาน และสำนักงานอื่นๆ
 - บ้านไร่ สวน
 - โรงแรม บ้านพัก Bed and Breakfast
- โถของเครื่องใช้ไฟฟ้าใช้ได้เฉพาะกับตัวเครื่องหลักที่ให้มาเท่านั้น

- การต่อสายไฟต้องทำโดยช่างเทคนิคผู้เชี่ยวชาญ
- ผู้ผลิต/ผู้นำเข้าจะไม่รับผิดชอบต่อความเสียหายใดๆ ที่เกิดจากการติดตั้งที่ไม่ถูกต้องหรือไม่เหมาะสม
- ตรวจสอบว่าแรงดันไฟฟ้าหลักตรงกับที่ระบุบนป้ายระบุพิกัดที่ติดอยู่กับเครื่องใช้ไฟฟ้า
- ติดตั้งอุปกรณ์สายไฟตามกฎการเดินสายไฟให้เป็นไปตามมาตรฐานอุตสาหกรรม
- สำหรับเครื่องใช้ไฟฟ้าประเภท Class I ให้ตรวจสอบว่าแหล่งจ่ายไฟในบ้านรับประกันการต่อสายดินที่เพียงพอ
- หากสายไฟเสียหาย ติดต่อศูนย์บริการโทร. 02-493-6565
- ตรวจสอบสภาพเต้าเสียบ เต้ารับไฟ(แหล่งจ่ายไฟ) ก่อนการใช้งานเครื่องทุกครั้ง

ข้อควรระวัง : ก่อนติดตั้งเครื่องใช้ไฟฟ้า ให้ถอดวัสดุบรรจุภัณฑ์ทั้งหมดออก

คำเตือน :

- เครื่องใช้ไฟฟ้านี้สามารถใช้โดยเด็กอายุตั้งแต่ 16 ปีขึ้นไป และบุคคลที่มีความสามารถทางกายภาพ สัมผัส หรือจิตใจที่ไม่สมบูรณ์ หรือขาดประสบการณ์และความรู้ หากได้รับการดูแลหรือคำแนะนำเกี่ยวกับการใช้เครื่องอย่างปลอดภัยและเข้าใจถึงอันตรายที่เกี่ยวข้อง
- ห้าม!เด็กเล่นกับเครื่องใช้ไฟฟ้า ห้าม!การทำความสะดวกและการบำรุงรักษาโดยเด็ก โดยไม่มีการควบคุมดูแล
- เด็กควรได้รับการดูแลเพื่อให้แน่ใจว่าพวกเขาจะไม่เล่นกับเครื่องใช้ไฟฟ้า
- เครื่องใช้ไฟฟ้าไม่เหมาะสำหรับบุคคล (รวมถึงเด็ก) ที่มีสมรรถภาพทางกาย สัมผัส หรือจิตใจที่ไม่สมบูรณ์ หรือขาดประสบการณ์และความรู้ เว้นแต่จะได้รับการดูแลหรือคำแนะนำ

คำแนะนำด้านความปลอดภัยพิเศษ :

- ใบมีดในโถ มีคม อาจทำให้เกิดการบาดเจ็บสาหัสได้ ห้ามเอื้อมมือเข้าไปในโถ!
- ชิ้นส่วนที่เคลื่อนไหวจะร้อนขึ้นเมื่อใช้งานเป็นเวลานาน เช่นใบมีด ห้ามสัมผัสชิ้นส่วนที่เคลื่อนไหว เสี่ยงต่อการไหม้!
- ห้าม! ปั่นของร้อน เสี่ยงต่อการไหม้จากไอน้ำและกระเด็น!
- ถอดปลั๊กเครื่องจากเต้ารับไฟฟ้าเมื่อไม่ใช้งาน
- ตรวจสอบให้แน่ใจว่ามอเตอร์ดับก่อนวางโถลงบนชุดมอเตอร์

การเตรียมการก่อนใช้งานครั้งแรก :

- ตรวจสอบให้แน่ใจว่าเครื่องไม่เสียหาย ในกรณีที่เกิดความเสียหายใดๆ ให้ติดต่อศูนย์บริการทันที และ ห้าม!ใช้เครื่อง
- ถอดวัสดุบรรจุภัณฑ์ทั้งหมดออก
- ทำความสะอาดเครื่องด้วยน้ำอุ่นและผ้าสะอาด ชุบน้ำบิดหมาด
- วางเครื่องบนพื้นผิวที่เรียบและมั่นคง ห้ามใช้งานใกล้แหล่งความร้อนเช่น เตาไฟฟ้า หรือ เตาอบ เป็นต้น
- จัดวางเครื่องในลักษณะที่ปลั๊กสามารถเข้าถึงได้เสมอ ปลั๊กไม่ควรดึง และรั้งขอบหรือมุมโต๊ะ

ส่วนประกอบ



- ① ฝาครอบเก็บเสียง
- ② ฝาปิด
- ③ ฝาโถ
- ④ โถ
- ⑤ ชุดใบมีด
- ⑥ แผ่นยางรอง
- ⑦ หน้าจอ : แผงควบคุม
- ⑧ ตัวเครื่องหลัก

หน้าจอ : แผงควบคุม



การทำงานสำหรับเครื่องปั่นหน้าจอ Digital ระบบสัมผัส

- ตรวจสอบว่าถอดตัวสับบรรจุภัณฑ์ทั้งหมดออกแล้ว
- เสียบปลั๊กเครื่องเข้ากับเต้าเสียบไฟ
- ใส่ส่วนผสมลงในโถ ปิดฝาให้แน่น
- วางโถลงบนชุดมอเตอร์อย่างถูกต้อง
- ปิดฝาคกรอบเก็บเสียงอย่างถูกต้อง
- สัญลักษณ์ "▶" จะสว่างขึ้น (โหมดเปิดเครื่อง)
- แตะ "▶" เพื่อเข้าสู่โหมดสแตนด์บาย (ปุ่มทั้งหมดจะสว่างขึ้น)
- โปรดดูตารางด้านล่างสำหรับการทำงานของสวิตช์ฟังก์ชันต่างๆ

▶ **สวิตช์เปิด/ปิด:** จะสว่างขึ้น เมื่อเปิดเครื่อง (โหมดเปิดเครื่อง) แตะหน้าจอเพื่อเข้าสู่โหมดสแตนด์บาย และอีกครั้งเพื่อทำงานด้วยความเร็วปานกลางเป็นเวลา 20 วินาที ขณะที่เครื่องกำลังทำงาน ให้แตะสวิตช์นี้เพื่อหยุดการทำงานและกลับสู่โหมดเปิดเครื่อง



สวิตช์ควบคุมความเร็ว : แตะเพื่อทำงานที่ความเร็วต่ำ – ระดับ 10



สวิตช์ควบคุมความเร็ว : แตะเพื่อทำงานที่ความเร็วปานกลาง – ระดับ 20



สวิตช์ควบคุมความเร็ว : แตะเพื่อทำงานที่ความเร็วสูง – ระดับ 35

30
*wave
mode

30 วินาที

แตะเพื่อป้อนเป็นเวลา 30 วินาทีในโหมด30วินาทีอัตโนมัติ (สลับความเร็วต่ำและสูงตามลำดับ) เมื่อฟังก์ชันนี้ทำงาน ตัวจับเวลา และความเร็วจะไม่สามารถปรับได้ แตะ "▶" เพื่อหยุดการทำงาน หรือรอให้เครื่องนับถอยหลัง 30 วินาทีจนหยุดเอง

45

ตัวจับเวลา (45 วินาที)

แตะเพื่อตั้งเวลา 45 วินาที จากนั้นแตะสวิตช์ควบคุมความเร็วเพื่อเริ่มทำงาน เครื่องจะหยุดหลังจาก 45 วินาที หรือหยุดการทำงานโดยการแตะสวิตช์เปิด/ปิด ขณะทำงาน สามารถปรับความเร็วและเวลาได้

90

ตัวจับเวลา (90 วินาที)

แตะเพื่อตั้งเวลา 90 วินาที จากนั้นแตะสวิตช์ควบคุมความเร็วเพื่อเริ่มทำงาน เครื่องจะหยุดหลังจาก 90 วินาที หรือหยุดการทำงานโดยการแตะสวิตช์เปิด/ปิด ขณะทำงาน สามารถปรับความเร็วและเวลาได้



สวิตช์ Pulse

กดค้างไว้เพื่อป้อนด้วยความเร็วสูงสุด ปล่อยให้หยุด

- เพื่อให้มอเตอร์มีอายุการใช้งานยาวนานขึ้น ห้ามใช้งานเกิน 2 นาทีเมื่อทำงานที่กำลังสูงสุด จากนั้นปิดเครื่องเป็นเวลา 2 นาที ห้ามใช้งานเกินกำลัง
- ปิดมอเตอร์และรอจนกว่ามอเตอร์จะหยุดสนิทก่อนถอดไดออก
- เครื่องจะปิดโดยอัตโนมัติเมื่อเปิดฝาครอบ
- ถอดปลั๊กเครื่องจากเต้ารับเมื่อไม่ใช้งาน

การทำความสะอาดและการบำรุงรักษา

- ถอดปลั๊กออกจากเต้ารับเมื่อใช้งานเสร็จเสมอ และก่อนทำความสะอาดเครื่อง
- **ข้อควรระวัง:** ห้ามจุ่มหรือแช่ เครื่องลงในน้ำหรือของเหลวอื่นๆ!
- ทำความสะอาดภายนอกของเครื่องด้วยผ้าสะอาดชุบน้ำบิดหมาด
- ห้ามใช้น้ำยาทำความสะอาดที่รุนแรงและ/หรือสารกัดกร่อน ห้ามใช้วัตถุมีคมและ/หรือปลายแหลม ห้ามใช้น้ำมันเบนซินหรือตัวทำละลาย! ทำความสะอาดด้วยผ้าสะอาดชุบน้ำบิดหมาด
- ห้ามใช้วัสดุที่มีฤทธิ์กัดกร่อน
- ห้ามจุ่มหรือแช่ไดออกในน้ำหรือของเหลวอื่นๆ! ต้องทำความสะอาดได้อ่าง และเช็ดให้แห้งทันทีหลังการใช้งานแต่ละครั้ง

ขั้นตอนการทำความสะอาดโกป็น

- เทน้ำและน้ำยาล้างจานอ่อนๆ ลงในโก
- ปิดฝาโก
- วางโกลงบนชุดมอเตอร์
- เปิดเครื่องที่ความเร็วสูงสุดเป็นเวลา 10-20 วินาที
- ปิดเครื่อง
- ถอดโกออกจากชุดมอเตอร์
- ล้างโกให้สะอาดด้วยน้ำสะอาด
- เช็ดโกด้านในและด้านนอกให้แห้ง
- เก็บโกคว่ำลง
- โกไม่สามารถเข้าเครื่องล้างจานได้!
- ด้านล่างของโกต้องไม่สัมผัสกับของเหลวใดๆ!

การรับประกัน

เครื่องปั่นน้ำผลไม้ รุ่น Minimex Cyclone 1 (MCC1) ระยะเวลาประกัน 1 ปี (รับประกันมอเตอร์ 2 ปี)

เงื่อนไขการรับประกัน

การรับประกันครอบคลุมถึงคุณภาพของสินค้าและมีเงื่อนไขการประกอบโดยสินค้าต้องใช้ใน คริวเรือนเท่านั้น ผู้ใช้ ต้องใช้งานและบำรุงรักษาอย่างถูกต้องตามคำแนะนำในหนังสือคู่มือ

ข้อยกเว้นการรับประกัน

บริษัทฯ ขอสงวนสิทธิ์ในความรับผิดชอบต่อความเสียหายใดๆ ที่เป็นผลสืบเนื่องจากการใช้สินค้า และสงวนสิทธิ์การรับประกันหากลูกค้า :

- นำสินค้าไปใช้ผิดจากวัตถุประสงค์ของการออกแบบ เช่น การนำเอาสินค้าที่ออกแบบมาเพื่อการใช้ในครัวเรือน แต่นำไปใช้เพื่อประกอบอาชีพหรือในเชิงพาณิชย์
- ใช้งานผิดวิธีหรือมิได้ใช้งานตามวิธีที่อธิบายในหนังสือคู่มือ
- มิได้บำรุงรักษาตามคำแนะนำในหนังสือคู่มือ

การใช้สิทธิ์การรับประกันสินค้า

การรับประกันสินค้ามีผลตามวันที่ ที่ระบุในใบรับประกันสินค้า กรุณาแสดงใบรับประกันสินค้า หรือใบกำกับภาษี ใบเสร็จรับเงิน เพื่อเป็นหลักฐานในการติดต่อเจ้าหน้าที่ศูนย์บริการฯ ในการใช้สิทธิ์การรับประกันสินค้า

การพิจารณาความบกพร่องของสินค้าเพื่อการรับประกัน

บริษัทฯ จะทำการตรวจสอบสินค้าอย่างละเอียด และตัดสินใจว่าความบกพร่องของสินค้านั้นอยู่ในเงื่อนไขการรับประกันหรือไม่ซึ่งเป็นสิทธิ์ของบริษัทฯ เท่านั้น ในกรณีที่อยู่ในเงื่อนไขการรับประกัน บริษัทฯ จะเป็นผู้รับผิดชอบค่าแรงในการซ่อม ค่าอะไหล่ และค่าจัดส่งสินค้าถึงบ้านลูกค้า โดยลูกค้าไม่ต้องชำระค่าบริการใดๆทั้งสิ้น หากบริษัทฯ พิจารณาเห็นว่าต้องเปลี่ยนสินค้าใหม่ให้แก่ลูกค้าแต่สินค้ารุ่นเดียวกันไม่มีจำหน่ายแล้ว บริษัทฯ จะเป็นผู้ตัดสินใจว่าสินค้านั้นใดเหมาะสมที่จะเปลี่ยนแทน

การคืนสินค้า

ในกรณีที่ลูกค้าซื้อสินค้าไปแล้วแต่ไม่ถูกใจ บริษัทฯ ยินดีรับคืนสินค้าภายใน 15 วัน โดยมีเงื่อนไขว่าสินค้าต้องมีบรรจุภัณฑ์อย่างสมบูรณ์และสินค้ามิได้ถูกใช้งานมาก่อน โดยลูกค้าต้องนำหลักฐานการซื้อเพื่อคืนสินค้า ณ ร้านค้าที่ซื้อเท่านั้น


ศูนย์บริการ

หากท่านต้องการบริการรายละเอียดเพิ่มเติมหรือสั่งซื้ออุปกรณ์พิเศษท่านสามารถติดต่อศูนย์บริการได้

Service Center : Tel. 02-493-6565

E-mail : SERVICE_minimex@penk.co.th

ช่วยกันรักษาสิ่งแวดล้อม

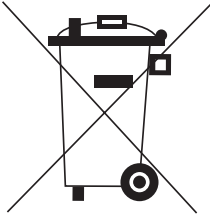

เราขอชี้ชวนให้ท่านร่วมรักษาสภาพแวดล้อม
ด้วยการทิ้งเศษอุปกรณ์ที่เลิกใช้แล้ว ณ สถานที่ที่เหมาะสม

MINIMEX
CYCLONE

Instruction Manual
HEAVY DUTY BLENDER

Minimex

Model : MCC1



Instruction Manual
Heavy Duty Blender

Model : Minimex Cyclone 1 (MCC1)

220V., ~50Hz., 1,680W.

English

IMPORTANT SAFEGUARDS :

YOUR SAFETY AND THE SAFETY OF OTHERS ARE VERY IMPORTANT.

We have provided many important safety messages in this manual and on your appliance. Always read and obey all safety messages. All safety messages will alert you what the potential hazard is, tell you how to reduce the chance of injury, and let you know what can happen if the instructions are not followed.

CAUTION : indicates a moderate hazardous situation which, if not avoided, could result in minor or moderate injury.

WARNING : indicates a potentially hazardous situation which, if not avoided, could result in serious injury or death.

- Incorrect operation and improper use of the appliance can seriously damage the appliance and injure users.
- The appliance may only be used for the purpose for which it was intended and designed.
- The manufacturer is not liable for any damage caused by incorrect operation and improper use.

GROUNDING INSTRUCTIONS

- This appliance must be grounded. In the event of an electrical short circuit, grounding reduces the risk of electrical shock by providing an escape wire for the electrical current.
- This appliance is equipped with a cord that has a grounding wire with a grounding plug.
- The plug must be plugged into an outlet that is properly installed and grounded. If the outlet is a standard 2-prong wall outlet, it is your personal responsibility and obligation to have it replaced with a properly grounded 3-prong wall outlet.
- Due to possible variations in line voltage (caused by overloading of circuits), it is advisable to install a separate fuse circuit from the meter panel. This will help to eliminate current fluctuation which might cause motor trouble. The serial rating plate indicates the voltage and frequency the appliance is designed for.

WARNING :

- Improper use of the grounding plug can result in a risk of electric shock. Consult a qualified electrician or service agent if the grounding instructions are not completely understood, or if doubt exists as to whether the appliance is properly grounded.
- Do not splice the cord. Do not under any circumstances cut or remove the third ground prong from the power cord. Do not use ungrounded (two prong) adapter plugs with this appliance.

WARNING :

- Keep the appliance and electrical plug away from water and any other liquids. In the unlikely event that the appliance should fall into water, immediately pull the plug out of the socket and have the appliance checked by a certified technician.
 - Not following these instructions could give rise to life-threatening situations.
 - Never try to open the casing of the appliances yourself.
 - Do not insert any objects in the casing of the appliance.
-

WARNING :

- Do not touch the plug with wet or damp hands.
 - Regularly check the plug and cord for any damage. Should the plug or cord be damaged have it/them repaired by a certified repair company.
 - Do not use the appliance after it has fallen or is damaged in any other way. Have it checked and repaired, if necessary, by a certified repair company.
 - Do not try to repair the appliance yourself. This could give rise to life-threatening situations.
 - Make sure the cord does not come in contact with sharp or hot objects and keep it away from open fire. To pull the plug out of the socket, always pull on the plug and not on the cord.
 - Make sure that no one can accidentally pull the cord (or extension cord) loose or trip over the cord.
 - Always keep an eye on the appliance when in use.
 - Children do not understand that incorrect use of electrical appliances can be dangerous. Therefore, never let children use home appliances without supervision.
-

CAUTION : Always pull the plug out of the socket when the appliance is not being used and always before cleaning.

WARNING :

As long as the plug is in the socket the appliance is connected to the power source.

- Turn off the appliance before pulling the plug out of the socket.
- Never carry the appliance by the cord.
- This appliance is solely used for blending food.
- Do not use any extra devices that are not supplied along with the appliance.
- Only connect the appliance to an earthed 220-240VAC electrical socket.

- Do not removed the grounding prong from the plug. If in doubt about the grounding of the home electrical system, it is your responsibility and obligation to have an grounded outlet in accordance with the National Electrical Code.
- Avoid overloading.
- Tamper can only be put into the jar while the jar lid is placed onto the jar
- Turn off the appliance after use by removing the plug from the socket.
- Always remove the plug from the socket when filling or cleaning the appliance.
- The electrical installation must satisfy the appliance national and local regulations.
- This appliance is not intended for use by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction concerning use of the appliance by a person responsible for their safety.
- This appliance is intended to be used in household and similar applications such as:
 - staff kitchen areas in shops, offices and other working environments;
 - farm houses;
 - by clients in hotels, motels and other residential type environments;
 - bed and breakfast type environments.
- The jar of the appliance is only to be used with the main machine provided.

The wire connection must be done by specialized technician.

The manufacturer will not be held liable for any damages resulting from incorrect or improper installation.

Check that the mains voltage corresponds to that indicated on the rating label fixed on the appliance.

Means for disconnection must be incorporated in the fixed wiring in accordance with the wiring rules.

For Class I appliances, check that the domestic power supply guarantees adequate earthing.

If the supply cord is damaged, it must be replaced from the manufacturer or its service agent.

Connect the plug to a socket complying with current regulations, located in an accessible place.

CAUTION : Before installing the appliance, remove all the packing materials.

WARNING :

- This appliance can be used by children aged from 16 years and above and persons with reduced physical, sensory, or mental capabilities or lack of experience and knowledge if they have been given supervision or instruction concerning use of the appliance in a safe way and understand the hazards involved.
- Children shall not play with the appliance. Cleaning and user maintenance shall not be made by children without supervision.
- Children should be supervised to ensure that they do not play with the appliance.
- The appliance is not to be used by persons (including children) with reduced physical, sensory or mental capabilities, or lack of experience and knowledge, unless they have been given supervision or instruction.

SPECIAL SAFETY INSTRUCTIONS :

- The cutting blades in the jar can cause severe injury. Do not reach into the jar!
- Moving parts will become hot with extended use. Don't touch the moving parts.
Risk of burns!
- Be careful when blending hot liquids. Only blend hot liquids at the lowest speed and with the lid firmly in place. Risk of burns by escaping steam and splashes!
- Unplug the appliance from the power outlet if not in use.
- Make sure the motor unit is switched off before placing the jar onto the motor unit.

Preparations before using for the first time

- Check to make sure the appliance is undamaged. In case of any damage, contact your supplier immediately and do NOT use the appliance.
- Remove all the packing material.
- Clean the appliance with lukewarm water and a soft cloth.
- Place the appliance on a level and steady surface.
- Position the appliance in a way that the plug is always accessible.

KNOW YOUR BLENDER



- ① Soundproof Cover
- ② Steam lid
- ③ Jar lid
- ④ Jar
- ⑤ Blades set
- ⑥ Rubber pad
- ⑦ Control panel
- ⑧ Main machine

CONTROL PANEL



Operations for digital control blender

- Check if all the packing material are removed.
- Plug the appliance into mains.
- Place the ingredients in the jar. Close the lid firmly.
- Place the jar onto the motor unit correctly.
- Close the soundproof cover correctly.(If applicable)
- The symbol " ► " will be lighted (POWER-ON mode).
- Touch " ► " to enter STAND-BY mode (All the switches will be lighted up).
- Refer to below table for operations of function switches.

► **Power Switch** : Will be lighted up once the appliance is connected to mains (POWER-ON mode). At POWER-ON mode, touch to enter STAND-BY mode, touch again to run at medium speed level for 20s. While the appliance is working, touch this switch to terminate working and turn to POWER-ON mode.



Speed control switch. Touch to run at low speed - level 10.



Speed control switch. Touch to run at medium speed - level 20.



Speed control switch. Touch to run at high speed - level 35.

30

***wave
mode**

Wave mode (if applicable)

Touch to blend for 30s at auto wave mode (shifting between low & high speed in turn).

When this function is activated, timer and speed can't be mode adjusted.

Touch " ► " to terminate working or wait for counting down 30s to stop.

45

Timer (45s)

Touch to set 45s counting down time, then touch speed control switch to start working, will stop after 45s, or terminate working by touching power switch.

While working, speed and time can be adjusted.

90

Timer (90s)

Touch to set 90s counting down time, then touch speed control switch to start working, will stop after 90s, or terminate working by touching power switch.

While working, speed and time can be adjusted.



Pulse switch

press and hold to blend at full speed, release to stop.

- In order for longer service time of the motor, do not exceed 2 minutes when running at Max power, then turn off the appliance for 2 min. Do not overloading.
- Switch off the motor and wait until the motor comes to a complete stop before removing the jar.
- If the appliance is equipped with magnet switch on the noise cover, motor will automatically shut down when the cover is opened.
- Unplug the appliance from the outlet when not in use.

CLEANING AND MAINTENANCE

- Always remove the plug from mains before cleaning the appliance.
- Beware: Never immerse the appliance in water or any other liquid!
- Clean the outside of the appliance with a damp cloth (water and a mild detergent).
- Never use aggressive cleaning agents and/or abrasives. Do not use any sharp and/or pointed objects. Do not use petrol or solvents! Clean with a damp cloth and detergent if necessary.
- Do not use abrasive materials.
- Never immerse the jar in water or any other liquid! The jar must be cleaned, rinsed and dried immediately after each use.

MIXING CUP CLEANING PROCEDURE

- Pour water and a mild detergent into the jar.
- Place the lid onto the jar.
- Place the jar on to the motor unit.
- Switch the motor unit on at full speed for 10-20 seconds.
- Switch off the motor unit.
- Remove the jar from the motor unit.
- Rinse the jar thoroughly with clean water.
- Dry the in-side and outside of the jar.
- Store the jar upside down.
- The jar is NOT dishwasher proof!
- The underside of the jar may never come into contact with any liquid!

MIXING CUP CLEANING PROCEDURE

- Pour water and a mild detergent into the jar.
- Place the lid onto the jar.
- Place the jar on to the motor unit.
- Switch the motor unit on at full speed for 10-20 seconds.
- Switch off the motor unit.
- Remove the jar from the motor unit.
- Rinse the jar thoroughly with clean water.
- Dry the in-side and outside of the jar.
- Store the jar upside down.
- The jar is NOT dishwasher proof!
- The underside of the jar may never come into contact with any liquid!

WARRANTY

We hereby warranty our Heavy Duty Blender model Minimex Cyclone 1 (MCC1) in a period of 1 (one) year (Motor Warranty 2 years).

Warranty Conditions

The warranty cover product defective and workmanship . Users must properly use and maintain following the instructions manual..

Warranty exceptions

We disclaims all responsibility for incidental or consequential damage caused by use of this appliance This warranty will be void if customers.

- lead to a misunderstanding of the purpose of the design, such as using product in a commercial use.
- Use the wrong way or not used as described in the instruction manual.
- no maintenance as recommended in the instruction manual.

Customer right for product warranty

The warranty is effective on the date specified in the warranty card , invoice or receipt as proof of purchase.

Determination of defective product

The company will inspect the false or defective of the product and decide that the defective of the product is in warranty or not. The decision is solely the rights of the company. If the product proved to be defected and covered by warranty, company will be responsible for parts and labor to repair and deliver the product to customers' house. Customers do not have to pay any fee.If the company considers that it must change its products to customers, but the same model of product is not available, the company will determine an appropriate version of the product to be replaced.

Returns of Product

If customer purchases to be dissatisfy. Customer could return the product within 15 days after purchasing date only if the product is completely perfect packaging and has not been used before. Customers must present proof of purchase to return the product at the store of purchase only.

Service Center

If customer need service or information, customer can contact our Minimex Service Center

Service Center : Tel. 02-493-6565, LineOA : @minimex_service

E-mail : SERVICE_minimex@penk.co.th

ENVIRONMENT FRIENDLY DISPOSAL

Please dispose of old machines in an environmentally neutral way.

Old machines contain valuable materials which should be salvaged for recycling.

Please therefore dispose of old machines via your regional collection system



MINIMEX

HEAVY DUTY BLENDER

DISTRIBUTOR

จัดจำหน่ายโดย

บริษัท เพ็น เค อินเตอร์เทรดดิ้ง จำกัด

อาคาร พี.บี. ทาวเวอร์ ชั้นที่ 16 เลขที่ 1000/63-64

ถนนสุขุมวิท 71 แขวงคลองตันเหนือ เขตวัฒนา กรุงเทพฯ 10110

หมายเลขโทรศัพท์ 02-493-6565 แฟกซ์ 02-391-1141

ศูนย์บริการ minimex 02-493-6565